






915c Syntiro

Available to buy from www.M2Cshop.com

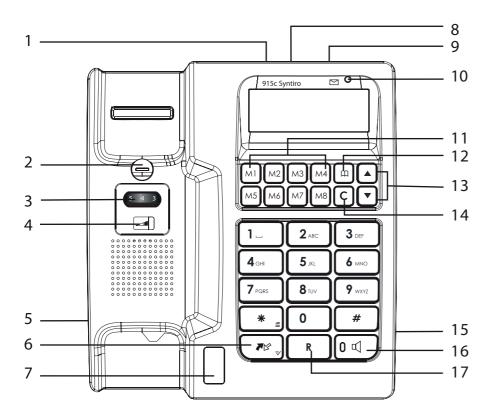

English

- 1. Vibrator socket
- 2. Hanger Hook for wall mounting
- 3. Handset volume
- 4. Volume boost
- 5. Handset tone
- 6. Call memory / OK
- 7. Ringer indicator
- 8. Ringer indicator ON/OFF
- 9. Ring volume

- 10. New call indicator
- 11. Speed dial keys
- 12. Phone book
- 13. UP/DOWN
- 14. Delete
- 15. Speaker volume
- 16. Speakerphone
- 17. Recall (R key)

English

Available to buy from www.M2Cshop.com Description

Doro 915c Syntiro

This product can be used as a desktop or wall-mounted telephone. Handset tone control, volume boost, enhanced ring volume and visual call indication make the telephone well suited for people with hearing difficulties.

The extra-large keypad and easy to read display with large characters make the telephone easy to use even with impaired eyesight.

The built-in phonebook can store up to 30 names and numbers. Eight one touch memory keys can be programmed for frequently used numbers or emergency numbers. A call memory logs the 15 most recently incoming and outgoing calls.

A speakerphone function allows you to talk hands-free with the simple press of a button.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid
 can contain substances that corrode the electronic circuits. If the unit gets wet,
 you should remove the battery and allow the unit to dry completely before you
 replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

The advice above applies to the unit, battery, mains adapter and other accessories. If the telephone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Installation

Connection

- 1. Connect the curly cord to the handset and to the socket marked on the telephone.
- 2. Connect the telephone line cord to a network wall socket and to the socket on the back of the telephone.
- 3. Connect the mains adapter to the mains power wall socket and to the DC 9V socket on the telephone.
- 4. Lift the handset and listen for the dial tone. IMPORTANT: Use the telephone line cord supplied, an existing line cord from a previous phone may not be compatible

Batteries

Four AAA alkaline batteries are needed as backup for the call memory and speakerphone.

When BATT. LOW is displayed, replace all 4 batteries. Use only AAA alkaline batteries of good quality (not included).

Note! Before installing or changing the batteries, make sure that the telephone is not connected to the telephone network.

- 1. Remove the battery cover and insert the batteries ensuring correct battery polarity is observed.
- 2. Replace the battery cover and reconnect the telephone line cord.

Basic setup

Before using the telephone the first time, the following basic settings should be made.

After confirming a setting, the next setting is automatically displayed. To skip to the next

The phone will return to standby mode after 30 seconds of inactivity or when pressing C.

On first setup the display will show 00:00.

- 1. Press and hold * for about 5 seconds until the hour flashes.
- 2. Use \triangle / ∇ to change the value and
- 3. Repeat step 2 to set the minutes, day and Available to buy from www.M2Cshop.com

ENGLISH is displayed.

Use Δ / ∇ to select the desired language, then confirm with \mathbb{Z}_{2} .

-2- CONTRAST

Use Δ / ∇ to set the display contrast setting (1–4), and confirm with $\nearrow \nearrow$.

Use \triangle / ∇ to set key tone ON/OFF, and confirm with \mathbb{Z}_{2} .

-100- FLASH

Use Δ / ∇ to set the flash key time (100/300/600 ms) and confirm with $\nearrow \nearrow \nearrow$.

The standard setting is 100 for most countries, 300 for France/Portugal, 600 for New Zealand.

LED OFF

Use \triangle / ∇ to enable/disable the LED indicator for new calls, and confirm with \textstyle \(\).

Use \triangle / ∇ to select either tone or pulse dialling mode, and confirm with \mathbb{Z}_{2} .

If unsure of which mode to use, select TONE as this works in most locations.

-1-RING TYPE

Use \triangle / ∇ to select one of 3 ring tones,

Basic setup is now complete

Wall mounting

The telephone can be wall mounted using an optional wall mount bracket. The wall mount bracket is available as an accessory, part number WB200/300 in white or black.

- 1. Fix the wall mount bracket on the back of the telephone.
- 2. Secure two screws, vertically positioned 83 mm apart.
- 3. Activate the hanging peg (located by the hook switch) by rotating it 180 degrees.

Available to buy from www.M2Cshop.com

Making a call

Normal dialling

- 1. Lift the handset.
- 2. Dial the number. Hang up the handset to terminate the call.

Speakerphone

Note!

The speakerphone only works when batteries are installed.

- 2. Dial the number. Press ♥ again to terminate the call.

Lift the handset to switch from speaker to handset during a call.

Pre-dialling

- 1. Enter the number. Press **C** to delete the last entered digit.

Quick redial

- 1. Lift the handset or press

 ✓.
- 2. Press to redial the last dialled number.

Dialling numbers in the call memory

- 1. Press to display the most recent call.
- 2. Use Δ / ∇ to scroll through the last 15 incoming and outgoing calls.
 - = Incoming call
 = Outgoing call

Speed dial (one-touch dialling)

- Press one of the speed dialling keys M1-M8. The stored telephone number is displayed.

Dialling numbers in the phone book

- 1. Press \square to open the phone book.
- 2. Use △ / ▼ to browse through the phone book, or enter the first character in the name to quickly find an entry (see *Keypad characters*).
- 3. Lift the handset or press \triangleleft to dial.

Answering

Lift the handset to answer an incoming call, or press \square to answer using the speakerphone.

Volume control

The speaker volume control is located on the right side of the telephone.

The handset volume control is located under the handset.

Ring volume 🗯 ... 💂

Ring volume can be set to HIGH/LOW/OFF with a switch on the back of the telephone.

Available to buy from www M2Cs op.con Additional functions

Phone book

The phone book can store up to 30 entries. When the memory is full, ----100% is displayed.

Storing numbers in the phone book

- 1. Press and hold \square until a blinking cursor is shown.
- Enter a telephone number (up to 22 digits). Use △/▼ to move the cursor and C to erase if needed. Use to insert a pause in the number.
- Press to confirm. A blinking cursor will be shown on the second line on the display.
- 4. Enter a name (up to 9 characters) for the number to be stored.
- 5. Press to confirm. OK is now displayed.
- 6. Repeat steps 1–5 to store another number, or press and hold **C** to exit.

Deleting numbers from the phone book

- 1. Press \(\Omega\) to open the phone book.
- 2. Use \triangle/∇ to browse through the phone book, or enter the first character to quickly find an entry.
- 3. Press and hold **C** to delete the entry.

Editing numbers in the phone book

- 1. Press \square to open the phone book.
- 2. Use \triangle/∇ to browse through the phone book, or enter the first character to quickly find an entry.
- Press and hold
 until the blinking cursor appears.
- Use △/▼ to move the cursor, and use
 C and the keypad to erase and enter new data
- 5. Press to confirm. The cursor will move to the second line.
- 6. Repeat step 4 to edit the name/ description.
- 7. Press $\nearrow \nearrow \checkmark$ to confirm. **OK** is displayed.

Speed dial

The telephone has 8 speed dialling keys that can be used for numbers that are called frequently, or for emergency numbers.

Storing speed dial numbers

- 1. Press and hold one of the speed dialling keys **M1-M8** until a blinking cursor is shown on the first line on the display.
- 2. Enter a telephone number (up to 22 digits) using the keypad. Use △/▼ to move the cursor and ℂ to erase if needed.

 Use

 to insert a pause in the number.
- Press to confirm. A blinking cursor will be shown on the second line on the display.
- 4. Enter a name (up to 9 characters) for the number to be stored.
- 5. Press to confirm. OK is displayed.
- 6. Repeat steps 1–5 to store numbers for the other speed dialling keys.

Deleting speed dial numbers

Speed dial numbers can not be deleted, they can only be replaced by storing a new number.

Caller ID and call memory

Caller ID allows you to see who is calling before you answer and to see who has called in your absence.

Note!

The Caller ID function must be subscribed. Please contact your network operator for more information.

The call memory will store the last 15 incoming and 15 outgoing calls. On the display, incoming (answered and unanswered) calls are indicated with $\space{1mu}$ and outgoing calls with $\space{1mu}$.

If the Call Indicator function is active, a blinking light indicates that an unanswered call has been received since the call memory was last checked.

Available to buy from www.M2Cshop.com Browsing the call memory Volume Boost

- the call memory. The number and time of each call will be displayed. For calls older than 24 hours, the date of the call is displayed instead of the time.
- 2. Press **C** to exit the call memory.

Deleting numbers from the call memory

- 1. Press $\nearrow \nearrow$ then \triangle / ∇ to scroll through the call memory.
- 2. Press and hold C to delete the selected entry.

Copying call memory entries to the phone book

- 1. Press $\nearrow\!\!\!\!/$ then \triangle / abla to scroll through the call memory.
- 2. Press and hold **★** until **OK** is displayed. The selected number has now been saved to the phone book.

Call timer

The display shows the current time when in standby mode. During a call the display will show a call timer instead, indicating the duration of the call. The call duration is displayed for 5 seconds after the call is terminated.

Recall key (R)

Press the **R** key followed by the extension number to transfer a call when connected to a PBX system.

Additional network services may be accessible by using the \mathbb{R} , \times and # keys. Please contact your network operator for more information about the available network services.

Volume Boost


The handset volume can be raised another 30 dB by pressing the Volume Boost key while talking. The LED indicator on the key will light up.

Press the key again or terminate the call to turn off Volume Boost.

Warning!

The handset volume can be very loud with this setting. Volume boost should only be used by persons with impaired hearing.

Handset tone $\sqrt{2}$

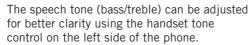

PLEASE NOTE! Only works when the powerful amplification (Boost) is active.

Ringer indicator

The Ringer indicator lights up on an incoming call. The indicator is enabled/disabled with a switch on the back of the telephone.

External alert ((0))

An external alert device such as a vibrator can be connected to the vibrator socket on the back of the telephone.

Hearing aid

This telephone is hearing aid compatible. Select the T mode on your hearing aid to enable this feature.

Available to buy from www.M2Cshop.com Warranty and technical data

This product is guaranteed for a period of 24 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the device during a thunderstorm.

Use only AAA Alkaline batteries of good quality.

NOTE! This guarantee does not affect your legal (statutory) rights under your applicable national laws relating to the sale of consumer products.

Specifications

Size: 170 mm x 190 mm x 60 mm

Weight: 750 g (including batteries)

Battery: 4 x 1.5 V AAA Alkaline batteries

Declaration of Conformity

Doro hereby declares that **Doro 915c Syntiro** conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2002/95/EC (RoHS).

A copy of the Declaration of Conformity is available at www.doro.com/dofc

UK

Technical support is available by email on tech@doro-uk.com

Premium rate telephone number: 0905 895 0854, calls cost 50 pence per minute (price correct at the time of publication). Open Monday to Friday, 9.00AM until 5.00PM.

You can also contact us in writing (regarding any Spares or Technical query):

Customer Services

Doro UK Ltd 1 High Street Chalfont St Peter Buckinghamshire SL9 9QE

Further contact details are available on our website: www.doro-uk.com.