


# Style 1210 Answering machine operation

## Answering machine shortcut buttons

Press and hold a TAM function key to activate the TAM function with only one touch, i.e. press and hold **[2]**, for 2 seconds to activate the TAM Play Messages function.

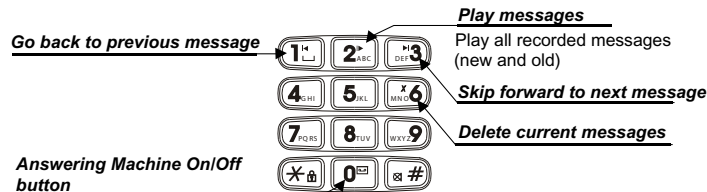

## Full Answering machine operation by MENU

Turn the answering machine on or off.

1. Press MENU button to enter menu selection.
2. Press the UP/DOWN button to select "TAM" function and then press "OK" button to select.
3. Press the UP/DOWN button to select "ANS ON/OFF" function and then press "OK" button to select.
4. Press UP/DOWN button to select "ON" or "OFF" then press "OK" to confirm.
5. A confirmation beep is played. press "HANG UP/C" button to go back to idle mode.

\* You can also use the short-cut button for this function. In idle mode, press and hold the 0 button for 2 seconds, then press the "DOWN" button to select ON or OFF, and press the PHONE/OK button to confirm.

### The outgoing message

The Style 1210 is supplied with two predefined outgoing messages (OGM). One is for use in ANSWER ONLY mode and one for use in Answer & Record mode.

\* Both of these can be replaced with your own pre-recorded message if you prefer.

\* To pre-record an outgoing message you must first follow the procedure to set the answer mode.

To set the answer mode and record a new outgoing message:

After setting the answer mode you can choose between using a predefined outgoing message or using a personalised one that you have recorded. If you select Personalised you will then need to record a new message.

1. Press the MENU button to enter menu selection.
2. Press the UP/DOWN button to find "TAM" function and then press "OK" button to select.
3. Press the DOWN button to find "ANS MODE" and then press the "OK" button to select. Press the DOWN button to select "ANS ONLY" or "ANS & REC" and then press the "OK" to confirm. (NOTE: if Answer Only mode is selected, the caller will be able to listen to your OGM, but will not be able to leave a message.)  
Press the DOWN button to find "ANS MODE" and then press "OK" button to select. Press the DOWN button to select "ANS ONLY" or "ANS & REC" and then press "OK" to confirm.
4. Press the DOWN button to find the "PERSON RLIS" then press "OK" button.
5. Press the DOWN button to find the "RECORD MSG" then press "OK" button.  
When a beep is heard, speak into the microphone to record your message.
6. Press the "OK" button to end the recording, your message will play back automatically.
7. Press the "HANG UP/C" button to go back to idle mode.

To record a memo:

1. Press the MENU button to enter menu selection.
2. Press the UP/DOWN button to find "TAM" function and then press "OK" button to select.
3. Press the DOWN button to find the "REC MEMO" then press the "OK" button  
When a beep is heard, speak into the microphone to record your message.
4. Press the "OK" button to end the recording.
5. Press the "HANG UP/C" button to go back to idle mode.






To play back recorded messages:

1. Press the MENU button to enter menu selection.
2. Press the UP/DOWN button to find the "TAM" function and then press "OK" button twice to play the message.
3. Press the HANG UP/C button to end messages play/back.
4. Press "HANG UP/C" button to go back to idle mode.  
\* You can also use the short-cut button for this function. In idle mode, press and hold the 2 button for 2 seconds to start the message playback.

To delete all stored messages:

1. Press the MENU button and UP button to find "TAM" function and then press "OK" button to select.
2. Press the "DOWN" button to find the "DELETE ALL" function and then press button twice to delete all messages.
3. Press "HANG UP/C" button to go back to idle mode.






To activate remote control:

1.  Press MENU button to enter menu selection.
2.  Press UP/DOWN to find "TAM" function and then press "OK" to select.
3.  Press DOWN button to find "SETTINGS" then press "OK" button.
4.  Press DOWN button to find "REM ACCESS" then press "OK" to select.  
Press DOWN button to select "ACTIVATED" or "DEACTIVATE", and press PHONE/OK to confirm.
5.  Press "HANG UP/C" button to go back to idle mode.

To play messages remotely:






1. Using a tone - dialling (DTMF) telephone. Call your telephone number and wait for the answering machine to answer.
2. Within 4 seconds enter "#" and your PIN code (the default code is 0000).  
The messages will start playing.

You can use the telephone button as follows:



1.  Press "1" to go back to the previous messages.
2.  Press "2" to play all record messages (new and old) or play the current message again.
3.  Press "3" to skip forward to the next message.
4.  Press "6" to delete current message.
5.  Press "0" to turn the answering machine on or off.

If messages are not playing and you stop pressing the buttons your Style 1210 will wait 15 seconds and then hang up.

To set the Ring delay

1.  Press MENU button to enter menu selection.  
 Press UP/DOWN to find "TAM" function and then press "OK" to select
2.  Press UP/DOWN to find the "SETTINGS" function.
3.  Press "OK" button twice  
 Press UP/DOWN to select ring delay ( 3 Ring~ 8 Ring, Toll SAVER)

Note: If you select Toll Saver, the telephone will be answered after 5 rings if you have no new messages, or after 3 rings if there is a new message recorded.

4.  Press "OK" button to confirm
5.  Press "HANG UP/C" button to go back to idle mode

Default settings

This option returns the answering machine to its default settings

\* answering machine--- Answer & Record mode on  
Predefined OGM selected

\* Recorded messages or memos---not erased

\* Remote PIN---0000

\* Rings to answer---5

\* Remote---Deactivated

\* ANS mode---on