


English

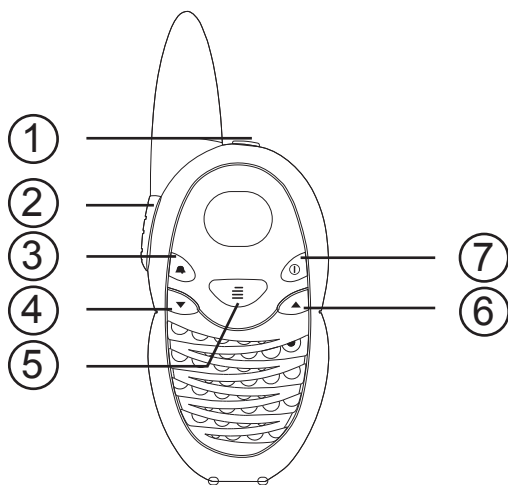

- | | |
|-----------------------------|-----------------|
| 1 Headset socket | 4 DOWN |
| 2 Push to Talk (PTT) button | 5 Menu button |
| 3 Call button | 6 UP |
| | 7 On/Off button |

Area of use

The handset is intended for both indoor and outdoor use, it is NOT resistant to rain, water, rough or other careless treatment.
In ideal conditions ie: line of sight with no obstructions between handset/s and monitor, the range can be up to 6 km.

Batteries

1. Remove the belt clip by lifting the small locating tab and pushing the clip upwards.
2. Before removing the battery cover release the locking clasp at the base of the handset.
3. Insert the rechargeable battery pack ensuring correct battery polarity is observed.
4. Refit the battery cover and belt clip. Charge the handset for 24 hours before use.



Please note!

The rechargeable battery pack has been installed the handset must be charged for 24 hours before use.

Charging

Connect the mains adapter to the socket on the rear of the charging stand and to an electrical wall socket. Place the handset in the charger with the buttons facing out.

Battery indicator and charging

The symbol  in the display indicates when the batteries require charging. The indicator has three segments which disappear as the battery charge decreases, and will flash when the battery is running low. Charge the equipment as soon as possible when the indicator flashes!
The battery indicator will show  when charging is complete (approximately 10 hours/initially 24 hours). Fully-charged batteries will last for approximately 85 hours in standby or 3.5 hours operational time. These times apply at normal room temperature.

Please note!

Never charge ordinary (non-rechargeable) batteries in the handset, since this will ruin the equipment. The guarantee does not cover this type of damage. The equipment must be charged initially for 24 hours before use during which time the handset cannot be used. The recharging system used in this model may result in it becoming warm. This is normal and will not damage the equipment.

Important!

Please note when programming all references to press = to press and then immediately release the button.

Switching the Handset on/off

Press and hold ① for a few seconds to turn the handset on or off.

To communicate



1. Make sure that all handsets (and monitor unit) are set to the same channel and transfer code. See below.
2. Press and hold **PTT** (Push To Talk) to speak.

Please note!

If you are unable to communicate it may be because different channels or transfer codes have been selected, the battery is running low or the units are too far apart.

Channel selection

All UHF/CB radio equipment share the available designated channels. If the chosen channel is in use select an alternate channel, the selected channel number will be displayed in standby mode.

1. Press . The current selected channel flashes.
2. Select the desired channel using .
3. Press **PTT**.



Monitor function

The monitor function can be used in weak signal areas to locate any other signal being transmitted.

1. Press  and  at the same time.
2. To stop monitoring press .


 

Transfer code selection

There are 38 transfer codes available which can be used to filter out unwanted signals. However, your conversation may still be overheard irrespective of which code is used. To enable communication between handsets (as well as monitor to handset), the same transfer code must be used on all units. In order to communicate with equipment that cannot select a code, enter code 0.

1. Press  repeatedly until the small digits in the top right hand corner of the display flash.
2. Scroll to the desired transfer code using .
3. Press **PTT** to confirm.

Scanning


You can scan all available channels to locate any signals being transmitted. Once a signal has been located the display will show the channel number, and a signal will be heard for a few seconds. You can press **PTT** to stop at the located channel. Please note: while searching battery consumption will be significantly higher than normal.



1. Press  and  at the same time. The unit will start searching.
2. To stop scanning press .

Voice control (VOX)

This handset can be used without having to press the **PTT** button to transmit. By setting the correct level, the handset can automatically determine when you are speaking.




Test different settings until the sensitivity selected is acceptable. Please note that however accurate your setting there is always a small risk that increased noise from the surroundings may activate the transmitter, this may result in the initial word being unclear. The transmitter will shut off two seconds after you have finished speaking.

VOX will be displayed while the function is active. If the handset transmits by itself the sensitivity is set too high and will need to be adjusted. Press  to be able to temporarily interrupt and change the setting.

1. Press  repeatedly until **VOX** is displayed.
2. Scroll to the desired setting using  (0F =off, 1=least sensitive....3=most sensitive).
3. Press **PTT** to confirm.


 

Call melody

You can select different call melodies (0F =off).

1. Press  repeatedly until  is displayed.
2. Scroll to the desired melody (1 -5) using .
3. Press **PTT** to confirm.




Termination (Roger) tone

If selected a beep tone will be heard when you release the **PTT** button. This can be used as a reminder to the other person that you have finished talking and are waiting for a response.

1. Press  repeatedly until  is displayed.
2. Scroll to the desired setting using  (0F =off, 0n=on).
3. Press **PTT** to confirm.





Key tone

If selected a tone will be heard when the handset buttons are pressed, this can be switched on or off.



1. Press  repeatedly until  is displayed.
2. Scroll to the desired setting using  (0F =off, 0n=on).
3. Press **PTT** to confirm.



Searching two channels

You can enter a different channel for simultaneous listening while using the selected operating channel.

1. Press  repeatedly until **DCM** is displayed.
2. Scroll to the desired setting using  (0F =off). Press .
3. Scroll to the desired transfer code using . Press **PTT**.
4. Press **PTT** to confirm.

Key lock

This function locks buttons  and  to prevent unintentional usage.

1. To activate the key lock press  until the display shows the key symbol.
2. To deactivate the key lock press and hold  until the key symbol disappears.

Declaration of conformity

Doro declares that the apparatus Doro AirLuba wt88 complies with the essential requirements and other relevant positions of Directive 1999/5/EC, 2002/95/EC. A copy of the Declaration of Conformity can be found at www.doro.com/dofc

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. Proof of purchase is required for any service or support required during the guarantee period. This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, not reasonably maintained or any other circumstances on the purchaser's part. Furthermore, this guarantee shall not apply to a faults caused by the use of poor quality batteries, battery leakage, corrosion or similar events related to non DORO batteries. This guarantee does not in any way affect your statutory rights.