

# T24 KIM Installation



# T24 KIM Installation

# T24 KIM Installation

# T24 KIM Installation

- # T24 KIM Installation



# T24 KIM Installation

- # T24 KIM Installation



- # T24 KIM Installation



# T24 KIM Installation

- # T24 KIM Installation



- # T24 KIM Installation

# T24 KIM Installation

- # T24 KIM Installation



# T24 KIM Installation

- # T24 KIM Installation



- # T24 KIM Installation



# T24 KIM Installation

- # T24 KIM Installation



- # T24 KIM Installation




- # T24 KIM Installation

## T24 KIM initialization

KIM indicators turn on and flash during the first ten seconds after powering up. It can take up to five minutes for the KIM to initialize.

The default setting for the programmable memory buttons on the KIM is blank. The side illustration shows the button number assignment on a KIM.

## KIM button number assignment

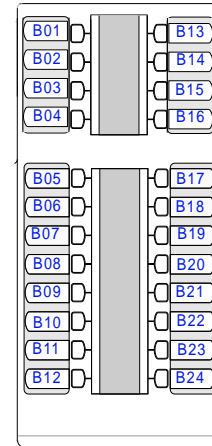


**Troubleshooting Tip:** An Addon Error message appears on the T7316E telephone display and an error tone is generated when there is a connector problem with a KIM. Check that the KIM cord is properly inserted into the accessory connector port of the T7316E telephone.

## T24 KIM coldstarts

Internal autodial numbers can be automatically assigned to the programmable memory buttons on the KIM when a coldstart is performed. Internal autodial numbers are assigned in ascending order starting on the top left button (button 01) on the KIM. A coldstart must be performed during the first ten seconds after powering up a KIM.

### To coldstart an individual KIM


- 1 Unplug the T7316E telephone line cord, then reconnect it to power up.
- 2 While the indicators are flashing on the individual KIM, simultaneously press the top two and the bottom two buttons on the lower button set of the KIM, as shown in the illustration  
(buttons: 05, 12, 17 and 24).

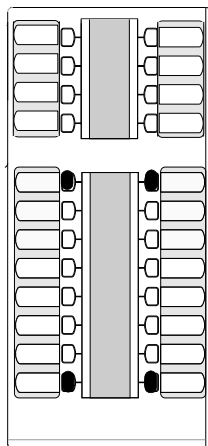

- 3 At the beginning of the coldstart, indicators beside each KIM button will briefly flash starting at the bottom right button (button 24).
- 4 When the KIM coldstart is completed, the T7316E telephone display automatically returns to the time and date.

### To coldstart all KIMs

- 1 Unplug the T7316E telephone line cord, then reconnect it to power up.
- 2 While the indicators are flashing on the first KIM (next to the telephone), simultaneously press the top two buttons and the bottom two buttons on the KIM, as shown in the illustration.  
(buttons: 01, 12, 13 and 24)

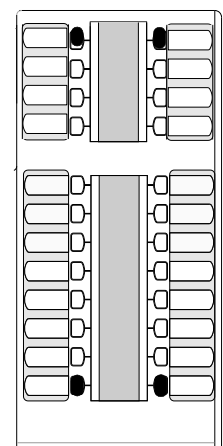

- 3 At the beginning of the coldstart, indicators beside each KIM button will briefly flash starting at the bottom right button (button 24).
- 4 When the KIM coldstart is completed, the T7316E telephone display automatically returns to the time and date.