



USER GUIDE

Veva 1720
Veva 1720 Twin
Veva 1720 Triple
Digital Cordless Telephone
with Answer Machine

 
 
Binatone Helpline (for UK only)
Monday to Friday from 9:00am to 5:00pm
Tel: 0845 345 9677
**Please note that all calls are charged at local rate
Or visit our website: www.binatonetelecom.com

**THIS EQUIPMENT IS NOT DESIGNED FOR MAKING
EMERGENCY TELEPHONE CALLS WHEN THE POWER
FAILS. ALTERNATIVE ARRANGEMENTS SHOULD BE
MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.**

Before operating this set,
please read these instructions carefully.

2 INSTALLING YOUR PHONE

Connecting the base station

- 1) Plug the power supply  and line cord  into the base station.
- 2) Plug the power adapter into a 230Vac, 50Hz mains socket, and the line cord into your telephone line socket.
- 3) Always use the cables provided in the box.
Warning: Use only the provided adaptor, using other power supplies may cause a hazard.
Warning: Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket. Never try to lengthen the mains power cable.
Note: The base unit needs mains power for normal operation, not just for charging the handset batteries.

Installing and charging the batteries

- 1) Place the 2 supplied batteries into the battery compartment with the polarity markings as shown. Use only the NiMH rechargeable battery type provided.
- 2) Position the battery compartment cover over the batteries and slide up to click into place.
- 3) Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.

If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.

In a home with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to. If you need more broadband micro-filters, contact your broadband supplier.

 
TECHNICAL DETAILS

 
Standard	Digital Enhanced Cordless Telecommunication (DECT)
Frequency range	1.88 to 1.9 GHz (bandwidth = 20 MHz)
Channel bandwidth	1.728 MHz
Operating range	Up to 300m outdoors; Up to 50m indoors
Operating time	Standby: 100 hours, Talking: 10 hours Battery charge time: 15 hours
Temperature range	Operating 0°C to 40°C, Storage -20°C to 60°C
Electrical power	Charger unit: TenPao - S004LB0600030 / S004LV0600030 - input 100-240VAC 50/60Hz 150mA, output 6VDC 300mA Salcomp - VT1001 / VT1000 input 100-240VAC 50/60Hz 150mA, output 6VDC 300mA Base unit: TenPao - S004LB0600045 / S004LV0600045 - input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Salcomp - VT0901 / VT0900 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Battery information as below: GPI - VTHC043C00, Type NiMH (Rechargeable battery) Voltage Rating 400mAh, 2 X 1.2V AAA Size BYD- H-AA4A00A, Type NiMH (Rechargeable battery) Voltage Rating 400mAh, 2 X 1.2V AAA Size CORUN- NI-MHAAJ400, Type NiMH (Rechargeable battery) Voltage Rating 400mAh, 2 X 1.2V AAA Size

Caution

Risk of explosion if battery is replaced by an incorrect type
Dispose of used batteries according to the instructions.

Port specification

The  port (connected to the mains power supply) is a SELV port with respect to EN41003.

The  port (connected to the telephoneline) is a TNV port with respect to EN41003.

CLEANING AND CARE

Do not clean any part of your phone system with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.

When necessary, clean it with a damp cloth.

Keep your phone system away from hot, humid conditions or strong sunlight, and don't let it get wet.

Every effort has been made to ensure high standards of reliability for your phone system. However, if something does go wrong, please do not try to repair it yourself consult your supplier or the Helpline.

TABLE OF CONTENTS

1 IMPORTANT SAFETY INSTRUCTIONS	3
2 INSTALLING YOUR PHONE	5
2.1 CONNECTING THE BASE STATION	5
2.2 INSTALLING AND CHARGING THE BATTERIES	5
3 GETTING TO KNOW YOUR PHONE	6
3.1 HANDSET OVERVIEW	6
3.2 BASE STATION WITH TELEPHONE ANSWERING MACHINE (TAM) CONTROL	7
3.3 DISPLAY ICONS AND SYMBOLS	7
3.4 MENU STRUCTURE	8
3.5 TEXT AND DIGIT ENTRY TABLE	9
3.5.1 CHARACTER SET	9
4 USING YOUR PHONE	10
4.1 MAKE A CALL	10
4.1.1 PREPARATORY DIALLING	10
4.1.2 DIRECT DIALLING	10
4.1.3 CALL FROM THE PHONEBOOK	10
4.1.4 CALL FROM THE CALL LIST (ONLY AVAILABLE WITH CALLER DISPLAY)	10
4.1.5 CALL FROM THE REDIAL LIST	10
4.1.6 CALL TIMER	10
4.2 ANSWER A CALL	11
4.3 END A CALL	11
4.4 ADJUST EARPIECE VOLUME	11
4.5 MUTE A CALL	11
4.6 TURN OFF HANDSET RINGER	11
4.7 TURN ON THE KEYPAD LOCK	11
4.8 REDIAL THE LAST NUMBER	11
4.8.1 REDIAL A NUMBER FROM THE REDIAL LIST	11
4.8.2 STORE A REDIAL NUMBER INTO THE PHONEBOOK	12
4.8.3 DELETE A REDIAL NUMBER	12
4.8.4 DELETE ALL REDIAL LIST ENTRIES	12
4.9 FIND THE HANDSET	12
4.10 MAKE AN INTERNAL CALL (FOR MULTI-HANDSET VERSIONS ONLY)	12
4.10.1 INTERCOM ANOTHER HANDSET	13
4.10.2 CALL ALL HANDSETS	13
4.10.3 TRANSFER AN INTERNAL CALL TO ANOTHER HANDSET	13
4.10.4 MAKE A 3-WAY CONFERENCE CALL	13
5 PRIVATE PHONEBOOK	14
5.1 ADD A NEW PHONEBOOK ENTRY	14
5.2 SEARCH A PHONEBOOK ENTRY	14
5.3 VIEW A PHONEBOOK ENTRY	14
5.4 EDIT A PHONEBOOK ENTRY	15
5.5 DELETE A PHONEBOOK ENTRY	15
5.6 DELETE ALL PHONEBOOK ENTRIES	15
5.7 CHECK THE PHONEBOOK USAGE	15
6 CALLER DISPLAY (NETWORK DEPENDENT)	17
6.1 VIEW THE CALL LIST	17
6.2 STORE A CALL LIST NUMBER INTO THE PHONEBOOK	17
6.3 DELETE AN ENTRY IN THE CALL LIST	17
6.4 DELETE ALL CALL LIST ENTRIES	18
7 PHONE SETTINGS	18
7.1 DATE AND TIME SETTINGS	18
7.1.1 CHANGE THE DATE FORMAT	18
7.1.2 HANGE THE TIME FORMAT	18
7.1.3 SET THE TIME	18
7.1.4 SET THE DATE	19
7.2 ALARM SETTINGS	19
7.2.1 TURN ON/OFF THE ALARM	19
7.2.2 SET THE ALARM TIME	19
7.3 HANDSET SETTINGS	20
7.3.1 SET THE RINGER MELODY FOR INTERNAL CALLS	20
7.3.2 SET THE RINGER MELODY FOR EXTERNAL CALLS	20
7.3.3 SET THE RINGER VOLUME	20
7.3.4 SET ALERT TONES	21
7.3.5 SET THE HANDSET LANGUAGE	21
7.3.6 RENAME THE HANDSET	21
7.3.7 CHOOSE THE INFORMATION TO BE DISPLAYED IN IDLE	21
7.3.8 SET THE AUTO ANSWER	21
7.4 BASE SETTINGS	21
7.4.1 DE-REGISTER A HANDSET	21
7.4.2 CHANGE THE DIAL MODE	22
7.4.3 CHANGE THE FLASH (RECALL) TIME	22
7.4.4 CHANGE THE SYSTEM PIN CODE	22
7.5 REGISTRATION	23
7.6 RESET YOUR PHONE	23
8 ANSWERING MACHINE	24
8.1 TURN OFF/OFF THE ANSWERING MACHINE	24
8.2 LISTEN TO THE MESSAGES IN THE ANSWERING MACHINE	24
8.3 DELETE ALL MESSAGES IN THE ANSWERING MACHINE	25
8.4 RECORD MEMO	26
8.5 ANSWERING MACHINE SETTINGS	26
Remote Card	29
9 TROUBLESHOOTING	32
10 DECLARATION OF CONFORMITY	33
11 GUARANTEE AND SERVICE	34

1 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1) Read and understand all the instructions.
- 2) Follow all warnings and instructions marked on the product.
- 3) Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4) Keep your phone away from hot, humid conditions or strong sunlight, and don't let it get wet or use this product near water (for example, near a bathtub, kitchen sink, swimming pool).
- 5) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 6) Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- 7) NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
- 8) Do not use the telephone to report a gas leak in the vicinity of the leak.
- 9) Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities from such non-compliance.
- 10) The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
- 11) Do not use third party charging bays. Damage may be caused to the batteries.
- 12) Please ensure the batteries are inserted in the correct polarity.
- 13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

Package contents

The package contains the following items:

- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 2 AAA rechargeable batteries
- 1 User manual

Note: If you have a Twin, Triple or Quad system, you will also have the requisite extra handset(s) and batteries, and a charger pod for each extra handset.

Connection and conditions for use:

You can connect your phone to a direct exchange line (DEL) on a local exchange with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX. Do not connect as an extension to a payphone.

The ringer equivalence numbers (REN) of all equipment (phones, fax machines, modems, etc.) connected to an exchange line must not add up to more than 4, otherwise one or more of them may not ring and/or answer calls correctly. The phone has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

Handset - Base Connection

- 1) When purchased, all handsets are already registered to the base unit and should link to it when they are all powered up.
- 2) To use your cordless handset and base unit together, you must be able to establish a radio link between them. The signal between the handset and the base is in accordance with the normal standards for a DECT phone: Maximum range up to 300 metres outdoors or 50 metres indoors. Be aware that:
 - > Any large metal object, such as a refrigerator, mirror or filing cabinet, between the handset and the base unit may block the radio signal.
 - > Other solid structures, like walls, may reduce the signal strength.
 - > Other electrical equipment may cause interference and/or affect the range.
- 3) Do not place close to another telephone, a TV or audio equipment - it may cause interference.
- 4) Out of Range warning. If you hear a warning tone during a call, and/or the sound in the earpiece becomes faint or distorted, you may be going out of range of the base unit, so move nearer to the base unit within 20 seconds, otherwise the call may be cut off.

4 USING YOUR PHONE

4.1 Make a Call

4.1.1 Preparatory Dialling

Enter the phone number and press <TALK ON> to connect to the line and dial the number. When entering the number, if you make a mistake, press <C/MUTE> to delete digits.

4.1.2 Direct Dialling

Press <TALK ON> to connect to the line and then enter the phone number. (Note: if you enter a wrong digit you cannot correct it with the <C/MUTE> key.)

4.1.3 Call from the phonebook

Press <MENU/OK>, <DOWN> and then <MENU/OK> again to access the phonebook and press <UP/DOWN> to select the desired phonebook entry. Press <TALK ON> to dial out the selected phonebook entry.

Note: The alphanumeric keys provide a short-cut to find entries beginning with the corresponding letters.

4.1.4 Call from the Call List (only available with Caller Display)

Press <UP> to access the Call List and press <UP/DOWN> to select the desired Call List entry.

Press <TALK ON> to dial out the selected Call List entry.

Note: You can also access the Call List by pressing <MENU/OK> twice.

4.1.5 Call from the redial list

Press <REDIAL> to access the redial list and press <UP/DOWN> to select the desired redial number.

Press <TALK ON> to dial out the selected redial number.

4.1.6 Call timer

Your handset automatically times the duration of every call.

The call timer is displayed as soon as you answer a call or 15 seconds after dialling and remains on the screen for 5 seconds after the end of the call. It is shown in hours, minutes and seconds format (HH:MM:SS).

4.2 Answer a Call

If the handset is not on the charging cradle:

When the phone rings, press <TALK ON> to answer a call.

Note: If AUTO ANSWER is set to ON, then lifting the handset off the base or charger will answer the call automatically, and no buttons need to be pressed.

4.3 End a Call

During a call press <TALK OFF> to end the call.
OR
Put the handset on the base station or charger to end the call.

4.4 Adjust Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for the earpiece volume.

During a call:

Press <UP/DOWN> to select volume 1-5. The current setting is shown.

When you end the call, the setting will remain at the last selected level.

4.5 Mute a Call

You can talk to someone nearby without letting the caller hear you during a call. During a call:

Press <C/MUTE> to mute the microphone and "MUTED" will display on the LCD.

Your caller cannot hear you. Press <C/MUTE> again to unmute the microphone.

4.6 Turn off the Handset Ringer

In idle, press and hold <HASH#> to turn off the handset ringer. The "RINGER OFF" icon is displayed on the LCD.

Note: The display will still flash the Call icon and show CALL or the Caller Display number, when there is an incoming call, even if the ringer is turned off. To turn the ringer back on, press and hold <HASH#> again.

4.7 Turn on the Keypad Lock

In idle, press and hold <STAR/*> to turn on the keypad lock, and the "KEY LOCK" icon is displayed on the LCD.

Note: You can still use <TALK ON> to answer a call when the handset is ringing.

To turn the keypad lock off, press and hold <STAR/*> again.

4.8 Redial the last number

You can redial any of the 5 last numbers called. If you have stored a name in phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

4.8.1 Redial a Number from the Redial List

1. Press <REDIAL> to access the redial list.
Note: If the redial list entry shows a name, press <Hash/#> to view the number of this entry.

2. Press <UP/DOWN> to browse the redial list.
3. Press <TALK ON> to dial to the selected redial number.

Note: If there are no numbers in the redial list, the display shows "EMPTY".

4.8.2 Store a Redial Number into the Phonebook

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press <MENU/OK> to show ADD TO PB.
3. Press <MENU/OK> and then enter the name you want to use in the phonebook.
4. Press <MENU/OK> and then modify the number, if necessary.
5. Press <MENU/OK> to show <MELODY 1>.
6. Press <UP/DOWN> to browse the ringtone list. The respective ringtone will be played when browsing the ringtone list. (Note: the selected melody will only be played if you subscribe to Caller Display and the incoming number matches the stored number.)
7. Press <MENU/OK> to confirm, and the entry will be stored.

4.8.3 Delete a Redial Number

1. Follow Steps 1 and 2 in section 4.8.1.
 2. Press <MENU/OK> and <UP/DOWN> to select DELETE.
 3. Press <MENU/OK> to confirm, and the entry will be deleted.
- #### 4.8.4 Delete all Redial List entries
1. Follow Steps 1 and 2 in section 4.8.1.
 2. Press <MENU/OK> and <UP/DOWN> to select DELETE ALL.
 3. Press <MENU/OK> to display <CONFIRM?>.
 4. Press <MENU/OK> to confirm. All entries will be deleted and the display will show <EMPTY>.

4.9 Find the Handset

You can locate the handset by pressing <FIND> on the base station. All the handsets registered to the base will produce the paging tone and show "PAGING" on the display. You can stop the paging by pressing <TALKON> <TALK OFF> / <C/MUTE> on any handset or <FIND> on the base again.

Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.10 Make an Internal Call (Multi - handset versions only)


This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.

 
Note: If only one handset is registered to the base station, when <C/MUTE> is pressed, it will display "NOT POSSIBLE".

3.2 Base Station with Telephone Answering Machine (TAM) Control

PLAY/STOP  **▶/■**
Press to play the message
Press to stop the message playback

TAM ON/OFF
Press to turn on the answering machine.
Press again to turn off the answering machine.

FIND 
Press to find your handset.
It will ring for approximately 60 seconds




 
SKIP BACKWARD 
Press to repeat playing the current message from the beginning.
Press twice to skip back to the previous message.

SKIP FORWARD 
Press to skip the current message and play the next message.

DELETE
Press once to delete the message during playback
From idle: Press and hold to delete all the old messages.

Display Icons and Symbols
The LCD display gives you information on the current status of the telephone.



-  Steady when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
-  Steady when an intercom call is in progress. Flashes when there is an incoming internal call.
-  Indicates a call is in progress on that handset.
-  Indicates that your answering machine (TAM) is on and flashes when there is a new message.

4.10.1 Intercom Another Handset

1. In idle mode, press <C/MUTE> and all the other registered handset numbers will display, along with a "9".
2. Enter the number of the handset that you want to call, or press the <9> key to call all handsets.
3. The called handset rings and <TALK ON> must be pressed on that handset to establish the intercom call.

Note: If only two handsets are registered to the base station, pressing <C/MUTE> will call the other handset immediately.

Note: If there is an external call while you are on an intercom call, you'll hear warning beeps, and you have to end the intercom call, before you can answer the external call.

4.10.2 Call All Handsets

1. In idle mode, press <C/MUTE> and the registered handsets will display.
2. Press the <9> key to ring to all registered handsets

4.10.3 Transfer an External Call to another handset

- During an external call:
1. Press <MENU/OK> to show INTERCOM.
 2. Press <MENU/OK> to show all the other registered handset numbers, plus "9".
 3. Enter the number for the handset you want to transfer the call to.
 4. Press <TALK ON> on the called handset to establish an internal call.
 5. Press <TALK OFF> on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
 6. The external call is transferred to the called handset.

Note: If the other handset has not answered the intercom call, you can stop the intercom and return to the external call by pressing <TALK OFF>.

4.10.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two handsets (in intercom).

The three parties can share the conversation and no additional network subscription is required.


During an external call:

 
1. Follow Steps 1 to 4 in section 4.10.3.
2. Press and hold <STAR/*> on the calling handset to establish the conference call.


Either handset can exit the conference by pressing <TALK OFF>, leaving the other handset still connected to the external call.


 Indicates that the handset finger is switched off.


Steady when an alarm is set. Flashes when the alarm is sounding.

 Indicates that the keypad is locked.

 Indicates when you have a new Voice Mail message. (This is a Caller Display service and is not usually available from UK network providers.)

 Indicates when the battery is fully charging.
Whole icon flashes when the battery is charging.
Internal block icon flashes when the battery is in final charging stage.

 Indicates when the battery needs charging.
Flashes when low battery power level is detected.

 Indicates when there are more characters or numbers in front of those being displayed.

6 CALLER DISPLAY (NETWORK DEPENDENT)

This function is available if you have subscribed to the Calling Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the Call List. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry.

If the call is from someone who withheld their number, e.g. by dialling 141, **"WITHHELD"** will display.

If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, **"OUT OF AREA"** will display.

If you've got new Caller Display records, the handset will display "X NEW CALLS" in standby mode. The New Calls indication will remain until all the new call records have been viewed.

6.1 View the Call List

All received calls are saved in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a <T> icon at the centre of the bottom line of the display.

- Press <UP> to access the call list.
- OR Press <MENU/OK> to show CALL LIST and then press <MENU/OK>.
- Press <UP/DOWN> to select the desired entry.
- Press <T> to view the caller's number if applicable.
- Press <MENU/OK> <UP/DOWN> to show DETAILS, and then <MENU/OK> to display the date and time of the call. Press <MENU/OK> to go back to the previous screen.

6.2 Store a Call List Number into the Phonebook

- Follow Steps 1 and 2 in Section 6.1.
- Press <MENU/OK> and <UP/DOWN> to show **ADD TO PB**.
- Press <MENU/OK> and then enter the name.
- Press <MENU/OK> and the selected call list number is displayed.
- Edit the number if necessary.
- Press <MENU/OK> and <UP/DOWN> to select the ringtone.
- Press <MENU/OK> to store the phonebook entry and return to the calls list.

6.3 Delete an entry in the Call List

- Follow Steps 1 and 2 in Section 6.1.
- Press <MENU/OK> and <UP/DOWN> to select **DELETE**.
- Press <MENU/OK> to confirm.

6.4 Delete all Call list entries

- Follow Steps 1 and 2 in Section 6.1.
- Press <MENU/OK> and <UP/DOWN> to select **DELETE ALL**.
- Press <MENU/OK> to display <CONFIRM?>.
- Press <MENU/OK> to confirm. All entries will be deleted and the display will show <EMPTY>.

7 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

7.1 Date and Time Settings

If you subscribe to Caller Display the time and date settings will be automatically updated by the network when you receive an incoming call.

The Caller Display service only sends the month and date, not the year, so you may need to set the year.

7.1.1 Change the Date Format

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **DATE & TIME**.
- Press <MENU/OK> to show **DATE FORMAT**.
- Press <MENU/OK> and <UP/DOWN> to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
- Press <MENU/OK> to confirm.

7.1.2 Change the Time Format

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **DATE & TIME**.
- Press <MENU/OK> and <UP/DOWN> to select **TIME FORMAT**.
- Press <MENU/OK> and <UP/DOWN> to select your desired time format (**12 HR** or **24 HR**).
- Press <MENU/OK> to confirm.

7.1.3 Set the Time

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **DATE & TIME**.
- Press <MENU/OK> and <UP/DOWN> to select **SET TIME**.
- Press <MENU/OK> and then enter the time information in 24 hour format.
- Press <MENU/OK> to confirm.

Note: If the time has been set before, the current time will display, otherwise, **"HH:MM"** will display.

7.1.4 Set the Date

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **DATE & TIME**.
- Press <MENU/OK> and <UP/DOWN> to select **SET DATE**.
- Press <MENU/OK> and then enter the date information.
- in the format you set in Section 7.1.1.
- Press <MENU/OK> to confirm.

Note: If the date has been set before, the current date will display, otherwise, **"DD-MM-YY"** will display.

7.2 Alarm Settings

You can set an alarm time on this phone. When an alarm is set, the <ALARM icon> is shown on the handset display. When the alarm time is reached, the <ALARM icon> and **"ALARM ON"** flash on the handset display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm. If the snooze function is activated, the alarm will sound again at the end of the snooze period of three minutes. You can also press and hold <TALK OFF> while the alarm is sounding, to stop the alarm and turn off the snooze function.

Note:

- A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.
- The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.
- During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds.
- <TALK OFF> to disable the alarm, the display will revert to the call duration.
- During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.

7.2.1 Turn on/off the Alarm

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> to show **ALARM**.
- Press <MENU/OK> and <UP/DOWN> to select **ON/OFF**.
- Press <MENU/OK> to confirm.

Note: If ON is selected, you will be asked to set the alarm time.

7.2.2 Set the Alarm Time (If Alarm time is set to be ON)

- Follow Steps 1 to 4 in Section 7.2.1.
- Enter the alarm time in 24 hour format.
- Press <OK> to display "SNOOZE".
- Press <OK> and <UP/DOWN> to select snooze **ON** or **OFF**.
- Press <OK> to confirm.

7.3 Handset Settings

7.3.1 Set the Ringer Melody for Internal Calls

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **RING SETUP**.
- Press <MENU/OK> to show **INT RING**.
- Press <MENU/OK> and <UP/DOWN> to select the melody you want to hear for internal calls.

Note: The respective melody will be played while browsing the ringtone list.

- Press <MENU/OK> to confirm.

7.3.2 Set the Ringer Melody for External Calls

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **RING SETUP**.
- Press <MENU/OK> and <UP/DOWN> to select **EXT RING**.
- Press <MENU/OK> and <UP/DOWN> to select the melody you want to hear for external calls.

Note: The respective melody will be played while browsing the ringtone list.

- Press <MENU/OK> to confirm.

7.3.3 Set the Ringer Volume

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **RING SETUP**.
- Press <MENU/OK> and <UP/DOWN> to select **RINGER VOLUME**.
- Press <MENU/OK> and <UP/DOWN> to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).

Note: The respective ringer volume will be played during your selection.

If **VOLUME OFF** is selected, the <Ringer Off> icon will be displayed.

Press <MENU/OK> to confirm.

7.3.4 Set Alert Tones

Three different alert tones are set on by default, but can be turned off, if desired.

Key Tone - a single beep is emitted when you press a key.

Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.

Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **KEY SETUP**.
- Press <MENU/OK> and <UP/DOWN> to select **TONE TONE / BATTERY TONE / OUT OF RANGE**.
- Press <MENU/OK> and <UP/DOWN> to turn on or off these tones.
- Press <MENU/OK> to confirm.

8.4 Record Memo

You can record your memo message for another user. When you record a memo, the message can be played back in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

- Press <MENU/OK> and <UP/DOWN> to select **ANS. MACHINE**.
- Press <MENU/OK> and <UP/DOWN> to select **MEMO**.
- Press <MENU/OK> to start memo recording and **"RECORDING"** is displayed.

- Press <MENU/OK> to stop memo recording. The memo will play back for you to check. Press <MENU/OK> or leave the memo to finish playing, to save the message.

OR

- Press <C/MUTE> to stop memo recording without saving and return back to **ANS. MACHINE** menu.

8.5 Answering Machine Settings

You can use the **TAM SETTINGS** menu through the handset to change the settings of your answering machine.

8.5.1 Set the Answer Mode

By default, the answer machine is set in **ANS & REC** mode which allows callers to leave a message. This mode can be changed to **ANSWER ONLY** which does not allow callers to leave a message. In that case, your callers will be prompted to call back later.

- Press <MENU/OK> and <UP/DOWN> to select **ANS. MACHINE**.
- Press <MENU/OK> and <UP/DOWN> to select **TAM SETTINGS**.
- Press <MENU/OK> to show **ANSWER MODE**.
- Press <MENU/OK> and <UP/DOWN> to select **ANS & REC** or **ANSWER ONLY**.

- Press <MENU/OK> to confirm.

When your answering machine memory is full and the answer mode is in **ANS & REC**, the answer mode will change to **ANSWER ONLY** automatically. It will return to **ANS & REC** mode automatically after some messages have been deleted.

8.5.2 Set the Outgoing Message (OGM) Language

The answering machine announces the outgoing message when it answers a call.

There is a pre-set OGM for each of **ANS & REC** mode or **ANSWER ONLY** mode, which can only be in English or French (Francais) on this model.

- Press <MENU/OK> and <UP/DOWN> to select **ANS. MACHINE**.
- Press <MENU/OK> and <UP/DOWN> to select **TAM SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **TAM LANGUAGE**.
- Press <MENU/OK> and <UP/DOWN> to select your desired OGM language.
- Press <MENU/OK> to confirm.

9 TROUBLESHOOTING

Problem	Causes	Solutions
No dialling tone when pressing <TALK ON> key	a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. Another handset is using the base to make a call. d. Wrong telephone line cord	a. Check the connections. Unplug and plug back in the mains. b. Check that the telephone cord has been plugged into the base station and the phone socket. c. Check the base station plug and the 230V plug (remove and plug-in). d. Wait until the line is unoccupied. e. Use the original telephone line cord supplied
When connect to a PBX, no and/or wrong connection after dialling.		Insert the dialling prefix
"SEARCHING" is displayed.	a. Base station out of range. b. Base station not connected to mains.	Reduce the range. Connect base station to mains.
The call does not work.	Service not activated or wrong setting	Check your Subscription with network or change the dial mode.
No display.	Empty battery	Recharge battery.
Answering Machine		
The unit does not record new messages.	The answering machine is turned off.	Turn on the answering machine.
The caller cannot leave a message	a. The answering machine is turned off. b. Message memory is full. c. ANSWER ONLY mode is set	a. Turn on the answering machine. b. Erase unnecessary messages. c. Change to ANS & REC mode.
I cannot operate the answering machine remotely.	a. You are entering the wrong remote access code. b. You are pressing the dial keys too quickly. c. You are using a pulse telephone.	a. If you forget the remote access code, reset to the default settings. b. Press each key firmly. c. Try again using a touch tone phone
While recording an outgoing message or listening to messages, the unit rings and recording stops.	A call is being received.	Answer the incoming call and try again to record your outgoing message later.

This telephone is not equipped with a grounding function, and therefore some of the functions may be limited when used in PBX systems.

Technical Support

If the fault persists...

Disconnect all other instruments connected to the same line as the phone system and try to make a call.
Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket.

7.3.5 Set the Handset Language

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **LANGUAGE**.
- Press <MENU/OK> and <UP/DOWN> to select the desired language.
- Press <MENU/OK> to confirm.

7.3.6 Rename the Handset

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **RENAME HS**.
- Press <MENU/OK> and change the name of your handset, using <C/MUTE> to delete letters and the alphanumeric keys to enter up to 10 letters for the name.
- Press <MENU/OK> to confirm.

7.3.7 Choose the Information to be Displayed in Idle

You can choose to display time or handset name in your idle screen.

- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **HS DISPLAY**.
- Press <MENU/OK> and <UP/DOWN> to select **HANDSET NAME** or **TIME**.
- Press <MENU/OK> to confirm.

7.3.8 Set the Auto Answer

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

- Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **HS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **TO AUTO ANSWER**.
- Press <MENU/OK> and <UP/DOWN> to turn on or off the auto answer feature.
- Press <MENU/OK> to confirm.

7.4 Base Settings

7.4.1 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced.

You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to de-register a handset from the base station. A de-registered handset will have the antenna icon flashing and "REGISTER" on the display.

Note: You cannot de-register the handset that you are currently using.

- Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **DELETE HS**.
- Press <MENU/OK> and the display shows "PIN?----".
- Enter the 4-digit system PIN.
- Press <MENU/OK> and the first handset number is displayed.
- Press <UP/DOWN> to scroll through the list of registered handsets and select the number of the handset you want to de-register.
- Press <MENU/OK> to confirm, and the chosen handset will be de-registered.

7.4.2 Change the dial mode

You should normally leave the dialling mode at its default setting of TONE (also called DTMF) unless the phone is connected to an old exchange that only recognises **PULSE** dialling.

Note: If PULSE dialling is set, you can press the * key to switch to TONE dialling for the rest of that call.

- Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **DIAL MODE**.
- Press <MENU/OK> and <UP/DOWN> to select **TONE** or **PULSE** (The current setting is indicated by an asterisk to the right).
- Press <MENU/OK> to confirm.

7.4.3 Change the Flash (Recall) Time

You may need to change the recall (flash) time if your phone is connected to a PBX. The recall time options are SHORT (the default value of 100ms), MEDIUM (300ms) or LONG (600ms).

- Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **FLASH TIME**.
- Press <MENU/OK> and <UP/DOWN> to select your desired flash time (SHORT, MEDIUM, LONG, with the current setting indicated by * and asterisk to the right).
- Press <MENU/OK> to confirm.

7.4.4 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

- Press <MENU/OK> and <UP/DOWN> to select **BS SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **CHANGE PIN**.
- Press <MENU/OK> and the display shows PIN? ----.
- Enter the old system PIN.
- Press <MENU/OK> to display NEW PIN? ----, and enter your new 4-digit system PIN.
- Press <MENU/OK> to display CONFIRM? ----, and enter your new 4-digit system PIN again.

Note: If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5, you must enter the new system PIN at step 5 again.

- Press <MENU/OK> to confirm

8.5.5 Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to eight rings or **TIME SAVER**. If Time Saver is set the answering machine will answer after 4 rings if there are no new messages, or after 2 rings if there is a new message, so if you call in and you don't get an answer after 2 or 3 rings, you can hang up and save on call charges.

- Press <MENU/OK> and <UP/DOWN> to select **ANS. MACHINE**.
- Press <MENU/OK> and <UP/DOWN> to select **TAM SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **ANSWER DELAY**.
- Press <MENU/OK> and <UP/DOWN> to select from 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS or TIME SAVER.
- Press <MENU/OK> to confirm.

8.5.6 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time for each incoming message to be 60, 120, 180 seconds or unlimited up to the total recording time remaining on the answer machine.

- Press <MENU/OK> and <UP/DOWN> to select **ANS. MACHINE**.
- Press <MENU/OK> and <UP/DOWN> to select **TAM SETTINGS**.
- Press <MENU/OK> and <UP/DOWN> to select **RECORD TIME**.
- Press <MENU/OK> and <UP/DOWN> to select from 60 S, 120 S, 180 S or UNLIMITED.
- Press <MENU/OK> to confirm.

8.5.7 Call Screening

When the answering machine is on and takes a call, you can listen to the caller leaving a message. You can then identify the caller and decide whether to take the call in person.

If the answering machine is set to ON, when there is an incoming message, it will automatically be played through the base station, but you also have the option to listen through the handset which will display "SCREENING?"

- Press <MENU/OK> to start call screening. Any handset can listen to who is leaving the message and decide whether to pick up the call or not.
- The handset will display "SCREENING".
- You can adjust the earpiece volume by pressing <UP or DOWN>.
- OR
- Press <C/MUTE> to return to previous screen and you cannot hear the recording.

At any time if you want to pick up the call, you can press <TALK ON> and the message recording will be stopped automatically. If the answering machine is in the process of recording, the message already stored will be saved.

11 PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 Year. This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store. If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Ltd
489 - 499 Avenbury Boulevard
Central Milton Keynes
MK9 2NW



The conformity to the requirements is validated by the CE symbol.

Note: In compliance with Directive 2002/96/EC, when you purchase a product that comes with the symbol shown on the right, you are required to dispose of electrical and electronic equipment by separate waste collection and you cannot dispose of the product as normal waste. This equipment and all its components, subsystems and consumable materials formed an integral part of this product and when you decide to dispose of them you have to take them to a local recycling centre for appropriate waste disposal, in compliance with the current regulations. Details about the location of these centres can be obtained from your local authority.

Notes for battery disposal

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please be aware of the local rules on separate collection of batteries. The correct disposal of batteries helps protect the environment and prevent health hazards.



7.5 Registration

IMPORTANT: When you purchase a phone system, all handsets are already registered to your base, so you do not need to register them.

Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.)

To register a new handset to your base:

- Press and hold <FIND> on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press <MENU/OK> and <UP/DOWN> to select **REGISTRATION**.
- Press <MENU/OK> to display PIN? ----.
- Enter the 4-digit system PIN (default 0000).
- Press <MENU/OK> to confirm, and the display will show SEARCHING.
- If the handset registration is successful, you will hear a confirmation tone and the <antenna icon> will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the <antenna icon> will still flash and the display will return to REGISTER, so you will need to repeat the registration process.

7.6 Reset Your Phone