

# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for DORO FORMULA 3. You'll find the answers to all your questions on the DORO FORMULA 3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DORO FORMULA 3**  
**User guide DORO FORMULA 3**  
**Operating instructions DORO FORMULA 3**  
**Instructions for use DORO FORMULA 3**  
**Instruction manual DORO FORMULA 3**

English



Formula 3/5R



[You're reading an excerpt. Click here to read official DORO FORMULA 3 user guide](http://yourpdfguides.com/dref/3881013)  
<http://yourpdfguides.com/dref/3881013>

### Manual abstract:

2. 3. 4. 5. 6. 7. 8. 9. 10. 11.

Up / missed call Left menu button/OK Talk button Down/Redial Redial \* and keypad lock # and ring signal On / Off Phone book R Recall button (PBX features) End call and on / off button Right menu button/Back/Internal call Only for Formula 5r: 12. Paging 13. Answer machine functions. Detailed in Answer machine section. 14.

Message indication/display English Installation This device is intended for the analogue telephone network lines in AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HU, IE, IS, IT, LV, LT, LU, MT, NL, NO, PL, PT, RO, SI, SK, SE. 1. Connect mains adapter and phone cable to wall sockets. 2. Insert batteries (1.

2V NiMH AAA Doro 500mAh) in accordance with the markings. 3. Place the handset into base unit with the keypad facing outwards to charge (24 hours the first time). 4. Press (left menu button). {/} to HS SETTINGS. 5. Scroll 6. Press OK (left menu button). 7.

Scroll to LANGUAGE. Press OK. 8. Scroll to ENGLISH. Press OK. 9. Press L or several times to exit the menu screens. Connection Note! Use the telephone line cord supplied, an existing line cord from a previous phone may not be compatible. The mains socket outlet must be located near the equipment and easily accessible. If the Formula 5r base unit's display is showing -- the answer machine is disconnected, or time/date is not set.

Date/Time 1. Press (left menu button). 2. Scroll {/} to HS SETTINGS. Press OK.

3. Scroll to HS DISPLAY. Press OK. 4. Scroll to TIME.

Press OK. 5. Scroll to DATE & TIME. Press OK. 6. Scroll to SET TIME. Press OK. 7. Enter time of day (HH-MM). Press OK.

8. Scroll to SET DATE. Press OK. 9. Enter date (DD MM YY). Press OK. 10. Press L or several times to exit the menu screens. The format of date/time can also be adjusted in this menu in the same way as other settings. 1 English Battery When the batteries are relatively new (less than 6 months) and fully-charged (10 hours) they will last for approx 100 hours standby time or approx 10 hours call time.

@@@Use only original batteries. @Do not place the base unit close to other electrical equipment, in direct sunlight or other strong heat sources!

This is to minimize the risk of any interference. It is normal for the device to become warm during charging and this is not dangerous. Dispose of used batteries according to the instructions. Battery LED When the batteries are running low, is in progress.

will flash and a warning tone will be heard when a call Please note that the complete battery indicator in the display will flash as long as the handset is charging, and when the battery is fully charged only the inner segment will flash. 2 English Range The telephone's range depends on whether or not the radio waves carrying the call are restricted by obstacles in their path, and is usually between 50 and 300 metres. Coverage can be improved by turning one's head so that the handset is aligned with the base unit. Sound quality declines as the limit is reached until the call is finally interrupted. The 6 symbol is shown when the phone is within range and goes out/flashes when it is out of range.

Eco Functionality · We have introduced the ECO FUNCTIONALITY label to help customers identify products within our assortment having a lower impact on the environment. Products carrying this label feature: Reduced power consumption in both operational and standby modes. Adaptive transmission power depending on range on base unit. 3 English Operation Making a call 1. Enter the required number. Delete if necessary with right menu button C. 2. Press q to make the call. Press L to end the call. Receiving a call Volume control Redial 1.

Wait for the handset to ring. 2. Press q to answer. Press L to end the call. The volume may be adjusted during a call with {/}. Press r. Scroll among the 5 most recently dialled numbers with {/}. Press q. Mute button Paging The microphone can be switched on / off during a call with C (right menu button). The handset will ring when J (on the base unit) is pressed.

The signal will stop automatically after a while or if the L button on the handset or the J button on the base unit are pressed. Temporary silent mode Softkeys When someone calls, you can press C (right menu button) to turn off the handset ring signal. Note the top two keys just under the menu are "softkeys". Their function is shown in the Display directly above them. 4 English Phonebook You can save 20 numbers/names.

If you subscribe to a caller ID service, the name allocated to the caller in the phonebook will be shown for incoming calls. It is possible to choose between various ringers for the numbers saved in the Phonebook (only functions if you subscribe to a caller ID service). Save name/number in handset 1. 2. 3.

4. Press b. Press . Scroll to ADD. Press OK. Press equivalent digit key several times for desired name. Press OK. Enter the telephone number, including the area code. Delete if necessary with right menu button C. Press OK.

5. Scroll to required ringer. Press OK. Managing the phonebook 1. Press b. Scroll between entries with {/}. You can quick search the phonebook by pressing the corresponding number key for the first letter. 2. Press q to make a call or press for various options. Edit number 1.

2. 3. 4. 5. 6.

7. 8. 9. 1. 2.

3. 4. Press (left menu button). Scroll {/} to PHONEBOOK, press OK. Scroll to the name you choose to edit, press . Scroll to EDIT, press OK. Check name is correct, press OK. Number will appear with cursor flashing at the end of the number. Press C to backspace/delete number. Re-enter correct number, press OK.

Select melody, press OK. Press (left menu button). Scroll {/} to PHONEBOOK, press OK. @@@@Press {. Scroll to the desired entry with }. 2.

@Scroll { to new call number, press (left menu button). 2. @3. @international call.

Information about the number is blocked. Number cannot be shown. @Press . Scroll to HS SETTINGS. Press OK.

2. Scroll to desired function e.g. LANGUAGE. Press OK.

3. Scroll to desired setting. Press OK. ALARM When the alarm is activated will be shown in standby mode. When the alarm goes off, a signal will be heard for 45 seconds. The signal can be turned off with any button. If SNOOZE is activated the alarm will go off again approx. 7 minutes later. @@The volume is determined by the set ringer level. RING SETUP The handset's ringer signal.

INT/EXT=internal/external. Note! Melodies 2,3,4... @@Set melody 1 if you want to avoid this. @@The language of the display texts. The text shown in standby mode. Show name or time in standby mode. The call is answered when the handset is lifted from the base. Setting the date/time.

@1. Press . Scroll to BS SETTINGS. Press OK. 2.

Scroll to desired function. Press OK. 3. Enter the desired setting. Press OK.

BS RINGER/ The base unit's ringer signal can be adjusted. Only applies to Formula 5r. RING VOLUME DELETE HS FLASH TIME CHANGE PIN To de-

register a handset. @@ Recall time. LONG=New Zealand. MEDIUM=France/Portugal. SHORT=others incl. UK/AUS. The code (e.



[You're reading an excerpt. Click here to read official DORO  
FORMULA 3 user guide  
http://yourpdfguides.com/dref/3881013](http://yourpdfguides.com/dref/3881013)

@@@1. Press (right menu button). 2. @@@@When an external call is connected; 2. Press . Scroll to INTERCOM. Press OK. 3. @@4. @@Only for separate handsets/service measures.

You can register up to 5 handsets to one base unit. @@@Extra handsets will not be available as accessories. 1. 2. 3.

4. Hold down J on the base for around 6 seconds. Press . Scroll to Registration. Press OK.

Enter the base unit's PIN code (e.g. 0000). Press OK. @@Total memory capacity is up to 15 minutes depending on the set sound quality. Most functions can be accessed from both base unit and handset. Switching the answer machine on/off Press 1 (on the base unit) to switch the answer machine on/off. If the base unit's display is flashing/showing -- the answer machine is disconnected, or time/date is not set. On/Off from the handset 1. Press .

Scroll to ANS. MACHINE. Press OK. 2. Scroll to TAM ON/OFF. Press OK. 3. Scroll to desired setting. Press OK. If the handset's display shows with a steady light the answer machine is switched on.

If there are new messages, the indicator will flash whether the answer machine is off or on. Note! Even when answer machine is OFF it will still answer after 10 rings, please see Remote activation. 9 English Outgoing message The outgoing message (max 3 min) is heard by incoming calls. There are two separate outgoing messages, one for Answer only (callers cannot leave a message) and one for normal answering function. Please also select desired answer function.

See TAM Settings. Press . Scroll to ANS. MACHINE. Press OK.

Scroll to TAM SETTINGS. Press OK. Scroll to OGM SETTINGS. Press OK. Scroll to ANSWER & REC/ANSWER ONLY. Press OK. Scroll to Record MESS. Press OK. After the long beep you can record your message (speaking 20 cm from the keypad). Press OK.

7. The message will be played back to you. Repeat the above to change. 1. 2. 3. 4. 5. 6. Note! A pre-recorded message is used until you make your own recording, and that message can also be restored if required.

To restore this, press C (right menu button) during playback of outgoing message. Screening Incoming messages will be heard on the loudspeaker of the handset confirms correct code. Select a remote access command (see table below). Replace the handset. 2 4 5 6 7 8 9 Erase single msg during playback Skip to previous message Playback of messages Skip to next message Turn on the answer machine Stop Turn off the answer machine 13 English Troubleshooting Check that the telephone cord is undamaged and properly plugged in.

Disconnect any additional equipment, extension cords and other phones. If the problem is resolved, the fault is with some other equipment. Test the equipment on a known working line (e.g. at a neighbour's house).

If the equipment works there the fault is probably with your telephone line. Please report this to your network operator. No number shown when ringing . . . . . This function requires a Caller ID subscription from your service provider. The batteries may be running low (charge the handset). The handset may be nearly out of range. Move closer to a base unit. Check that the adapter/phone cord is connected correctly. Check that you have selected Tone Dial, see System Settings. Check the charge status of the handset batteries. Connect another functioning telephone to the network wall socket.

Some of the telephone's ringers do not follow the line signal, which means that the signal may continue for up to 8 seconds after answering a call. Check that you are using a tone dial telephone. Try holding the buttons down longer, approximately 1 second per digit. Memory may be full. Listen to/delete your messages. Check that the adapter/phone cord is connected correctly. Check that the answer machine function is turned on. Warning tone/Not possible to make calls Telephone does not work The telephone continues to ring The answer machine does not respond to remote access . . . . . The answer machine is not answering If the telephone still does not work, please contact the place of purchase for service. @@The max. @@Close to the base, i.

e. @@@If you experience any problems please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period. This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations.

As a matter of precaution, we recommend disconnecting the device during a thunderstorm. Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if other batteries than DORO original batteries have been used. 15 Doro Formula 3 Doro Formula 3 Duo Doro Formula 3 Trio Doro Formula 3 Quad Doro Formula 5r Doro Formula 5r Duo Doro Formula 5r Trio Doro Formula 5r Quad English Version 1.2 .



**You're reading an excerpt. Click here to read official DORO FORMULA 3 user guide**

**<http://yourpdfguides.com/dref/3881013>**