



D530/D530P

USER GUIDE

SAGEMCOM

Dear customer,

You have just acquired a new generation Sagemcom telephone and thank you for placing your confidence in us.

This product follows a strategy of continuous development. We reserve the right to make changes without notice, modifications and improvements to the products described in this user manual.

To operate the device safely and easily, please read carefully the paragraph “**Recommendations and safety instructions**”, page 4.



The CE label confirms that the product complies with the 1999/5/EC regulations of the European Union Parliament regarding wireless systems and telecommunications.

The declaration of compliance may be looked up on the **www.sagemcom.com** website section «Support», or can be obtained from the following address :

Sagemcom Broadband SAS

250, route de l'Empereur 92848 Rueil-Malmaison Cedex - France

Copyright © Sagemcom Broadband SAS

All rights reserved

Sagemcom is a registered trademark.

Recommendations and safety instructions	4
Discover... ..	6
Your phone	6
The handset screen	9
Setting up.....	10
Connecting the base	10
Handset set-up	11
Switching the handset on / off	11
Charging	12
Personalising the D530P base	13
Browsing through the menus	13
Menu tree structure	17
Making and receiving calls.....	18
Managing a call	18
Options during a call	19
Managing several calls	21
Managing calls with the base D530P	22

Using additional handsets	24
Using the phonebook	26
Locating your handset	29
Listening to your messages	30
Locking / Unlocking the keypad	30
Setting up... ..	31
The phone	31
The handset	33
The base	35
The line	38
Alarm.....	39
The alarm	39
Tracing your calls.....	41
Call logs	41
The events log	42
Environment	43
Guarantee	44

Recommendations and safety instructions



For safety reasons, never put the handset in the base station without the battery inserted or without the lid on the battery compartment as this could cause an electric shock.

To avoid damaging your handset/base, only use certified rechargeable batteries NiMH 1.2 V 600 mAh, never use non-rechargeable batteries. Insert the batteries in the handset/base battery compartment respecting polarity.



Only use the power unit supplied and connect it to the electricity mains in accordance with the installation instructions in this user manual and the details on the sticker regarding voltage, electrical current and frequency. As a precaution if there is a risk of danger, the power plug can be pulled out to disconnect the 230 volt power supply. Therefore the sockets should be near the device and easily accessible.



Do not install your DECT telephone in a damp environment, such as a bathroom, washroom, kitchen etc, and not within 1.50 metres of a source of water or outside. This device is designed for use in temperatures of between 5 °C and 40 °C.



Your DECT telephone has a range of approx. 50 metres indoors and up to 300 metres outdoors. The range can be affected by the proximity of metal objects, such as a television and electrical devices.

Zones without reception may appear owing to elements in the building. This can cause brief interruptions in the conversation, caused by faulty transmission.



Certain medical equipment and highly-sensitive machines or security systems may be affected by the transmission power of the telephone. In these cases we recommend adhering to the safety information.



In regions greatly affected by electrical storms we recommend that you protect your telephone circuit with a special fixture for excess voltage.



Your D530 has anti-skid pads that should leave no traces on your furniture and ensure stability.

However, given the wide variety of finishes used by furniture manufacturers, traces may appear on surfaces in contact with the parts of your D530. Sagemcom Broadband SAS decline all responsibility in any such cases of damage.



Do not attempt to remove screws or open the appliance. It does not contain any user-replaceable parts



Worn out batteries must be disposed of in line with the recycling regulations in this user manual.



This device is designed to be used for connecting to the public telephone network. If problems should arise, contact your nearest specialist dealer. Only use the telephone cable supplied.

Discover...

Your phone

The pack

Check that you have the following items in your pack:

- ☒ a **D530** or **D530P** base according to model,
- ☒ two rechargeable batteries (type NiMH 1.2 V 600 mAh),
- ☒ a telephone connection cord,
- ☒ a mains power supply with connection cord,
- ☒ a belt clip,
- ☒ this user guide.

 
If you have purchased a **DUO** or **TRIO** pack, you will also find for each extra handset:

- ☒ a charger,
- ☒ a mains power supply with connection cord,
- ☒ two rechargeable batteries (type NiMH 1.2 V 600 mAh),
- ☒ a belt clip.


The base

- 1 Handset location.
- 2 Handset(s) Search / Pairing key
 - *Long press*: pairing of handsets.
 - *Short press*: paging of handsets.
- 3 Display:
 - Displays the current time.
 - **P**: indicates PM if the time format is **12 Hour**.
- 4 Volume keys:
 - **VOL -**: To reduce the volume.
 - **VOL +**: To increase the volume.
- 5 Hands-free key:
 - *Standby screen/During a call from the handset* to (de)activate the hands-free mode
 - *On receiving a call*: to answer in hands-free mode; press again to hang up.
 - *During a call from the base*: to end the call.
- 6 To call **My favourite numbers** (direct call keys - see page 37).

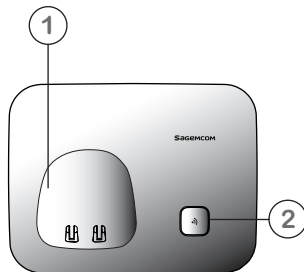

Model D530




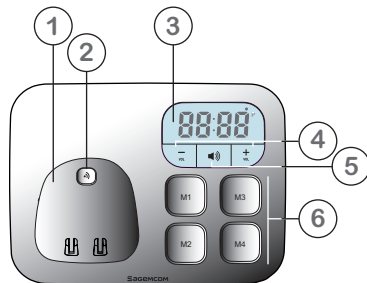 


Model D530P



 The handset

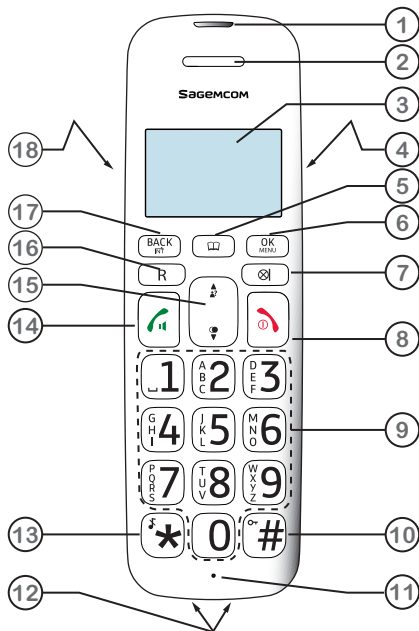- 1 Indicator light - incoming call.
- 2 Loudspeaker.
- 3 Graphic screen.
- 4 Upper and lower  side keys  :
 - To Increase / Decrease the volume.
 - Browsing through the menus.
- 5 Phonebook access key.
- 6 Menu access / validation key.
- 7 Mute button: cuts off the microphone.
- 8 "Hang up" button
 - *Short press*: return to main menu.
 - *Long press*: switch handset on / off.
- 9 Alphanumeric keypad.
- 10 "Hash" key
 - *Long press*: (un)lock the keypad.
- 11 Microphone.
- 12 Charging terminals.
- 13 "Star" key
 - *Long press*: to (de)activate the silent mode.
- 14 "Open line" key
 - *During a call*: to (de)activate the hands-free mode.









- 15** Browsing through the menus / Upper ▲ and lower ▼ keys:
- To increase / Decrease the volume.
 - Browsing through the menus.
 - ?: See the list of calls received.
 - : See the list of outgoing calls.
- 16** R key (flashing, to manage several calls).
- 17** Cancel / Intercom / Delete character key.
- 18** Side key : (de)activate the amplifier.

The handset screen

THE ICONS DISPLAYED

In standby mode or during use, your phone screen informs you of your phone's current state through icons, and in particular:

- 1 Status icons:** Indicates your phone's current state.

	Speakerphone enabled		Battery charge condition
	Silent mode activated		There are messages on your online message recorder
	Alarm on		Keypad locked



 
- 2** Information field: in the normal state, displays the name of the handset and the current time. When the 12-hour time format is set, AM or PM is displayed after the time.

Setting up...


Connecting the base


Before making connections, please see the safety instructions at the start of the booklet.

- 1 Turn the base over.
- 2 Take the telephone connection cord, click it into its socket and connect the other end of the cord to the telephone socket.
- 3 Take the mains power supply. Connect the jack plug of the power supply underneath the base and connect the power supply to the mains.
- D530P** - the display lights up.
- 4 Pass the cords through the cord grips provided.
- 5 Place the base where you want it located.

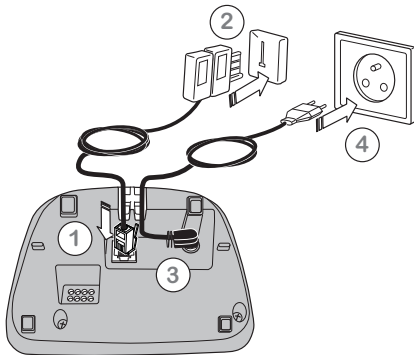

Handset set-up

 - 1 Take the batteries provided in the packaging.
- 2 Turn over your handset and press the top of the hatch to release it.
- 3 Insert the batteries one by one according to their polarities as indicated in the illustration opposite.
- 4 Fit the hatch to the handset by pushing it up until it is completely closed.
- 5 The screen turns on. Place your handset on its base and fully charge the batteries.
- 6 A beep sounds when you place the handset on the base.
The battery charging icon  moves to inform you that charging is in progress. The icon display stops moving when the batteries are charged.

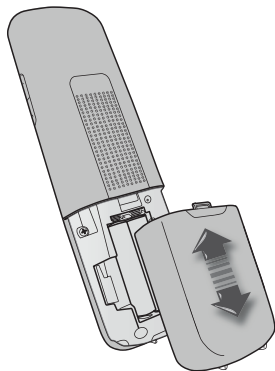

Switching the handset on / off

To switch on the handset, give a long press on the key .

To switch off the handset, give a long press on the key .

The message **Switch off HS?** is displayed.

Press the key  to confirm.

Charging

To charge your phone, place the handset on the base, making sure that the base is connected to an AC outlet.

To ensure optimum charging, leave the handset on the base for at least **15 hours** when using the phone for the first time. During charging, the batteries may heat up. This is quite normal and perfectly safe. If you do not obtain radio contact with your base, check the electrical connections to your base.

Battery replacement

 
- 1 Turn off the handset. Turn it over to access the battery compartment hatch.
- 2 Remove the battery compartment hatch.
- 3 Remove the old batteries, insert the new batteries one by one the right way as indicated by their polarities.
- 4 Refit the battery compartment hatch.

Worn out batteries should be discarded in accordance with the recycling instructions given in chapter “**Environment**”, page 43.

To prevent damage to your handset, only use approved AAA format NiMH 1.2 V 600 mAh rechargeable type batteries. Never use non-rechargeable batteries.

Personalising the D530P base

The "M" keys on the base can be personalised with a photo of the user associated with the key. Place a pointed tool in one of the two dimples on the "M" key. Lift off the plastic cover. Use the cover as a template to cut the photo to size. Insert the photo and replace the plastic cover.

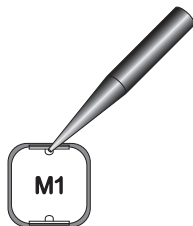

Browsing through the menus

Browser



This browser allows you to quickly access menus and change your settings easily. It points in two directions. To access the phone menu, press ^{OK}_{MENU}.

When choosing menus, press the top ▲ or the bottom ▼ of the browser to access the previous or next menu.

During a call, press the top ▲ of the browser to increase the volume or the bottom ▼ to decrease it.



The multifunction keys

Your telephone has two ^{BACK}_{INT} and ^{OK}_{MENU} "multifunction" keys which you can use in several ways:

	From the standby screen	In a menu
^{OK} _{MENU}	To access the telephone menu.	To enter a menu, to validate an action in a menu.
^{BACK} _{INT}	To make an Intercom call (call to another handset).	To return to the previous menu. To delete characters. With each press, the character preceding the cursor is deleted.

Illustration

To browse-through menus, use the browser [or right side keys] and two multifunction buttons:










- 1 Press the key ^{OK}_{MENU}.
The main menu is displayed on the screen.
- 2 Press the top ▲ or bottom ▼ of the browser key  to scroll through the menus and access the desired function.
- 3 Confirm your choice/Enter the displayed menu by pressing the key ^{OK}_{MENU}.
- 4 Cancel your choice/Exit the displayed menu:
 - either by pressing the key ^{BACK}_{INT}.
 - or by pressing the  key; the home screen is displayed.




DETAILED BROWSER EXAMPLE: ADJUST THE DATE AND TIME

It is recommended to set the date and time accurately to allow you to keep track of the timings of your calls and messages.

If you have the **Display number** option, the date and time will, depending on your operator, be set automatically when you receive a call.

To access the date and time setting menu:

- 1 Press the key . The main menu is displayed on the screen.
- 2 Scroll through the menus to the **Settings** menu by pressing the top ▲ or bottom ▼ of the browser key .
- 3 Enter the **Settings** menu by pressing the key .
- 4 Scroll through the menus to the **Date/Time/Alarm** menu by pressing the top ▲ or bottom ▼ of the browser key .
- 5 Enter the **Date/Time/Alarm** menu by pressing the key .
- 6 Enter the **Date & Time** menu by pressing the key .
- 7 Scroll through the menus to the **Enter time** menu by pressing the top ▲ or bottom ▼ of the browser key .
- 8 Enter the **Enter time** menu by pressing the key .
- 9 Enter the time: using the numeric keypad (hours then minutes).
- 10 Confirm your entry by pressing the key . The home screen displays the message **Saved**.

- 11 Scroll through the menus to the **Enter date** menu by pressing the top ▲ or bottom ▼ of the browser key .
- 12 Enter the **Enter date** menu by pressing the key .
- 13 Enter the date using the numeric keypad (day, month and year) in the form DD/MM/YY.
- 14 Confirm your entry by pressing the key . The home screen displays the message **Saved**.

You have just set your phone's current date and time. You can also set the date and time display format (see “**Setting the date and the time**”, page 32).

Refer to the “**Menu tree structure**”, page 17 section to find out about your phone's functions.

Procedures in your booklet

The procedures in your booklet are presented in the form of sheets.

To facilitate their implementation, each of them includes the following as appropriate :

- the keys associated to directly access the function described, and/or
- the path for accessing the function described in the menu.

EXAMPLE : TO (DE)ACTIVATE THE SILENT MODE



(Long press):

 
means you can use the key(s) offered to access the function.

OK  > **Sound** > **Ringer** >
 **Ringer volume** > **Off**


means you can access this function by displaying the menu, then going down the menus displayed to the function **Ringer volume** and selecting the state **Off**.

Menu tree structure

Call log




Sound

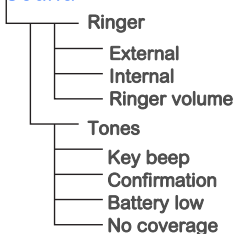 


Settings

 
Handset settings

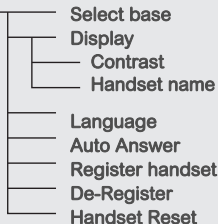

Base settings

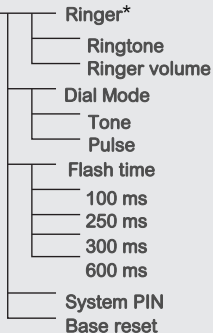 

Date/Time/Alarm

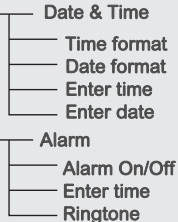 

Memory keys*



* Only for D530P

Making and receiving calls...


Managing a call

Making a call


FROM THE HANDSET - METHOD 1

- 1 Dial your contact's number.

If you make a mistake, press the ^{BACK}_{INT} key to delete the last character entered.

- 2 Press the key .


FROM THE HANDSET - METHOD 2

- 1 Press the key .
- 2 Dial your contact's number. A beep sounds.

At the end of the call, press the handset  key and replace the handset on its base.

FROM THE BASE

To do this, the keys M1 to M4 must be programmed. For more details, see the section "Defining the memory keys (M1 to M4) - **D530P** only", page 37.

Press one of the "M" keys, the Hands-free key  lights up and the call is started.

Receiving a call

- 1 Press the  key to take the call.
- 2 At the end of the call, press the handset  key and replace the handset on its base. A beep sounds.


Your handset includes an **Auto Answer** function. For further details, refer to the “**Answering automatically**”, page 34.


Options during a call

You can use the following options during a call:


Enable/Disable loudspeaker (speakerphone mode)

HANDSET LOUDSPEAKER

 (during a call)

The icon  appears on the handset screen when the hands-free mode is active.

 
BASE LOUDSPEAKER (D530P ONLY)

 (during a call)

When the battery charge icon is at minimum, the hands-free function is not available until the next charging cycle.


Adjusting the volume

FROM THE HANDSET




- To increase the volume, press ▲ in the browser or on the key + on the right side of the handset.
- To decrease the volume, press ▼ in the browser or on the key - on the right side of the handset.
- To increase the volume during a call, press the ☎ key on the left side of the handset. To return to normal volume, press this key again.

 FROM THE (D530P BASE ONLY)



(communication in progress from the base)

 Enabling/Disabling the secret mode



The secret mode allows you to temporarily mute the line so that you are not heard by the caller. Once enabled, the **Mute On** message flashes on the screen.


Managing several calls

Your phone allows you to take and manage several calls when you are already on the line (depending on your line provider). These calls can be managed with the key **R**.

Receiving a second call

R + 

During a call, a beep indicates the arrival of a second call.

To take this call, press the key **R** then the key .

Your first call is put on hold and you can talk with the second caller.


Making a second call

R + Number of your contact

During a call, press the key **R** then dial your contact's number.

Switching from one call to the other


R + 

Press the **R** key then the key  to switch from one call to the other.

The call in progress is then put on hold and you can take back the previous call.

Ending one of the calls in progress

R + 

Press the **R** key then the key  to end the current call. You will return to the other call.

Talking with two contacts at the same time (3-way conference)


R + 

Press the key **R** followed by the key .

You can then talk with your two contacts at the same time.

To end the 3-way conference, press the key .

Managing calls with the base **D530P**

With the **D530P** base there are more ways of sending and receiving calls using the  key, Which can be used not only to activate the hands-free mode, but also to take a call.


Receiving a call

Press the key  to take a call from the base.


Using the Conference mode

When you are already connected from the handset, you can keep the handset call and activate the hands-free mode on the base (Conference mode).




You can also speak to your correspondent from the handset and another person can join the conversation from the base.

Press the  key on the base to (de)activate the conference mode during a call on the handset. Once it is activated, the message **Conference** is displayed.

Switching between the handset and the base

During a call on the handset, press the  key on the base. You will then hear your contact both on the handset and on the base (Conference mode).

You may get feedback in Conference mode if the handset is too close to the base.

- To end a call on the handset and continue on the base alone, press the  on the handset.
- To continue the call only on the handset and end it on the base, press the  key on the handset then press the  key on the base.
- During a call, if you have placed the handset on the base; pick it up again to continue the call on the handset alone.

Using additional handsets


You can associate additional handsets with your phone: You can then make and receive outside calls or calls between these handsets.

You first have to pair the handsets with the base.



For further details, refer to the “**Associating a new handset**”, page 34 .

Calling another handset (intercom)

BACK
INT

If you only have **two paired handsets** on the same base, the handset called rings automatically. Simply take the call with the  key.



If you have **more than two paired handsets** on the same base:


- 1 Press the key BACK
INT. Select the handset with the ▲ or ▼ key.
- 2 Press the key OK
MENU. The selected handset rings.
- 3 Take the call from the handset by pressing .
- 4 End the call by pressing .

Transferring a call to another handset



BACK
INT (during communication)

You must have at least two handsets paired on the same base.

If you only have **two paired handsets** on the same base, the call is transferred directly to the second handset. Simply take the call on the second handset with the  key and hang up the call on the first handset with the  key.






To **cancel the transfer** before hanging up the second handset, press the  key.

If you have **more than two paired handsets** on the same base:

- 1 Select the handset to which you want to transfer the call using the ▲ or ▼ key.
- 2 Press the key . The handset called rings.
- 3 Pick up the other handset and then transfer the call by pressing .

3-way conference

During a call, you can have a second person in your home take part by activating the call on the second handset. To do this, you must have paired both handsets to the base.







- 1 Take your contact's call as usual by pressing the  key on your handset.
- 2 During the call, press the  key.
- 3 If necessary select the desired handset with the ▲ or ▼ key.
The selected handset will ring. Your contact is put on hold.
- 4 Connect the call to the second handset with the  key.
- 5 On the first handset, press the  key to display the call options.
- 6 Select the **Conference** option with the ▲ or ▼ key, then press .

You can then all talk to each other. The handsets display the message **Conference**.






Using the phonebook


Create an entry




- 1 Press the key . The directory opens. If there are no entries, the message **Empty** is displayed.
- 2 Press the key .
- 3 Select **New entry** with the  or  key and press .
- 4 Specify the required information by confirming at each step with  :
 - **Name**: enter your contact's name,
 - **Number**: enter their number,
 - **Group**: if necessary, select the group in which to include the contact.

Call the contact from their entry





- 1 Press the key . The directory opens.
- 2 Select the contact to call with the  or  key.
- 3 Press the key .
- 4 Select the option **Call** and press .

You can also press the  key to call the contact selected in the directory directly.

Search for an entry





- 1 Press the key . The directory opens.
- 2 Enter the first letter of the name.

Changing an entry




- 1 Press the key . The directory opens.
- 2 Select the entry to be modified with the ▲ or ▼ key.
- 3 Press the key .
- 4 Select the option **Edit** and press .
- 5 Change the name and/or number and/or number type and confirm with .

Deleting an entry


The action **Delete** deletes the selected entry. The action **Delete all** deletes all the entries in the directory.


- 1 Press the key . The directory opens.
- 2 Select the entry to be deleted with the ▲ or ▼ key.
- 3 Press the key .
- 4 Select the option **Delete** and press .
- 5 Confirm the deletion by pressing the  key.




 





Checking available directory space

- 1 Press the key . The directory opens.
- 2 Press the key .
- 3 Select the option **Capacity** and press .
- 4 The number of existing entries is displayed with the total possible number (2/50).

Associating a Speed dial number with an entry

Speed dial allows you to associate a numeric key, for example key , with an entry in your directory.




Once you have made the association, you can dial your contact's number automatically by long press on the associated key (e.g. .

- 1 Press the key . The directory opens.
- 2 Press the key .
- 3 Select the option **Speed dial** and press .
- 4 Select with  or  the numeric key of your choice and press .
- 5 Select the desired contact with  or  and press .


Transferring entries from one handset to another

You must have at least two handsets paired on the same base.


Each handset has its own phonebook. To transfer one or more entries from a phonebook to another handset:

- 1 Press the key . The directory opens.
- 2 Press the key .
- 3 Select the desired option and press .

 - **COPY:** to transfer the current entry.
 - **COPY ALL:** to transfer all the directory entries.

- 4 Select the handset to which the data are to be transferred.
The receiving handset rings and displays the message **Accept PB Entries?**
- 5 Accept the transfer on the destination handset by pressing the key .

Locating your handset

If you have misplaced your handset, press the  key on the base. The handset rings.

Listening to your messages

If you have a voice mail service with your line provider, dial the number given by your line provider directly.

Follow the instructions given by your line provider to listen to and manage your messages.

The icon  appears on the handset screen when you have at least one new message.

Locking / Unlocking the keypad

You can lock the keypad when you are not making a call.

Give a long press on the  key to lock and unlock the keypad.

The message **Keypad locked** and the icon  appear on the handset screen when the keypad is locked.

Setting up...

The phone

Changing the ringing tone

You can change the ringing tone of:

- outside calls,
- calls between handsets (intercom).

Scroll through the pre-recorded ring tones and confirm with **OK**_{MENU}.


OK_{MENU} > **Sound** > Ringer > External and Internal

Modifying the ringing volume


Select the sound level and validate with **OK**_{MENU}.

OK_{MENU} > **Sound** > Ringer > Ringer volume

Enabling/Disabling the silent mode

Select the option **Off** and validate with **OK**_{MENU}. The message **Ringer off** and the icon  appear on the handset screen when the silent mode is active.

OK_{MENU} > **Sound** > Ringer > Ringer volume

You can also activate / deactivate the silent mode by a long press on the  key.

Enabling/Disabling audio alerts

OK
MENU > **Sound** > Tones > Key beep
and Confirmation and Battery low
and No coverage

The audio alerts apply to:

- keypad keys pressed,
- confirming a menu,
- low battery,
- loss of signal between the base and the handset.

Select the desired state, **On** or **Off**, and validate with OK
MENU.

Setting the date and the time

OK
MENU > **Settings** > Date/Time/Alarm >
Date & Time

- 1 Select the desired **Time format**: 24 Hour or 12 Hour.
- 2 Select the desired **Date format**: dd/mm (day, month) or mm/dd (month, day).
- 3 Enter the hour in **Enter time**: starting with the hours and then the minutes.
- 4 Enter the date in **Enter date**.

For further details, refer to the “Illustration”, page 14.

The handset

Define the priority base for a handset

OK
MENU > **Settings** > Handset settings >
Select base

This function allows you to specify the priority base to be used for making calls.

Only if you have paired the same handset on several bases.

Select the base that the handset should use first and confirm with OK
MENU.

Adjusting the contrast

OK
MENU > **Settings** > Handset settings >
Display > Contrast

Select the desired level of contrast and validate with OK
MENU.

Personalising the name of a handset

OK
MENU > **Settings** > Handset settings >
Display > Handset name

You can personalise the name of your handset. Enter the desired name and validate with OK
MENU.

Changing the display language

OK
MENU > **Settings** > Handset settings >
Language

Select the language to be used and confirm with OK
MENU.

Answering automatically

OK
MENU > **Settings** > Handset settings >
Auto Answer

With this function you can answer a call simply by lifting the handset from the base.

Select the desired state, **On** or **Off**, and validate with OK
MENU.

Associating a new handset

OK
MENU > **Settings** > Handset settings >
Register handset

Your phone allows you to associate other handsets with the base.

You then have to pair them so that they are recognized.

FROM THE BASE:

- 1 Enable the base pairing mode.
Refer to section “Enabling the pairing mode”, page 35.

FROM THE HANDSET:

- 2 Enable the handset pairing mode.
- 3 Enter the base code if necessary (by default 0000).

Once the handset is registered, the pairing mode is automatically exited.

Removing a handset registered on the base

OK
MENU > **Settings** > Handset settings >
De-Register

- 1 Enter the base code and confirm with **OK**.
MENU

The default code is 0000.

- 2 Select the handset to unpair from the base and validate with **OK**.
MENU

Resetting the handset


OK
MENU > **Settings** > Handset settings >
Handset Reset

When you reset your handset, all the settings are returned to their initial values (factory settings), except for the phonebook.

Follow the instructions on the screen and confirm.

The base

Enabling the pairing mode

 (long press)

You enable the pairing mode when you associate an additional handset, for example.

Give a long press on the  key on the base.

On the base **D530P** only, the  key flashes: the base is in pairing mode.

Your base will remain in pairing mode for about 1 minute

Changing the default code

OK
MENU > **Settings** > Base settings >
System PIN

- 1 Enter the current code and validate with OK
MENU.
- 2 Enter the new code and validate with OK
MENU.
- 3 Re-enter the new code to confirm and validate with OK
MENU.

Resetting the base

OK
MENU > **Settings** > Base settings >
Base reset

When you reset your base, all the settings are returned to their initial values (factory settings), except for the phonebook.

Follow the instructions on the screen and confirm.

Modifying the base ring tone - (DS30P only)

OK
MENU > **Settings** > Base settings >
Ringer > Ringtone

Scroll down the pre-recorded ring tones and validate with OK
MENU.

Modifying the base ring tone volume - **D530P** only)

Select the sound level and validate with OK
MENU.

OK
MENU > **Settings** > Base settings >
Ringer > Ringer volume

Defining the memory keys (M1 to M4) - **D530P** only

OK
MENU > **Settings** > Memory keys

Use this menu to set your favourite numbers and associate them with direct call keys **M1** to **M4** on the base.

- 1 Select the key to set and validate with OK
MENU.
- 2 Enter the telephone number to associate with this key and validate with OK
MENU.

Pressing the defined keys **M1** to **M4** will now automatically call the saved number.

The line

We do not recommend that you change line settings without first contacting your line provider, as this may result in your phone line being disconnected.

Changing the dialling type

OK
MENU > **Settings** > Base settings > Dial Mode

You can use a **voice frequency** [Tone] or **pulse** [Pulse] based dialling system .

Select the desired system and validate with OK
MENU.

Changing the flash duration

OK
MENU > **Settings** > Base settings > Flash time

You can configure the flash duration if you use your phone abroad or on a private network.

Select the desired value and validate with OK
MENU.

Alarm...

The alarm

The alarm sounds through the handset speaker.
To stop the alarm clock, press any key on the handset.

Programming the alarm


OK
MENU > **Settings** > Date/Time/Alarm > Alarm

To program the alarm:

- 1 Depending on the alarm status, enable or disable the **Alarm** function.
- 2 Select the time at which you want to be woken up.
- 3 If necessary, change the ring tone.

For further details, refer to the following sections.

Finding out the alarm status

When the icon  is displayed on the handset screen the alarm is activated.

Enabling / Disabling the alarm

OK
MENU > **Settings** > Date/Time/Alarm > Alarm >
Alarm On/Off


Select the desired state, **On** or **Off**, and validate with OK
MENU.


Once the alarm is enabled, the  icon is displayed on the screen.

Defining the wake-up time

 > **Settings** > Date/Time/Alarm > Alarm > Enter time


- 1 Enter the desired time and validate with .

When the 12-hour time format is set, use the  key to switch between AM (before 12 o'clock) and PM (after 12 o'clock).

- 2 Select the desired repetition frequency:
 - **Once:** a single time on the same day or on the following day at the set time.
 - **Daily:** every day at the set time.
- 3 Validate with .

Changing the ringing tone

 > **Settings** > Date/Time/Alarm > Alarm > Ringtone

Scroll down the list of available ring tones and confirm with .

Tracing your calls...

Call logs

Logs are lists of numbers or events received by your phone.

Depending on your line provider, call logs contain the following information :

- your contact's name or number,
- the call time or date.

Viewing the received call log



Scroll through the list of stored numbers. Missed calls are preceded by a black dot.

You can use the options described in section “**Managing incoming or outgoing calls**”, page 42.

A shortcut is set as default for the  key to access the log directly.

Viewing the dialled call log



Scroll through the list of stored numbers.

You can use the options described in section “**Managing incoming or outgoing calls**”, page 42.

Managing incoming or outgoing calls

Use the following options from the call list to:

- **Details:** display the information about the selected call,
- **Delete:** delete the selected log entry,
- **Delete all:** delete all the numbers in the list.
- **Call:** call the displayed number,
- **Store number:** save the number in your phonebook,

Configuring the incoming calls log

OK
MENU > **Call log** > Call log

- 1 Select the type of call to display in the incoming call log
 - **All Calls,**
 - **Missed calls only.**
- 2 Validate with **OK**
MENU.

The events log


A screen message tells you that you have received a call or voice mail in your absence:

- **Message !:** tells you that there is voicemail on your line provider's answering system,
- **New. call:** tells you that there is a missed call,
- **New. calls:** tells you that there are several missed calls.

Environment

Environmental protection and sustainable development is an important priority for Sagemcom. Sagemcom has a policy of using environmentally- friendly systems and makes environmental protection an essential part of the life-cycle of its products – from the manufacturing, to the installation, operation and disposal.


Packaging

 The logo (green point) on the packaging means that a fee is paid to an authorised national organisation to improve packaging recycling and the recycling infrastructure. Follow the local sorting regulations for this type of waste product in order to improve recycling.

Batteries

If your product contains batteries, they must be disposed of at the designated collection points.

The product

 The crossed out dustbin displayed on the product signifies that it belongs to the electrical and electronic equipment group. The European regulations request you to carry out your own selective recycling collection at :

- the sales outlet when you buy a similar new device.
- the collection points available in your area (recycling centres, sorting points, etc).

This means you participate in the recycling and valorisation of used electric and electronic goods which would otherwise have a negative impact on the environment and health.

Guarantee

Terms and Conditions for United Kingdom & Ireland only.

In order to apply the guarantee, you should contact the Sagemcom Helpdesk or the retailer where you purchased the equipment. Proof of purchase will be required in either case.

Please make sure that you use your equipment only for the purpose for which it was designed and under normal usage conditions.

Sagemcom do not accept any liability for the equipment if used outside the frame of its original designed purpose or any consequence that may arise from this usage.

Should any malfunction arise, the Sagemcom Helpdesk or your retailer will advise you how to proceed.

A)General Guarantee conditions

Sagemcom undertakes to remedy by repair or exchange at its own convenience, free of charge for labour and replacement parts, any defects in the equipment during the guarantee period of 12 (twelve) months or 3 (three) months for accessories, from the date of original invoice of the Equipment, where those defects are a result of faulty workmanship.

Unless the customer has concluded with Sagemcom a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer's premises, the repairs will not be carried out on the equipment at the customer premises.

The customer must however return the defective equipment at his/her own expense, to the address supplied by the Sagemcom Helpdesk or by the retailer.

In the case that a product needs to be sent in for a repair, it must always be accompanied by a proof of purchase (which is not altered, written on or in any way made illegible) showing that the product is still under guarantee. In the case that no proof of purchase is enclosed, the Sagemcom repair centre will use the production date as its reference for establishing the guarantee status of the product.

Apart from all legal obligatory rules, Sagemcom, do not give any Guarantee, either implicit or explicit which is not set force in the present section, and can not be held responsible for any direct or indirect, material or immaterial damage, either in or out of the frame of the present guarantee.

If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.

This guarantee does not affect the Customer statutory rights.

B)General Guarantee conditions

Sagemcom shall have no liability under the guarantee in respect of:

- Damage, defects, breakdown or malfunction due to one or more of the following :
 - Failure to properly follow the installation process and instructions for use
 - An external cause to the equipment (including but not limited to: lightening, fire, shock, vandalism, inappropriate conditions of electrical network or water damage of any nature)
 - Modifications made without the written approval of Sagemcom
 - Unsuitable operating conditions, particularly of temperature and humidity
 - Repair or maintenance of the equipment by persons not authorised by Sagemcom
- Wear and tear from normal daily use of the equipment and its accessories
- Damage due to insufficient or bad packaging of equipment when returned to Sagemcom
- Usage of new versions of software without the previous approval of Sagemcom
- Work on any equipment or software modified or added without the prior written consent of Sagemcom

- Malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment.
 - Communication problems related to an unsuitable environment including
 - Problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent
 - Transmission faults (for example poor geographical coverage by radio and TV transmitters, interference or poor line quality)
 - Local network faults (wiring, servers, workstations) or the failure of the transmission network (such as but not limited to interferences, fault or poor quality of the network)
 - Modification of the parameters of the cellular or broadcast network carried out after the sale of the Product
 - Normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out. Servicing costs are in any event always borne by the customer.
- Malfunctions resulting from the usage of products, consumables or accessories not compatible with the equipment.

C) Out of Guarantee Repairs

In the cases set forth in B) as well as after expiry of the guarantee period, the customer must ask the Authorised Sagemcom Repair Centre for a cost estimation prior to work being carried out.

In such cases, the repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the United Kingdom and Ireland.

SAGEMCOM

Sagemcom Broadband SAS

250, route de l'Empereur

92848 Rueil-Malmaison Cedex - France

Tel. +33(0)1 57 61 10 00 - Fax : +33(0)1 57 61 10 01

www.sagemcom.com

All rights reserved. Sagemcom Broadband SAS reserves the right to change the technical characteristics of its products and services or to stop marketing them at any time. The information and specifications included are subject to change without prior notice. Sagemcom Broadband SAS tries to ensure that all information in this document is correct, but does not accept liability for error or omission. Non contractual document. All trademarks are registered by their respective owners. Simplified joint stock company - Capital 35 703 000 € - 518 250 360 RCS Nanterre