

iDECT

USER GUIDE

iDECT X3i System

**Colour Display Telephone with
200 Name and Number Phonebook
and Answering Machine
and SMS Messaging**



**THIS EQUIPMENT IS NOT DESIGNED FOR MAKING
EMERGENCY TELEPHONE CALLS WHEN THE POWER
FAILS. ALTERNATIVE ARRANGEMENTS SHOULD BE
MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.**

UK (BTP) Ver 2, Jun 2007

Before operating this set,
please read these instructions carefully.

Important note-

This telephone is not designed for making Emergency calls when the main power fails. For Emergency calls you should have a basic phone that does not need mains power, connected to your line so that you can make calls during a power failure.

iDECT Helpline 0845 345 9677 (for UK only)

Monday to Friday from 9:00am to 5:00pm

****Please note that all calls are charged at local rate**

Or visit our website: **www.idectonline.com**

Charging batteries for the first time

Before you start to use your telephone make sure that all batteries are fully charged for 24 hours.

Unpacking your phone

In the box you will find:

- the **cordless handset** (two handsets with a Twin system, three with a Triple system, four with a Quad system and five with a Quin system)
- the **base unit**
- **One 2.4V 600mAh rechargeable battery pack** and **a battery compartment cover for each handset**
- a **telephone line cable** for the base unit
- a **mains power lead**, and **DC 7.5V 600mA adapter** for the base unit
- **charger pods**, each with a connected mains power lead and **DC 7.5V 480mA adapter**, for multi-handset system
- User Guide

**** Keep your sales receipt as it is your guarantee**

Where to find it

Colour Display with backlight

Left Soft/ Menu Access button

Press to access menu.
Press for OK.

Navigation buttons

UP▲: access dialled calls.
Increase volume of earpiece and handset speaker.
DOWN▼: access to phonebook.
Decrease volume of earpiece and handset speaker.

PHONE button

Press to make or answer a phone call.

Speakerphone button

Press to make or answer a phone call in speakerphone mode, or to switch speakerphone mode on or off during a call.

Star button *

RECALL button

You may need the Recall function if your phone is to a PBX, or if you use BT's Supplementary Services.

Handset mouthpiece

Charge LED

This shows handset is charging.

EARPIECE

Right Soft/ Phonebook button

Press to access phonebook menu.
Press for BACK / CLEAR.

HANG UP/ C button and power ON/OFF

Press to end a call.
Press during programming to go back to idle mode.
Press and hold to switch off the handset.
Press to switch back on.

SMS button

Press to access to the messaging menu.

HASH/Keypad lock button

Press to lock keypad.
Press for conference calls.

Answering Machine Loudspeaker volume control

Adjust volume during playback


Answering Machine Microphone

INTERCOM button

Press for intercom calls.


In-use LED

Lights up when the base power is on.
Flashes when the line is in-use.

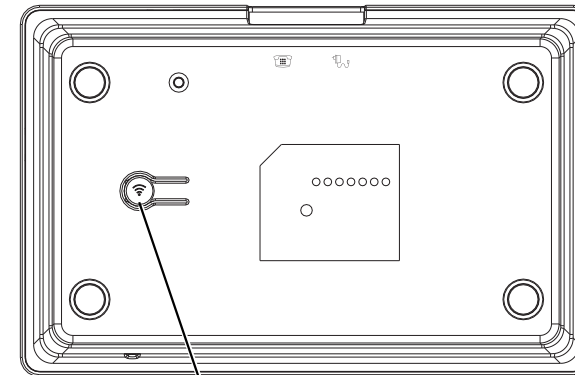

PAGE button


Answering machine buttons

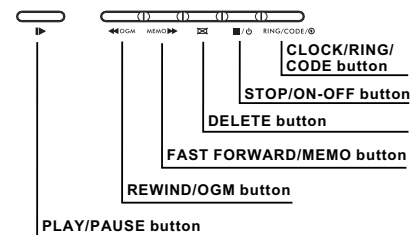





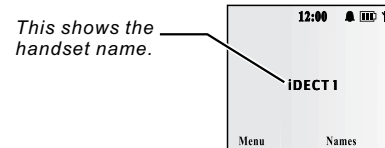


The functions of these buttons are described on pages 39-44.

What's on the display?

The display of your telephone contains one line of icons and the time at the top, the soft key functions at the bottom, and a graphic display showing more icons, the handset name, and details of names, numbers and menu lists.




Display in standby mode. If activated the following icons and text are shown -

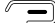
-  Alarm active
- 12:00** Current time
- iDECT 1** Handset name
- Menu** Left soft key  to access **Menu**
-  Battery status: full, 50% charged, flat
-  Radio signal indicator
-  Ring tone off
-  Keypad lock active
- Names** Right soft key  to access **Phonebook**




List of Menu Features

How to Select a Menu Option

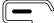To access the main menu, press the left soft key ; the menu option will be displayed.

You can access the useful phone features that are organised in the different menus with the navigation keys on your iDECT X3i.

The navigation keys  allow you to navigate in a specific direction by pressing on the corresponding keys.

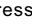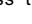To navigate within the menu options in the iDECT X3i, simply press UP/ or DOWN/ key until you reach your selected option; then press the left soft key  to confirm the selected option.

What the symbols mean?



SMS

New Message
Inbox
Outbox
Delete Messages
Settings



Calls Lists

Received Calls
Missed Calls
Dialled Calls
Delete Calls List



Handset

Ringtone
Ring Volume
Ear Volume
Handset Name
Language
Menu Colour
Auto Talk
PABX AccessCode
Wall paper



Base Settings

Handset Priority
Recall Mode
Dial Mode
System PIN



Clock - Time Settings

Alarm
Set Date & Time



Registration

Register Handset
Select Base
De-register

Contents

What the symbols mean	1	To edit contacts in phonebook	16
Contents	2	To store a last number redial entry in phonebook	17
Read First before Use	3	Dialling from phonebook	17
Choosing a site for the base unit and charger pod	3	Caller ID log	18
Radio signals between handset and base unit	3	Handset ringer volume, melody	20
Interference	4	Using a multi-handset system	21
"Out of range" warning	4	Paging handset	22
Mains power connection	4	Handset registration	23
Battery safety	4	SMS text messaging	26
If you have a broadband line	4	Write and send a message	29
Installation and Set-up	5	Save a text message to outbox	29
Choose a suitable site for the base unit	5	Delivery receipt	30
Connect the mains power lead	5	Read your text message	30
Plug the main adaptor into your wall socket	5	Reply to a message	31
Fit the rechargeable batteries in each Handset	6	Forward a message	31
Charge the batteries for 24 hours before 1 st time use	6	Delete a message	32
Connect the base unit to the telephone line	7	Delete all messages	32
Setting SMS	7	Advanced use of your Phone	33
Your Telephone Operations	8	Handset advanced settings	33
Switching on/off your phone	8	Shortcut to clear phonebook memory	34
To lock/unlock the keypad	8	Set to default settings	35
Set time and date	8	Change your PIN code	36
Set the alarm	9	Select mode for dialling	37
Your handset's name (change the name)	10	Set flash time (Recall)	37
Select your phone language	11	Set handset priority	38
Select your handset display colour	11	Setting up the answering machine	39
Select your handset wallpaper	12	Setting the day, clock, number of rings and security remote code	39
Making and answering calls & earpiece volume adjustment	12	To check the day, clock, number of rings and security remote code of your answering machine	40
Last number redial function	13	To set ring volume	40
Memory/Phonebook management	14	Outgoing messages (OGMs)	41
To create a contact in your phonebook	15	To record OGM1	41
To delete contacts in your phonebook	15	To record OGM2	41
		Using the answering machine	42
		Switch on/off the answering machine	42
		To switch between OGMs	42
		To record a memo	42
		To play back your messages	43
		To go back to the default OGMs	44

Remote Operation	45	Troubleshooting	47
To check your messages remotely	45	Cleaning and Care	51
Remote Operation keys	45	Declaration of Conformity	51
Keys to press during remote operation	45	Guarantee and Service	52
Switching on remotely	46	Technical Details	53

Read First Before Use

Choosing a site for the base unit and charger pod

The base unit and charger pod(s) should be placed on a level surface, in a position where:

- the mains adapter plug will reach an easily accessible 230-VAC switched mains supply socket - never try to lengthen the mains power cable.
- the base unit's telephone line cable will reach your telephone line socket or extension socket (the charger pod does not have a telephone line connection).
- it is not close to another telephone - this can cause radio interference.
- it is not close to a sink, bath or shower, or anywhere else where it might get wet.

NOTE: if the base comes into contact with liquids, disconnect it promptly and use a soft cloth to dry it; if you believe that the liquid has seeped into the unit, do not reconnect the base station. Contact the IDECT Helpline. Follow the same procedure for your handset and remove the internal batteries.


- it is not close to other electrical equipment - fridges, washing machines, microwave ovens, fluorescent lights, televisions etc.
- it is away from hot, humid conditions and strong sunlight.

Radio signals between handset and base unit

Signal range between the handset and the base station is in accordance with the approved standard for DECT phones:

- Maximum range: 300 metres outdoors.
- Maximum range: 50 metres indoor.

The signal range could become lower during normal use. Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete, between the handset and base unit may block the radio signal. The signal strength may also be reduced by other solid structures, like walls, or by other radio or electrical interference.

For stronger radio signal, it is recommended that your telephone is at the highest possible position. If there is no radio signal reception, Base 1 message and the signal level  icon will flash on the display.

Interference

If the sound quality gets worse as you move around while on a call, this is probably caused by interference between the handset and the base unit, perhaps because you are too near to another phone or other electrical equipment.

Move to a different position to clear the interference. If you do not move, it might cause a short break or your call may be cut off.

"Out of range" warning

If you hear a warning tone during a call, and the sound in the earpiece becomes faint or distorted, you may be going out of range of the base unit.

Move nearer to the base unit within 20 seconds, until the warning tone stops. Otherwise, your call may be cut off.

Mains power connection


IMPORTANT - The iDECT X3i base unit must be used with the mains adapter supplied with the unit. Using any other adapter will result in non-compliance with EN60950, and will invalidate any approval given to this apparatus.

Battery safety

ONLY use the rechargeable batteries supplied with the handset. **DO NOT** use non-rechargeable batteries - they may burst and cause damage to your telephone.

If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line; otherwise you may get interference between the telephone and the broadband, which could cause problems.

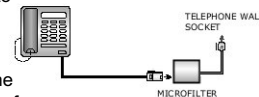


In a home with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to. If you need more broadband micro-filters, contact your broadband supplier.

Installation and Set-up

- 1 Choose a suitable site for the base unit (see page 3).**


- 2 Connect the mains power lead and the telephone line cord into the base unit.**

Plug one end of the telephone line cord into the socket on the back of the base. Use the telephone line cord supplied with your iDECT X3i - other line cords may not work with this phone.

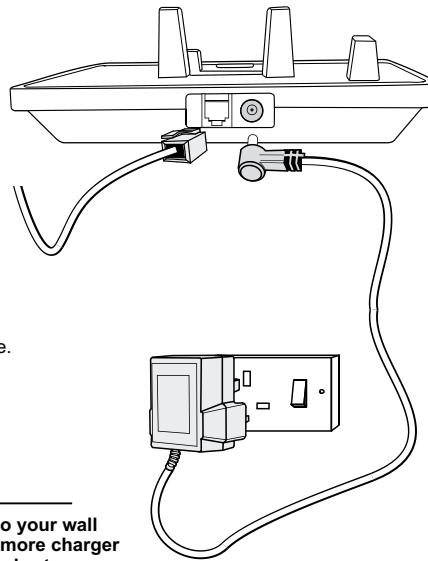


- 3 Plug the mains adaptor into your wall socket. If you have one or more charger pods, plug in the mains adaptors accordingly.**

Make sure that the 230VAC, 50Hz mains socket is switched OFF when you plug the mains adaptor into the socket. Switch it ON only when you have the adaptor plugged in safely.

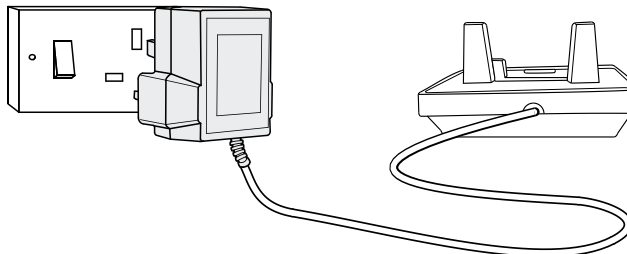

4 Fit the rechargeable batteries in each handset.

- A. Push down on the top of the battery compartment cover (located on the back of the handset) and slide the cover off as shown.
- B. Lift the battery pack and connect its plug to the socket inside the compartment, as shown.

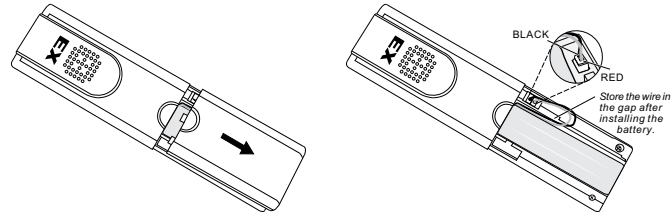

5 Charge the batteries for 24 hours before 1st time use.



Before you use the handset for the first time, it is important that you charge the batteries fully. You will hear a 'beep' when the handset is correctly positioned on the charging cradle.


Leave the handset on the base unit or charger pod for 24 hours. To keep the batteries charged, whenever you don't need to use the handset (such as overnight, or when you go out), leave it on the base unit or charger pod.

Battery life:
Standby time: 100 hours
Talktime: 10 hours

Note:

Battery life depends on device usage. Therefore, it is recommended that you read the following notes of caution.


- When the batteries are low, the handset will display the corresponding icon . Place the handset back on the base station: the battery icon  will start flashing.

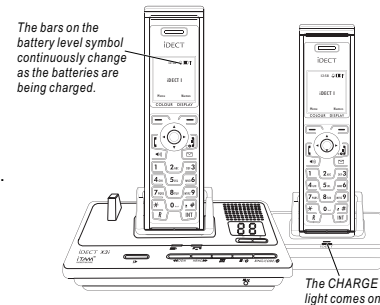

- Use only original batteries and charge them only on the original base station or charger pod(s).
- Insert the batteries properly as previously described.
- Do not dispose of the batteries in fire: this may cause an explosion.
- Remove the batteries from its compartment if the phone is not used for a long period of time.



6 Connect the base unit to the telephone line.

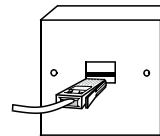Switch OFF power at the mains socket and insert the telephone line plug into the socket then switch mains power back ON.



Your Telephone Operations



Switching on/off

- 1  Press the **HANG UP/ C** button to turn the phone 'ON'.
- 2  Press the **HANG UP/C** button and hold for two seconds to turn the phone 'OFF'.
 - ** You can switch the handset off and save battery.
 - ** When the handset is in "off" mode, the unit can not be used for emergency calls.






Note: To answer a call when the handset is switched off, you need to switch it back on. It may take a few moments for the handset to re-establish a radiolink with the base unit.

To lock/unlock the key pad


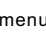







To lock





- 1  Press the **HASH** button and hold for 2 seconds until the  icon appears on the display.

To unlock

- 1  Press the  button to select '**Unlock**'.
- 2  Press the  button for '**Yes**' to confirm. The  icon will disappear from the display.








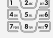


Set time & date

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Time setting**.
- 3  Press the  button.
→ The display shows **Time setting >Alarm**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Set Date & Time**.
- 5  Press the  button.
→ The display shows **Date:**.
- 6  Use the digit keys 0 to 9 to enter the date -format DD/MM.















- 7  Press the OK button.
→ The display shows **Time (24 Hr):**.
- 8  Use the digit keys to enter the time 0 to 9 -format HH:MM (It's a 24 hour clock).
- 9  Press the button to confirm.
→ The display shows **Time & Date Saved.**
- 10  Press the **HANG UP/C** button to return to idle mode.
** The time of Answering Machine need to be set separately.
(Ref to Page 39)

Set the Alarm

Set the Alarm















- 1  Press the menu button.
→ The display shows **SMS.**
- 2  Use the **UP/▲** or **DOWN/▼** to select **Time setting.**
- 3  Press the button.
→ The display shows **Time setting >Alarm.**
- 4  Press the button to select **Alarm.**
- 5  Press the button to select **On/Off.**
- 6  Use the **UP/▲** or **DOWN/▼** to select the frequency (On Once, On Daily or Off), then press **OK.**
 → The display shows **Time (24 Hr):**.
- 7  Use the digit keys 0 to 9 to enter the time -format HH/MM (24hour clock).
- 8  Press the button to confirm.
→ The display shows **Done.**
- 9  Press the **HANG UP/C** button to return to idle mode.
** Alarm tone will last for 1 minute and can be stopped by pressing any key on the handset.

Set Alarm tone



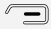








- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Time setting**.
- 3  Press the  button.
→ The display shows **Time setting >Alarm**.
- 4  Press the  button to select **Alarm**.
- 5  Use the **UP/▲** or **DOWN/▼** to select **Set Alarm Tone**.
- 6  Press the  button.
→ The display shows **Alarm Tone**.
- 7  Use the **UP/▲** or **DOWN/▼** to select the alarm tone (there are four tones to choose from).
- 8  Press the  button.
→ The display shows **Alarm Tone Saved**.
- 9  Press the **HANG UP/C** button to return to idle mode.

Your handset's name (change the name)

The name can be up to 8 characters.

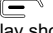

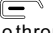








- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset >Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Handset Name**.
- 5  Press the  button.
→ The display shows **Name: iDECT**.
- 6  Press the  button to delete characters.
- 7  Use the digit keys to enter letters.
- 8  Press the  button to confirm.
→ The display shows **Done**.
- 9  Press the **HANG UP/C** button to return to idle mode.
- 10

Select your handset display language

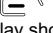- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset >Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Language**.
- 5  Press the  button, then press the **UP/▲** or **DOWN/▼** button to go through the language list (there are 4 languages to choose from).
- 6  Press the  button to select the language e.g. English, the display shows **English Saved**.
- 7  Press the **HANG UP/C** button to return to idle mode.












Note: The 4 languages are: *Italiano, Deutsch, Español, English*.

Select your handset display colour

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset >Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Menu Colour**.
- 5  Press the  button, then press the **UP/▲** or **DOWN/▼** button to go through the colour list (there are 3 colours to choose from).
- 6  Press the  button to select the colour e.g. Yellow, the display shows **Saved**.
- 7  Press the **HANG UP/C** button to return to idle mode.

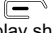
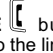


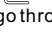

Note: The 3 colours are: *Blue, Green, Yellow*.


Select your handset Wallpaper

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset >Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Wallpaper**.
- 5  Press the  button, then press the **UP/▲** or **DOWN/▼** button to go through the wallpaper list: **Butterfly** and **Sunset**.
- 6  Press the  button to select the wallpaper
e.g. **BUTTERFLY**, the display shows **SAVED**.
- 7  Press the **HANG UP/C** button to return to idle mode.





Making and answering calls / Earpiece volume adjustment during calls

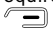Make a call

- 1  Press the **PHONE**  button or the **SPEAKERPHONE**  button to connect to the line.
- 2  Then dial the required telephone number.
- 3  Press **UP/▲** or **DOWN/▼** button to adjust the volume of the earpiece during your conversation (5 volume levels).
- 4  Press the **HANG UP/C** button to end the call.






Note: You can also make a call by using the Pre-dial function: Dial the required telephone number first (if you enter a wrong number use the  button to delete and re-enter) then press the **PHONE** button to make the call.

Answer a call


- 1  Press the **PHONE**  button or Speakerphone button to answer a call when the telephone rings.
- 2  Press **UP/▲** or **DOWN/▼** button to adjust the volume of the earpiece during your conversation (5 volume levels).
- 3  Press the **HANG UP/C** button to end the call.

Note: If Auto answer is set then lifting the handset off the base or charger will answer the call and no buttons need to be pressed.


Last number redial function


- 1  Press **UP/▲** to view dialled calls.
→ The display shows **Dialled calls**.
- 2  Use the **UP/▲** or **DOWN/▼** button to stroll through the list of dialled numbers.
- 3  Once selected press the **PHONE**  button to dial.
- 4  Press the **HANG UP/C** button to end the call.

Memory/Phonebook management

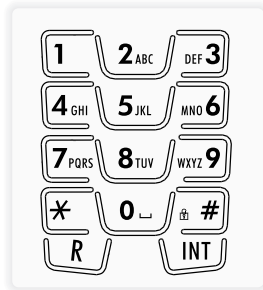



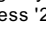


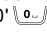

How to enter characters?

To use the characters you press on the button where you see the character, e.g. if you want to insert the letter 'A', you press '2' \ , if you want to insert the letter 'B', you press twice and for 'C', three times etc.

If you want to insert 'AA', then you will have to wait for the first 'A' to stop flashing then insert the second 'A'. Press '0' \  for space.

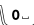Key pad table













	. , 1 ; : ! ? i ð ' "		P Q R S 7 p q r s ß
	A B C 2 a b c à á â ã ä å æ ç ?		T U V 8 t u v ù ü
	D E F 3 d e f è ê ë é		W X Y Z 9 w x y z)
	G H I 4 g h i ï î ï		(Space) 0 @ & = + - < > %
	J K L 5 j k l -		* / \ () £ \$ ¥
	M N O 6 m n o ñ ò ó ô õ ö ø ö		# \$ _ ^ ~ { []

* When entering text the INT key can be used to change the letter case.














* The right and left arrows can be used to move back and forth through text.

To create a contact in your phonebook













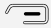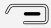


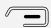
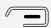




Names can be up to 16 characters and numbers can be up to 20 digits.

- 1  Press the  button.
→ The display shows **Names >Find Entry**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Add Entry**.
- 3  Press the  button.
→ The display shows **Add Entry >Name:**.
- 4  Use the digit keys to enter the name, e.g. **Jane**.
- 5  Press the  button to confirm.
→ The display shows **Add Entry >Number:**.
- 6  Use the digit keys to enter the number, e.g. **123456789**.
- 7  Press the  button to confirm and the name of the person would appear.
→ The display shows **Jane Added to names**.
- 8  Press the **HANG UP/C** button to return to idle mode.






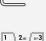
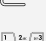



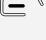
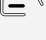


To delete contacts in your phonebook

- 1  Press the  button.
→ The display shows **Names >Find Entry**.
- 2  Press the  button, your phonebook list will appear.
- 3  Use the **UP/▲** or **DOWN/▼** button to scroll through the list of names in your PHONEBOOK, or press the digit keys to skip directly to entries beginning with the same letter.
- 4  Press the  button to select.
- 5  Use the **UP/▲** or **DOWN/▼** to select **Delete Entry**.
To delete all contacts in your phonebook, select **Delete all phonebook.*
- 6  Press the  button.
→ The display shows **Delete ...?**.
- 7  Press the  button to confirm.
- 8  Press the **HANG UP/C** button to return to idle mode.









To edit contacts in phonebook

- 1  Press the  button.
→ The display shows **Names >Find Entry**.
- 2  Press the  button, your phonebook list will appear.
- 3  Use the **UP/▲** or **DOWN/▼** button to stroll through the list of names in your PHONEBOOK.
- 4  Press the  button to select.
- 5  Use the **UP/▲** or **DOWN/▼** button to select **Edit Entry**.
- 6  Press the  button.
→ The display shows **Edit Entry >Name:....**
- 7  Press the  button to delete characters.
- 8  Use the digit keys to enter new characters, e.g. Jane.
- 9  Press the  button.
→ The display shows **Edit Entry >Number:....**
- 10  Press the  button to delete numbers.
- 11  Use the digit keys to enter new numbers, e.g. 123456789.
- 12  Press the  button to confirm.
→ The display shows **Jane saved**.
- 13  Press the **HANG UP/C** button to return to idle mode.

To store a last number redial entry in phonebook











- 1  Press the **UP/▲** to view dialled calls.
→ The display shows **Dialled calls**.
- 2  Use the **UP/▲** or **DOWN/▼** button to stroll through the list of dialled numbers.
- 3  Press the  button to select.
- 4  Use the **UP/▲** or **DOWN/▼** button to select **Save Number**.
- 5  Press the  button.
→ The display shows **Name:**.
- 6  Use the digit keys to enter characters for the name, e.g. Jane.
- 7  Press the  button for **OK**.
→ The display shows **Number:**.
- 8  Check if it is the number you want to save then press the  button for **OK**.
→ The display shows **Jane Added to names**.
- 9  Press the  button to go back to dialled calls list.

Dialling from phonebook




- 1  Press the  button.
→ The display shows **Names >Find Entry**.
- 2  Press the  button to select.
- 3  Use the **UP/▲** or **DOWN/▼** button to stroll through the phonebook.
- 4  Press the **PHONE**  button to dial and the telephone number will appear.
- 5  Press on **HANG UP/C** button to hang up.










Caller ID log

To review the caller ID log



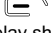





- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Calls lists**.
- 3  Press the  button.
→ The display shows **Calls lists >Received calls**.
- 4  Press the  button and a list of received calls will appear.
- 5  Use the **UP/▲** or **DOWN/▼** button to stroll through the list of received numbers.
 **If you want to dial a telephone number from the list press **PHONE** and the number will appear.*
- 6  Press the **HANG UP/C** button to go back to idle mode.

To delete the caller ID log





















- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Calls lists**.

If you want to clear all...:
 - 1  Press the  button.
 - 2  Use the **UP/▲** or **DOWN/▼** to select **Delete Calls List**.
 - 3  Press the  button.
→ The display shows **Delete Calls List >Received calls**.
 - 4  Press the  button.
→ The display shows **Delete received calls list?**
 - 5  Press the  button for **OK**.
→ The display shows **All received calls deleted**.

If you want to clear individually...:













- 1  Press the  button, the list of callerID will appear.
- 2  Use the **UP/▲** or **DOWN/▼** to stroll through the list of received numbers.
- 3  Once selected the number you want to delete, press the  button.
→ The display shows **Delete**.
- 4  Press the  button.
→ The display shows **Call Deleted**.
 Press the **HANG UP/C** button to go back to idle mode.

To store a Caller ID contact in the phonebook

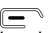












- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Calls lists**.
- 3  Press the  button.
→ The display shows **Calls lists >Received calls**.
- 4  Press the  button to select and a list of received calls will appear.
- 5  Use the **UP/▲** or **DOWN/▼** button to stroll through the list.
- 6  Press the  button.
- 7  Use the **UP/▲** or **DOWN/▼** button to select **Save Number**.
- 8  Press the  button for **OK**.
→ The display shows **Name:**.
- 9  Use the digit keys to enter characters of the name, e.g. Jane.
- 10  Press the  button for **OK**.
→ The display shows **Number:**.
- 11  Check if it is the number you want to save.
- 12  Press the  button for **OK**.
→ The display shows **Jane Added to names**.
- 13  Press the **HANG UP/C** button to go back to idle mode.

Handset ringer volume, melody

Change handset ringer volume




- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset >Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** button to select **Ring Volume**.
- 5  Press the  button.
- 6  Use the **UP/▲** or **DOWN/▼** button to choose the ringer volume you want (Level from silent to 5).
- 7  Press the  button for **OK**.
→ The display shows **Ring Volume Saved**.
- 8  Press the **HANG UP/C** button to go back to idle mode.




Change handset ringer melody

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset >Ringtone**.
- 4  Press the  button.
- 5  Press the  button to select **External Call**.
- 6  Use the **UP/▲** or **DOWN/▼** button to choose the ringer melody you want (from 1 to 10), e.g. Melody 7.
- 7  Press the  button for **OK**.
→ The display shows **Ringtone Saved**.
- 8  Press the **HANG UP/C** button to go back to idle mode.

Using a multi-handset system







Make intercom calls

- 1  Press the **INTERCOM**  button on any handset (i.e. handset 1).
→ The display shows **Internal Call**.
- 2  Use the digit buttons to enter the handset number you want to call. (e.g. Handset 2)

Handset 2 will ring.
- 3  Press the handset 2's **PHONE**  button to answer intercom call.
- 4  Press the **HANG UP/C** button to go back to idle mode.




Transfer calls



When one handset is on an external call and you want to transfer call to another handset.

- 1  Press the **INTERCOM**  button on your handset.
→ The display shows **Internal Call**.
- 2  Use the digit buttons to enter the handset number you want to transfer the call to and the external caller will be automatically put on hold. (e.g. Handset 2)
- 3 Handset 2 will ring.
- 4  Press **PHONE**  on ringing handset and the two internal handsets will be connected and can hold a private conversation, while the external call remains on hold.
- 5  You can press the handset 1's **HANG UP/C** button to transfer call to handset 2. Which ever of the handsets hangs up first will automatically connect the other handset to the external call.

Set up a three-way conference


You can have a three-way conference when you are on a call with an external line.

- 1  Press the **INTERCOM**  button on your handset.
→ The display shows **Internal Call**.
- 2  Use the digit buttons to enter the handset number you want to enter the conference and the external caller will be automatically put on hold. (e.g. Handset 2)

Handset 2 will ring.
- 3  When the handset 2 answers your intercom call, press and hold the handset 1's **HASH** button to enter conference call.
- 4  Any party can exit the conference by pressing the **HANG UP/C** button, leaving the other two parties connected.

Paging handset

The paging function is useful when you need to locate your handset(s).

At the bottom of the base set you will find the **HANDSET LOCATOR**  button.












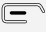


- 1  Press the **HANDSET LOCATOR**  button and your handset(s) will ring.
- 2  Press  or  button of the handset to stop it ringing.

Handset registration

* When you purchase a iDECT X3i multi-handset system, all handsets are already registered: you do not need to register any of the handsets.










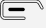
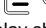





* Handset registration is only necessary when you buy an extra-handset by itself.

Registering a handset

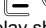- 1  On the base unit, press and hold the **Handset Locator**  button at the bottom of base set until you hear registration tone (repeated 'beeps').
- 2  On the handset unit, press the menu  button.
→ The display shows **SMS**.
- 3  Use the **UP/▲** or **DOWN/▼** button to select **Registration**.
- 4  Press the  button.
→ The display shows **Registration > Register Handset**.
- 5  Press the  button.
- 6  Use the **UP/▲** or **DOWN/▼** button to stroll through the list of base. (If any of the list with Star * at right side, the handset is already registered to that base unit.) When you reach the base you want to register, press the  button to select. (e.g. Base 1)
→ The display shows **System PIN**.
- 7  Enter the PIN using the digit buttons. (Default PIN: 0000)
- 8  Press the  button for **OK**.
→ The display shows **Base Search**.
**The display will go back to idle mode if the registration is successful.*

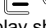


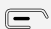







De-registering a handset

*This operation is necessary when one of your handset is out of order and needs to be repaired.

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Registration**.
- 3  Press the  button.
→ The display shows **Registration > Register Handset**.
- 4  Use the **UP/▲** or **DOWN/▼** button to select **De-register**.
- 5  Press the  button.
→ The display shows **System PIN**.
- 6  Enter the PIN using the digit buttons. (Default PIN: 0000)
- 7  Press the  button for **OK**.
→ The display shows **Please Wait**.
- 8  Use the **UP/▲** or **DOWN/▼** button to stroll through the list of handset. When you reach the one you want to de-register press the  button to select. (e.g. Handset 1)
→ The display shows **Confirm?**.
- 9  Press the  button for **OK**.
→ The display will show **De-registered**.
- 10  Press the **HANG UP/C** button to go back to idle mode.

Note: You can't delete your own handset.

Select a base unit

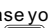- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Registration**.
- 3  Press the  button.
→ The display shows **Registration > Register Handset**.
- 4  Use the **UP/▲** or **DOWN/▼** button to select **Select Base**.
- 5  Press the  button.
- 6  Use the **UP/▲** or **DOWN/▼** button to stroll through the different bases.
- 7  Once you have selected the base you want to register the handset to the base, press the  button to select. (e.g. Base 1)
→ The display shows **Registered to Base**.

* The display will go back to idle mode if the handset search to base is successful.

* **AUTOMATIC** to let the handset search for the nearest free base unit.

SMS text messaging

If the iDECT X3i is the only phone connected to the phone line, the "Terminal Number" parameter in the SMS settings menu (see "SMS text messaging") should be set to 9.

The default setting for the terminal number of iDECT X3i is generally set to 9.








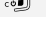
If multiple SMS-enabled phones are connected to the same phone line, for the SMS service to function properly, you will have to identify the enabled main phone to receive all the SMS messages for the line. The terminal number for this phone has to be set to 9.

The other phones that have an individual and different terminal number, ranging between 1 and 8, will also be able to send and receive SMS messages properly.










Note: Different terminals using the same telephone line should each be assigned a unique terminal number different from the other phones.

You can send and receive up to 35 standard SMS messages with a maximum of 160 characters, or up to 8 messages with up to 612 characters.











Set terminal number

- 1  Press the **MESSAGE** button.
→ The display shows **SMS > New Message**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Settings**.
- 3  Press the **RIGHT** button.
→ The display shows **Settings > Service Centres**.
- 4  Use the **UP/▲** or **DOWN/▼** button to select **Terminal Number**.
- 5  Press the **RIGHT** button.
→ The display shows **Terminal Number**. (Default is 9)
- 6  Use the **UP/▲** or **DOWN/▼** button or **KEYPADS** to enter the terminal number.
- 7  Press the **RIGHT** button for **OK**.
→ The display shows **Done**.
- 8  Press the **HANG UP/C** button to go back to idle mode.






 

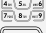
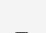

Set SMS alert

- 1  Press the **MESSAGE** button.
→ The display shows **SMS >New Message**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Settings**.
- 3  Press the button.
→ The display shows **Settings > Service Centres**.
- 4  Use the **UP/▲** or **DOWN/▼** button to select **SMS Alert**.
- 5  Press the button.
→ The display shows **Set Alert >Off**.
- 6  Use the **UP/▲** or **DOWN/▼** button to choose **Off**, **On** or **Set Alert**.
*If you select **Set Alert**, there are three tones to choose from (**Morse**, **Discreet** and **Polyphonic**.)
- 7  Use the **UP/▲** or **DOWN/▼** button to choose tone.
- 8  Press the button for **OK**.
→ The display shows **Ringtone saved**.
- 9  Press the **HANG UP/C** button to go back to idle mode.









Set receive centre number

- 1  Press the **MESSAGE** button.
→ The display shows **SMS >New Message**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Settings**.
- 3  Press the button.
→ The display shows **Settings > Service Centres**.
- 4  Press the button.
- 5  Use the **UP/▲** or **DOWN/▼** button to select **Receive Centre**.
- 6  Press the button.
→ The display shows **Receive Centre**. (Default: 080058752)
- 7  Press the button to clear number.
- 8  Use the keypad to enter the new service centre number.
- 9  Press the button for **OK**.
→ The display shows **Done**.
- 10  Press the **HANG UP/C** button to go back to idle mode.











Set sending centre number

- 1  Press the **MESSAGE** button.
→ The display shows **SMS >New Message**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Settings**.
- 3  Press the button.
→ The display shows **Settings > Service Centres**.
- 4  Press the button.
- 5  Use the **UP/▲** or **DOWN/▼** button to select **Sending Centre**.
- 6  Press the button.
→ The display shows **Sending Centre**.
(Default: 1470P17094009)
- 7  Press the button to clear number.
- 8  Use the keypad to enter the new sending centre number.
- 9  Press the button for **OK**.
→ The display shows **Done**.
- 10  Press the **HANG UP/C** button to go back to idle mode.

Selecting message size





- 1  Press the **MESSAGE** button.
→ The display shows **SMS >New Message**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Settings**.
- 3  Press the button.
→ The display shows **Settings > Service Centres**.
- 4  Use the **UP/▲** or **DOWN/▼** button to select **Message Size**.
- 5  Press the button.
- 6  Use the **UP/▲** or **DOWN/▼** button to choose **612 Chars** or **160 Chars**.
- 7  Press the button for **OK**.
→ The display shows **Done**.
- 8  Press the **HANG UP/C** button to go back to idle mode.

Write and send a message

- 1  Press the **MESSAGE** button.
→ The display shows **SMS >New Message**.
- 2  Press the button.
- 3  Enter the text message using the alphanumeric keypad. Press the number key corresponding to your desired alphabet (see Memory phonebook management for keys).
* You can clear by pressing the button.
- 4  Once you have finished your message, press the button.
→ The display shows **Send to**.
- 5  Press the button.
→ The display shows **Number:**.
 Enter the number you want to send the message to.
Or
 Press the button to search your phonebook.
 Use the **UP/▲** or **DOWN/▼** button to stroll through your phonebook.
 Once you have found the name you want to send the message to press the button to select and number of the person would appear.
 Press the button for **OK**.
Once the message is sent the display will go back to idle mode.









Note: You can insert a symbol using the symbol table when writing a message by pressing **OPTIONS**, **DOWN** twice and **OK**.

Save a text message to Outbox

- After writing a message you can save the message in outbox.
- 1  Once you have finished your message press the button.
→ The display shows **Send to**.
 - 2  Press the **DOWN/▼** button until **Save**.
 - 3  Press the button.
→ The display shows **Saved**.
 - 4  Press the **HANG UP/C** button to go back to idle mode.



Delivery receipt

Before sending a message, you can activate the delivery receipt feature that confirms whether or not the message has been sent.










- 1  Once you have completed your message, press the  button.
→ The display shows **Send to**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Notify**.
- 3  Press the  button.
→ The display shows **Notify >Off**.
- 4  Use the **UP/▲** or **DOWN/▼** button to select **On** or **Off**.
- 5  Once selected, press the  button.
→ The display shows **Done**.
* The display will go back to message mode and you can continue to send your message.

Read your text message

When you receive an incoming message, the handset will emit an alert tone and the message icon will appear on the display. The message received will be saved in Inbox.






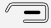

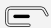
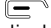


 
 You can read the message by pressing the  button.

If you want to read an old message...

- 1  Press the **MESSAGE**  button.
→ The display shows **SMS >New Message**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Inbox**.
- 3  Press the  button.
- 4  Use the **UP/▲** or **DOWN/▼** button to stroll through the messages.
- 5  Once you are on the message you want to read, press the  button for **OK**.
- 6  Press the **HANG UP/C** button to go back to idle mode














Reply a message


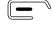



 
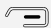

When you have read a message and want to send a reply.

- 1  Press the  button to select.
→ The display shows **Reply**.
- 2  Press the  button.
- 3  Enter the text message using the alphanumeric keypad.
Press the number key corresponding to your desired alphabet
(see Memory phonebook management for keys).
- 4  You can clear by pressing the  button.
- 5  Once you have completed the message, press the  button twice to send and the number would appear on the display.
- 6  Press the  button.
→ The display shows **Sending SMS**.
- 7  Once the message is sent, the display will show **Message Sent** and it will go back to idle mode.

Forward a message

When you read a message and you want to forward the same message to another recipient.



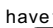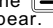





- 1  Press the  button to select.
→ The display shows **Reply**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Forward**.
- 3  Press the  button.
- 4  The message will appear and you can change the text using the alphanumeric keypad. Press the number key corresponding to your desired alphabet (see Memory phonebook management for keys).
- 5  You can clear by pressing the  button.
- 6  Once you have finished your message press the  button.
→ The display shows **Send to**.
- 7  Press the  button for **OK**.
- 8  Enter the number you want to send the message to.
Or

- 1  Press the  button to search your phonebook.
- 2  Use the **UP/▲** or **DOWN/▼** button to stroll through your phonebook.
- 3  Once you have found the name you want to send the message to press the  button to select and number of the person would appear.
- 4  Press the  button for **OK**.
→ The display shows **Sending SMS**.
- 5  Once the message is sent, the display will show **Message Sent?** and it will go back to idle mode.

Note: You can send a saved message by following the above instructions.








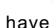

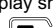
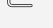

Delete a message

When you read a message and you want to delete it.

- 1  Press the  button to select.
→ The display shows **Reply**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Delete**.
- 3  Press the  button to select.
- 4  Press the  button for **OK**.
- 5  Press the **HANG UP/C** button to go back to idle mode.

Delete all messages


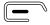










You can delete all inbox, all outbox or all messages.

- 1  Press the **MESSAGE**  button.
→ The display shows **SMS >New Message**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Delete Messages**.
- 3  Press the  button.
→ The display shows **Delete Messages >Inbox**.
- 4  Use the **UP/▲** or **DOWN/▼** button to select. You have the option to delete **Inbox**, **Outbox** or **All Messages**.
- 5  Once you have chosen, press the  button.
→ The display shows ... **Confirm?**
- 6  Press the  button.
→ The display shows **Please Wait...**
- 7  Once delete is successful, the display will show **Done**.
- 8  Press the **HANG UP/C** button to go back to idle mode.

Advanced use of your phone





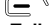


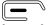



Handset advanced settings





Turn on/off Auto-answer

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset >Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Auto Talk**.
- 5  Press the  button.
- 6  Use the **UP/▲** or **DOWN/▼** to select **Off** or **On**. (Default is Off)
- 7  Once chosen, press the  button for **OK**.
→ The display shows **Auto Talk On/Off**.
- 8  Press the **HANG UP/C** button to return to idle mode.


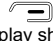
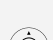

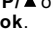



Set PABX External line access code

If you are using a switchboard with your telephone, you can set an external line auto access code. Once set, the code will be automatically selected before you redial a number in the missed/received calls list or an entry/number in the phonebook.

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset >Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **PABX Access Code**.
- 5  Press the  button.
→ The display shows **Set Code, On, Off**.
- 6  Use the **UP/▲** or **DOWN/▼** to select **Set Code**.
- 7  Once chosen, press the  button for **OK**.
→ The display shows **Set Code**.










- 8  Enter the code using the keypad.
- 9  Press the  button for **OK**.
→ The display shows **Access Code Saved**.
- 10  Press the **HANG UP/C** button to go back to idle mode.

Shortcut to clear phonebook memory


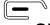








- 1  Press the  button.
→ The display shows **Names >Find Entry**.
- 2  Use the **UP/▲** or **DOWN/▼** button to select **Delete all phonebook**.
- 3  Press the  button to confirm.
→ The display shows **Delete all phonebook**.
- 4  Press the  button.
→ The display shows **Pbook Deleted**.
- 5  Press the **HANG UP/C** button to return to idle mode.

Set to default Settings
















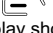


Set handset settings to default

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Handset**.
- 3  Press the  button.
→ The display shows **Handset > Ringtone**.
- 4  Press and hold the **HASH #**  button for two seconds.
→ The display shows **Set Default Confirm?**.
- 5  Press the  button for **OK**.
→ The display shows **Please Wait...**
- 6 Once the handset is set to default the display will go back to idle mode.













Set base settings to default

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Base settings**.
- 3  Press the  button.
→ The display shows **Base settings > Base Ringtone**.
- 4  Press and hold the **HASH #**  button for two seconds.
→ The display shows **Set Default Confirm?**.
- 5  Press the  button for **OK**.
→ The display shows **Done**.
- 6  Press the **HANG UP/C** button to go back to idle mode.

Change your PIN code













- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Base settings**.
- 3  Press the  button.
→ The display shows **Base settings > Base Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **System PIN**.
- 5  Press the  button.
→ The display shows **Enter Old PIN**.
- 6  Enter the old pin using the key pad.
- 7  Press the  button.
→ The display shows **Enter New PIN**.
- 8  Enter the new pin using the key pad.
- 9  Press the  button.
→ The display shows **Confirm New PIN**.
- 10  Enter the new pin again.
- 11  Press the  button.
→ The display shows **System PIN Changed**.
- 12  Press the **HANG UP/C** button to go back to idle mode.

Select mode for dialling

- 1  Press the  button.
→ The display shows **Menu >SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Base settings**.
- 3  Press the  button.
→ The display shows **Base settings > Base Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Dial Mode**.
- 5  Press the  button.
- 6  Use the **UP/▲** or **DOWN/▼** to choose **Pulse** or **Tone**.
- 7  Once selected, press the  button for OK.
→ The display shows **Dial Mode Stored**.
- 8  Press the **HANG UP/C** button to go back to idle mode.


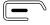








Set flash time (Recall)

You may need to set the time flash if your phone is connected to a PBX. The time of Recall 1 is 85ms and Recall 2 is 100ms.

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Base settings**.
- 3  Press the  button.
→ The display shows **Base settings > Base Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Recall Mode**.
- 5  Press the  button.
- 6  Use the **UP/▲** or **DOWN/▼** to choose **Recall 1** or **Recall 2**.
- 7  Once selected, press the  button for OK.
→ The display shows **Recall Mode Stored**.
- 8  Press the **HANG UP/C** button to go back to idle mode.

Set Handset Priority

 









If you have more than one handset you can set one handset to ring before the others.

- 1  Press the menu  button.
→ The display shows **SMS**.
- 2  Use the **UP/▲** or **DOWN/▼** to select **Base settings**.
- 3  Press the  button.
→ The display shows **Base settings > Base Ringtone**.
- 4  Use the **UP/▲** or **DOWN/▼** to select **Handset Priority**.
- 5  Press the  button.
- 6  Use the **UP/▲** or **DOWN/▼** to choose **All Handsets** or **Select Handset**.
- 7  Press the **HANG UP/C** button to go back to idle mode.

If you want to select All Handsets:

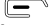- 1  Go to **All Handsets**.
- 2  Press the  button.
→ The display shows **All Handsets Ring**.

If you want to select a priority handset to ring before the others...:




- 1  Go to **Select Handset**.
- 2  Press the  button.
- 3  Use the **UP/▲** or **DOWN/▼** to stroll through the list of handsets.
- 4  Once you have chosen, press the  button
→ The display shows **Handset Priority**.
- 5  Use the **UP/▲** or **DOWN/▼** to stroll through the list rings (Ring 2, 4 and 6).
- 6  Once you have selected, press the  button.
→ The display shows **Handset Priority Saved**.
- 7  Press the **HANG UP/C** button to go back to idle mode.

Setting up the answering machine





Setting the day, clock, number of rings and security remote code

If you pause too long between the steps listed below, the machine will time out and you will need to start again.



To set the day

-  Press and hold the **CLOCK/RING/CODE** button until the machine says 'SET DAY' and then the set day.
-  Press the **FAST FORWARD** or **REWIND** button until you reach the day you want to set. As you press the machine will say the days.
-  Press the **CLOCK/RING/CODE** button to confirm and the machine will say 'SET HOUR' and then the set hour (24-hour clock).






To set the clock

-  Press the **FAST FORWARD** or **REWIND** button until you reach the hour you want to set. As you press the machine will say the hour and the display on the base will display the hour.
-  Press the **CLOCK/RING/CODE** button to confirm and the machine will say 'SET MINUTES' and then the defaulted minutes.
-  Press the **FAST FORWARD** or **REWIND** button until you reach the minutes you wish to set. As you press the machine will say the minutes and the display on the base unit will also shows the minutes.
-  Press the **CLOCK/RING/CODE** button to confirm and the machine will say the day and time you have set, 'SET RING' and then the set number of rings.

To set the ring

-  Press the **FAST FORWARD** or **REWIND** button until you reach the rings you wish to set. As you press the machine say the number of rings.
-  Press the **CLOCK/RING/CODE** button to confirm and the machine tell you the number of rings you have set. The machine will then say 'SET SECURITY CODE' and the first digit of the set security remote code.

To set the security remote code

- 1  Press the **FAST FORWARD**  or **REWIND**  button until you reach the first number you want to set. As you press the machine will say the number and the display on the base will also shows it (the code has 3 digits, and the default is 321).
- 2  Press the **CLOCK/RING/CODE**  button to confirm and the machine will say the first digit you have set and '2' for the second digit.
- 3 Repeat steps 1 and 2 to set the second and third digit for the security remote code. When you have set all 3 digits the machine will say the numbers you have set.

 


Note: If you wish to change the day, clock, ring or security code then just repeat the same steps as above.

To check the day, clock, number of rings and security remote code of your answering machine

- 1  Press the **CLOCK/RING/CODE**  button and the machine will say all settings.

Note: The machine can answer calls after two to ten rings.
If you do not set the number of rings, the machine will answer after five rings.

To set ring volume

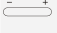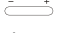- 1  During standby stage.
- 2  Press the **VOLUME -** or **+**  buttons to select volume of ringer.
The base display will show the setting from r0 to r5, where r0 is off and r5 is the loudest setting. The base ringer will sound as the setting is changed.

Outgoing messages (OGMs)

An OGM is the greeting the caller hears when he/she gets through to the answering machine. The X3i has two OGMs and you can record your own message.





OGMs that are already on the machine:

OGM1- this invites callers to leave a message: **'Sorry, we cannot answer your call now. Please leave your message after the beep.'**


 



OGM2 - this simply asks callers to try later and does not give them the opportunity to leave a message: **'Please call later.'**

If you wish to create your own OGM, you can record between 4 seconds to 2 minute. If you speak for less than 4 seconds, your message will not be recorded.

To record OGM1

-  Press and hold the **ON/OFF/STOP** button until the machine says '**ANSWERING MACHINE ON**' and the base unit's display should change from -- to 00.
-  Press and hold the **OGM/REWIND** button until you hear a beep and the segments on the base unit's display will start to rotate.
-  Record your personal **OGM**, speaking clearly from a distance of about 15cm (6 inches) from the base unit's microphone.
-  When you have finished speaking press the **ON/OFF/STOP** button to stop the recording and the machine will play back your recorded **OGM**. If you want to change it, simply record it again by following steps 1 - 4.

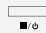

To record OGM2

-  If the machine is not on press and hold the **ON/OFF/STOP** button until the machine says '**ANSWERING MACHINE ON**'. The base unit display should shows 00.
-  Press the **ON/OFF/STOP** button and the base unit display should shows 02 then A0.
-  Press and hold the **OGM/REWIND** button until you hear a beep and the segments on the base unit's display will start to rotate.
-  Record your personal **OGM**, speaking clearly from a distance of about 15cm (6 inches) from the base unit's microphone.
-  When you have finished speaking press the **ON/OFF/STOP** button to stop the recording and the machine will play back your recorded **OGM**. If you want to change it, simply record it again by following steps 1 - 4.

Note: You can listen to your OGM at any time by pressing the OGM button.
iDECT Help Line(forUK only): 0845 345 9677 (Local Call rate)

Using the answering machine



Switch on/off the answering machine

-  Press and hold the **ON/OFF/STOP**  button to switch the machine 'on' or 'off'.

When the machine is first switched on, **OGM1** is selected, so callers will be able to leave messages. The base unit's display flashes to show the number of new messages; or shows the total number of messages with a steady display if there are no new messages.

When the machine is switched off, it will answer after 15 rings and play **OGM2**. You can switch it on using remote operation.

To switch between OGMs

-  Press the **ON/OFF/STOP**  button switch between OGM1 and OGM2.






When **OGM2** is selected, the display shows A0 (for 'announcement only', because callers can't leave messages). When you switch between OGMs, the machine will play the one selected.

Note: When **OGM2** is selected the machine will not record messages therefore if you want callers to leave messages make sure **OGM1** is selected.

To record a memo

To record a memo

You can record a memo (for 4 seconds to 2 minutes) directly into the machine. It will be played back together with any messages from callers.

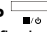-  Press and hold the **MEMO/FAST FORWARD**  button until you hear a beep sound and the segments on the base unit's display will start to rotate.
-  Record your memo, speaking clearly from a distance of about 15cm (6 inches) from the base unit's microphone.
-  When you have finished speaking press the **ON/OFF/STOP**  button to stop the recording and the base unit's display will flash the memo number e.g. if it's the first memo the display will flash 01, the second 02 etc.

To Play back your messages

Play messages



The base unit's display will show the number of new messages and/or memos (memos are counted as messages).

- 1  Press the **PLAY/PAUSE**  button to play all new messages and memos.



The machine will tell you the number of messages you have altogether; and then the number of new messages. Before playing each new message, it tells you the day and time it was recorded (according to the day and time you have set the machine).

Pause and restart message





- 1  Press the **PLAY/PAUSE**  button to play all new messages and memos.

When you press the **PLAY/PAUSE**  button, the base unit's display will show PA . If you don't press the **PLAY/PAUSE**  button to restart playback, it will restart automatically after a 2-minute pause.


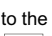
Play all messages

- 1  After playing your new messages you can press the **PLAY/PAUSE**  button again to play all your messages.

Repeat/Rewind



- 1  To repeat the current message, press the **REWIND/OGM**  button.
- 2  To replay the previous message, press the **REWIND/OGM**  button twice.

Skip/Fast Forward

- 1  To skip to the next message, press the **FAST FORWARD/MEMO**  button.

Volume control


To adjust the volume of the loudspeaker during playback:

- 1  Press the **VOLUME -** or **+**  buttons under the base unit display (there are 10 volume levels including L0 for 'off').

To intercept a call

If you hear the answering machine recording a message and you want to intercept the call and speak to the caller, you can:



Press the **PHONE**  button on the handset.

OR



Press the **SPEAKERPHONE**  button on the handset.

OR


Lift the handset of any other phone connected to the same line.

Note: When you intercept a call, the machine will stop recording the caller's message. If you intercept a call within 3 seconds of its start, the answering machine may not stop the machine recording.

To delete the current messages

1



Press the **DELETE**  button during playback.

To delete all old messages

1



Press and hold the **DELETE**  button until the machine says 'All messages deleted'.

Note: Remember to delete messages after you have listened to them otherwise the machine's memory may become full and will not be able to record any new messages. When the memory is full the base unit's display will show FU. (When the memory is full, it will answer after 15 rings.)

The machine will not delete any messages you have not yet listened to. The machine's memory has room for 12 minutes of recording time, or up to 55 individual messages.

To go back to the default OGMs

If you no longer want callers to hear the OGMs you have recorded, you can delete them and revert to the original OGMs.

1



If necessary, press the **ON/OFF/STOP**  button to switch to the OGM you want to delete.


2



Press the **OGM/REWIND**  button to play the message

3



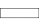

While the message is playing, press the **DELETE**  button.

Remote operation

You need to enter a three-digit pass number if you want to dial home to receive your messages. The original pass-number is **321**. Otherwise you are able to set your own three-digit pass number (please see page 39).

To check your messages remotely





- 1 Using a tone dialling phone, dial your home number
- 2  When you hear your outgoing message, press the **STAR**  button and you will hear 'Security code' and a 'beep'.
- 3 Enter your remote security code and you will hear a long 'beep'.
- 4 Press '2' on your handset to play back your messages and/or use the keys listed in the table overleaf.






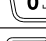
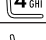
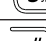
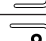
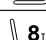

Note:

- At steps 2, 3 and 4, you must press the key within 7 seconds, or the machine will cut off your call.
- At step 3, if you key in the wrong code, you can try again. You have up to three attempts to get the code right before the machine cuts off your call.

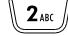Remote operation keys


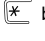
 
 
Keys to press during remote operation

Interrupt and bypass the outgoing message (OGM)	
Play new messages (after playing back new messages, you can press this again to hear all recorded messages)	
Pause and restart during message playback	
Skip the current message to the next one	

Repeat the current message	
Go back to the previous message	 
Stop playback or recording	
Delete the message currently being played back	
Delete all messages that have been played back	
Play the outgoing message (OGM1 or OGM2)	
Record a new outgoing message (OGM1 or OGM2)	
Record a memo	
Switch the machine on	
Switch the machine off	

Switching on remotely

If the answering machine is switched off, it will answer your call after 15 rings. To switch the machine on remotely:

- 1  When you hear your outgoing message, press the **STAR**  button
- 2  When you hear 'Security code' and a 'beep', key in your remote security code.
- 3  Press '9' on your handset to switch on.

Troubleshooting

ALWAYS check first that:

- You have followed all the steps listed on page 5 to install and setup your iDECT X3i.
- All **connectors** are firmly inserted in their sockets.
- **Mains power** to the base unit is switched on at the socket.
- The handset's **batteries** are correctly and securely installed and are not run down.

Everyday use

"The handset does not switch on."	Check the connection of the batteries as they are probably flat or not inserted properly and charge the handset on the base station.
"The handset switches on but cannot be connected to the base station."	<p>Check the connection of the power supply unit of the base unit.</p> <p>Verify that the network socket where the power supply unit is plugged in received voltage.</p> <p>Repeat the handset registration procedure as described on page 24.</p>
"I cannot make or answer calls."	<p>If the handset's display is blank. It may be switched off. Press the HANG UP button for five seconds to switch it back on.</p> <p>Check that the base unit's mains power adapter is plugged in and power is switched on. The base unit needs mains power for normal operation of the phone not just for charging the batteries.</p> <p>Make sure you are using the telephone line cable supplied with your iDECT X3i. Other telephone line cables might not work.</p> <p>Move the handset closer to the base unit.</p> <p>Check the battery Level symbol on the display. If it is low, replace the handset on the base unit or charger pod to recharge the batteries.</p> <p>Switch off power at the mains socket, wait for a few seconds and then switch back on. This may solve the problem.</p>

"I cannot make a call."	<p>The handset's keypad may be locked. Unlock it before you make a call.</p> <p>Only one handset (or the base unit) can be connected to the outside line at once. If another handset is already using the line, you need to wait until it's finished its call.</p>
"When I press keys, nothing happens."	<p>Make sure the batteries are fitted in your handset. If the Battery Level symbol on the display shows 'low', put your handset back on the cradle for it to charge.</p>
"When I key in a number, it appears on the display, but I can not make an outside call."	<p>Try a different position for the base unit somewhere higher if possible, or further from other electrical equipment.</p> <p>Try moving the handset closer to the base unit.</p>
"The phone does not ring."	<p>Check that the base unit's mains power adapter is plugged in and power is switched on. The base unit needs mains power for normal operation of the phone not just for charging the batteries.</p> <p>Make sure you are using the telephone line cable that was supplied with your iDECT X3i. Other telephone line cables might not work.</p>
"My call was cut off when I went out of range. Now I can't use my handset."	<p>Move the handset closer to the base unit before you try again to make a call.</p>
"There is interference and noise on the line."	<p>Move the handset closer to the base unit, or to a different position.</p> <p>Try moving the base unit so that it's not near other electrical equipment, such as a television or a computer.</p> <p>You'll get the best sound if you place the base unit as high as possible. For example, in a two-storey house, the first-floor landing is an ideal place.</p>
"I hear 'beeps' from my handset while I'm on a call."	<p>You may be going out of range of the base unit. Move closer or your call may be cut off.</p> <p>Check the Battery Level symbol on the display. If it's low, recharge the batteries.</p>

"The Caller Display feature isn't working." **You need to subscribe** to the CallerDisplay feature from your network service provider. You should find contact details on your phone bill.

The caller may have **withheld** their number by dialling 141. Or they may be calling from a network that does not transmit the caller's number (e.g. it may be an international call.)

"When I try to make a call, I hear Busy tone." If you're using a iDECT X3i multi-handset system, check another handsets whether or not they are already on a call.

"The volume in the earpiece is low when I'm on a call." Make sure you're holding the earpiece correctly over your ear.

Adjust the volume using the **UP▲ / DOWN▼** button.

Intercom and transfer

"I can't transfer a call." Make sure the other handset is in range of the base unit.

Make sure you are dialling the correct number for the other handset.

Batteries

"The handset is not functioning even after charging for 8 hours." Remove the batteries from the handset and wait for a few seconds before replacing them. If the problem persists, replace the batteries.

"The handset's battery pack is running low within an hour or two." Before you first use the handset, you should have left it on the base unit or charger pod for **24 hours** to charge the batteries fully.

You may need to **replace the batteries**.

Check the connection between the base unit and the mains power socket.

"I try to recharge the batteries but I still get a warning that they are low."

You need to **replace the batteries**. To find out how to obtain replacements call the **iDECT Helpline** on **0845 345 9677** from 9:00am to 5:00pm, Monday to Friday (UK only).

Dispose of used batteries safely never burn them, or put them where they could get punctured.

Do not use non-rechargeable batteries in your iDECT X3i they may burst, causing damage.

If the fault persists...

Disconnect all other instruments connected to the same line as the iDECT X3i and try to make a call.

Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket. Try making a call. If this works, the line is OK.

If the call does not work, and you are using a **two-way socket adapter**, remove it and plug a telephone directly into the socket. If the call now works, the adapter may be faulty.

If you cannot make a call, the fault may be on the **exchange line**. Contact the service provider (the BT engineers on 151 for UK only, or your cable company).

If you still cannot identify the cause of the problem, contact the **iDECT Helpline** on **0845 345 9677** (UK only).

Cleaning and care

- **Do not clean** any part of your iDECT X3i with benzene, thinner or other solvent chemicals this may cause permanent damage which is not covered by the Guarantee. When necessary, **clean it with a damp cloth.**
- Keep your iDECT X3i away from **hot, humid conditions** or **strong sunlight**, and **don't let it get wet.**
- Every effort has been made to ensure high standards of reliability for your iDECT X3i. However, if something does go wrong, please **do not try to repair it yourself** consult your supplier or the iDECT Helpline.

Declaration of conformity

The DECT cordless phone, identified as iDECT X3i, complies with the essential protective requirements and objectives of:

- EC R&TTE Directive 1999/5/EC
- EC Low Voltage Directive 93/68/EEC

And conforms to the following relevant harmonized standards:

- Radio: EN 301406 (TBR 6)
- EMC: EN 301489
- Safety: EN 60950, EN 41003

The conformity to the requirements is validated by the symbol.



NOTE: In compliance with Directive 2002/96/EC, when you purchase a product that comes with the symbol shown on the right, you are required to dispose the electrical and electronic equipment by separate waste collection and you cannot dispose of the product as normal waste. This equipment and all its components, subsystems and consumable materials formed an integral part of this product and when you decide to dispose them, you have to bring them to the local recycling centres for appropriate waste disposal, in compliance with the current regulations. Details about the location of these centres can be obtained from your local authority.



Guarantee and service

The iDECT X3i is guaranteed for 12 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, faults on the telephone line, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

Please keep your sales (till) receipt this is your guarantee. You should also keep the original packaging material.

In the unlikely event that you need to return your iDECT X3i to our Repair Centre while it is under guarantee, there will be a £5 handling charge.

While the unit is under Guarantee

- 1** Disconnect the base unit from the telephone line and the mains electricity supply.
- 2** Pack up all parts of your iDECT X3i, using the original packaging. Remember to include the mains adapter.
- 3** Return the unit to the shop where you bought it, making sure you take your sales receipt.

After the Guarantee has expired

If the unit is no longer under Guarantee, first follow steps **1** and **2** as for repair under Guarantee. Then...

- 3** Call iDECT Helpline on **0845 345 9677** (for UK only) and ask for a quotation of the repair charge and details of where to send your iDECT X3i for repair.
- 4** Make sure you include with your iDECT X3i:
 - Your name and address
 - A cheque or postal order for the value of the repair
- 5** Return your iDECT X3i to the address given by the Service Department.

** This does not affect your statutory rights.*



Technical details

Standard	Digital Enhancement Cordless Telecommunication (DECT)
Frequency range	1.88 to 1.9 GHz (bandwidth = 20 MHz)
Channel bandwidth	1.728 MHz
Operating range	Up to 300m outdoors; up to 50m indoors
Operating time	Standby: 100 hours Talking: 10 hours Battery charge time: 24 hours
Temperature range	Operating 0°C to 40°C Storage -20°C to 60°C

Electrical power HANDSET— 600mAh NiMH
2.4V rechargeable battery pack.

Base UNIT — input 100-240V AC 50-60Hz 0.2A,
output 7.5VDC — 600mA.

CHARGER POD — input 100-240VAC 50-60Hz 0.2A,
output 7.5V DC — 480mA.

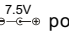Port specification The  port (connect to the
mains power supply) is a SELV port with respect to EN41003.
The  port (connected to the telephone line) is a TNV port
with respect to EN41003.