

GEEMARC

CLEAR SOUND™

HEAR THE DIFFERENCE

CL8400

GSM Telephone with Amplification



geemarc™
Telecom SA

English

CONTENTS

CONTENTS	1
INTRODUCTION	6
Unpacking the Telephone	7
DESCRIPTION	8
General Description	8
LCD Screen Description	12
Menu Navigation	14
Menu Map	15
Network Services & Password	17
SETTING UP, Install SIM Card and Battery	18
Charging the Battery	19
Switching On/Off	20
Battery Use	21
USING THE TELEPHONE, Standby Mode, Making a Call	22
Making a Call from the Call Record & Phone Book	23
Making a Call using Quick Dial & Dialed Numbers List	24
Receiving a Call, Rejecting a Call, Switch Off Alerts	25
Options During a Call	26
Receiving Volume	28
Ringer Volume	28
Call Timer	28

CONTENTS

SMS	29
Send a Text Message	29
Receiving a Text Message	30
Reviewing Stored Text Messages (Inbox)	30
Outbox	31
Draftbox	32
Delete SMS	33
Text Message Settings	34
Broadcast Messages	36
 VOICEMAIL	 37
Voicemail Number Setting	37
Listen to Voicemail	38
 PHONEBOOK	 39
Create a Phone Book Entry	39
Create a Phone Book Entry from Standby	42
View Phone Book Entries	43
Edit and Delete a Phone Book Entry	44
Copy All Phone Book Entries	45
Edit and Delete all Phone Book Entries	46
Storing a Speed Dial Number	47
Dialling a Speed Dial Number	48
Using Speed Dial Options	49
 CALL RECORD	 50
Display Incoming Calls	50

CONTENTS

Display Outgoing Calls	51
Display Missed Calls	52
Calls Duration	53
HANDSET SETTINGS	55
Time & Date Setting	55
Security Settings	56
Shortcut Settings	57
Local Number Settings	59
Power On/Off Settings	60
Amplify Settings	61
Language Settings	62
LCD Contrast Settings	63
Wallpaper Settings	64
Backlight Time Settings	65
Greeting Note Settings	66
Standby Settings	67
Caller Line ID Settings	68
Auto Redial Settings	69
Any Key Answer Settings	70
Flip Answer Settings	71
Call Waiting Settings	72
Call Forwarding Settings	73
Call Barring Settings	74
Network Selection Settings	75
Restore Default	76

CONTENTS

SOS, SOS Function	78
SOS Number Settings	79
SOS Message Receiver Settings	80
SOS Message Context Settings	81
 RADIO	 83
Radio Use	83
 ALARM	 84
Setting the Alarm	84
 GAMES	 86
Games Use	86
 TOOLS	 87
Calendar	87
Calculator	88
Conversion	89
 PROFILES	 91
TROUBLESHOOTING	93
SAFETY INFORMATION	95
HEARING AID INFORMATION	97
NETWORK SERVICES	98
GUARANTEE	99
RECYCLING DIRECTIVES	101

INTRODUCTION

Congratulations on purchasing your Geemarc GSM CL8400 telephone. This telephone is also hearing aid compatible. It offers many functions such as an alarm, a calendar, SMS text messaging, a phone book, a call record, a speakerphone and speed dial buttons. It has an emergency function in which six numbers can be programmed as emergency contacts. In case of emergency these contacts will be called and SMS messages sent with the flick of just one switch.

The font size on the colour LCD display is large and the buttons on the keypad are easy to see and use. This mobile telephone has a loud ringer and strong vibrating setting. All these features add up to make this a highly suitable telephone for the elderly, hard of hearing or sight people and anyone who simply wants to keep in touch with a great degree of ease.

It is important that you read the instructions below in order to use your Geemarc telephone to its full potential. Keep this user guide in a safe place for future reference.

This guide explains how to use the following telephone:

GSMCL8400

INTRODUCTION

Unpacking the Telephone

When unpacking the telephone, you should find the following in the box:

- 1 GSMCL8400 mobile telephone handset
- 1 Desktop charging unit
- 1 Mains power adaptor
- 1 x Li-Polymer rechargeable battery
- 1 User Guide



For product support and help visit our website at

www.geemarc.com

 
Telephone 01707 384438

Or fax 01707 832529

DESCRIPTION


General Description

Handset Description (front & Rear)

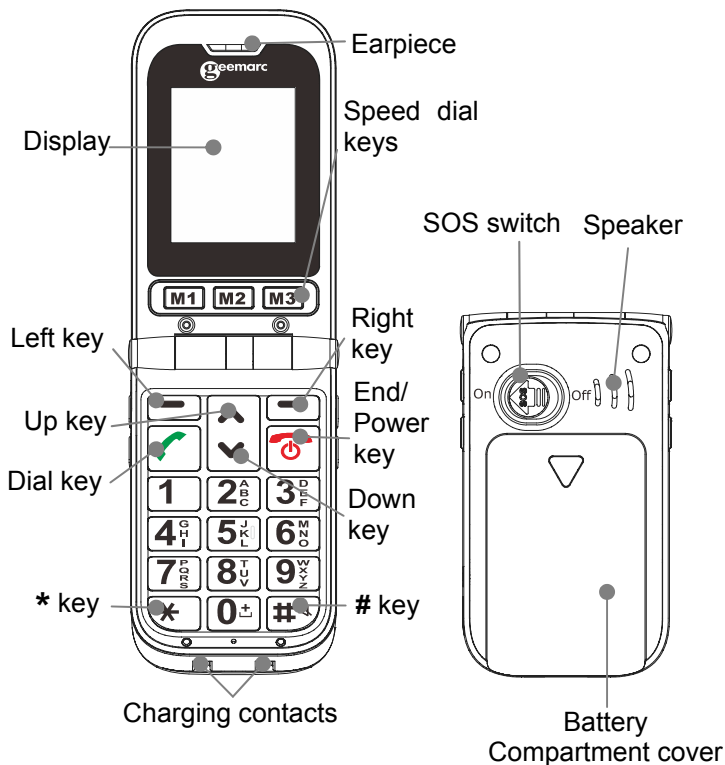


DESCRIPTION

  
Handset Description (Left & Right)

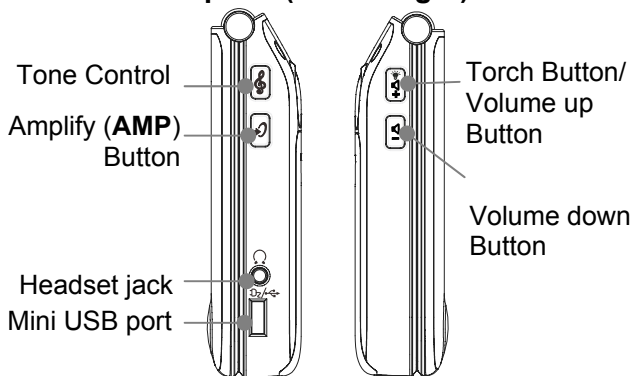

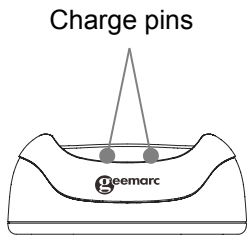


Charger



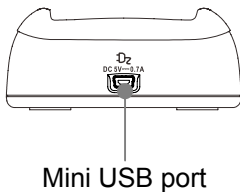 








Rear View






DESCRIPTION

	<p>One touch dialing keys A telephone number can be assigned to each of these buttons. To dial the number all you have to do is press the button once and the number will be dialed automatically</p>
	<p>Power key/On-hook key Long press to power the telephone on and off</p> <p>End a call Cancel current process and return to standby</p>
	<p>Navigation Button</p> <p>Up Key Scroll up through lists and menu options. Press this key in standby to enter a menu quickly via the shortcut settings you have set up.</p> <p>Down Key Scroll down through lists and menu options. Press this key in standby to enter a menu quickly via the shortcut settings you have set up.</p>

DESCRIPTION

	<p>Call Key Make a call after dialling the number Receive a call</p>
	<p>Left/Right key These are softkeys i.e. they take on different functions depending on the menu displayed. The current function is always displayed by the text above the key</p>
	<p>Asterisk key Press this key to insert one or more symbols while composing a message or editing a phonebook entry name. Then use , ,  and  buttons as navigation keys to select the symbols you want to insert.</p>
	<p>Hash Key Press to switch between different input modes while composing a text message or editing a contacts name</p>
	<p>Amplify Key Press this key on the right side of the phone during a conversation to amplify the volume.</p>

DESCRIPTION

	<p>Tone Key Press this key on the right side of the phone during a conversation to alter the tone. There is tone control of up to 10dbm</p>
	<p>Torch/Volume Up Key Press this key and the torch will shine for several seconds. Press this key twice quickly, the torch will shine steadily. Press once more to turn it off. This key can also be used to increase the ringer volume when you access Profiles menu or FM Radio menu or when receiving an incoming call. Increase the earpiece/speakerphone volume during a call. There are 8 volume levels available.</p>
	<p>Volume Down Key Use key to increase the ringer volume when you access Profiles menu or FM Radio menu or when receiving an incoming call. Increase the earpiece/speakerphone volume during a call. There are 8 volume levels available.</p>

DESCRIPTION

LCD Screen Description

The LCD screen is split into three distinct areas:

The icon area. This is found at the top of the screen. This displays the various system icons which help you to use the telephone.

The main area. This is found across the centre of the screen. It displays the following:

- number being dialled
- caller ID information
- phonebook
- menu information
- in standby mode current time, date and service provider name

The soft key area. This is found at the bottom of the screen.

Signal Strength icon



This is always displayed when your telephone is switched on. It shows the current signal strength. More bars indicate more signal strength.



Alarm icon

The alarm has been set to ring at a specified time.



Battery Status icon

This is always displayed when your telephone is switched on. It shows the level of battery charge. More bars indicate more battery charge.

DESCRIPTION

Roaming icon

A roaming call is taking place i.e.international call – outgoing or incoming



SMS icon

A new SMS (text message) has been received



Mute icon

The microphone is temporarily muted during the conversation

Silent icon

The telephone is in silent mode. There will be no call alert






Headset icon

The headset is plugged in

Menu Navigation

The **MENU** soft key is used to activate the menu. The **BACK** soft key is used to go back a level in the menu

system. Press  to deactivate the menu and return to standby mode from any menu.

The  and  keys are used to scroll through the menu.

 
 : move backward through the menu

 : move forward through the menu

The **ACCEPT** soft key is used to confirm/ select an action or choice on a screen.

DESCRIPTION

The Menu

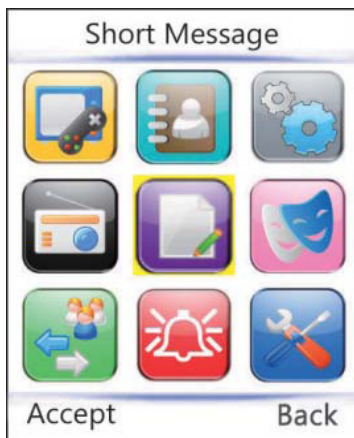

Menu Map



Short Message

Write message/Inbox
Outbox/Draftbox
Voice Mail/Message Setup
Broadcast Msg/Delete All
Browse
Create
SIM Card
Phone
Abbr Dial
Copy
Delete All
Storage status



Phonebook

DESCRIPTION



Call Record

Incoming Call
Outgoing Call
Missed Call
Call Duration



Settings

Phone
Display
Call
Network
SOS
Factory Default



FM Radio



Alarm

Alarm1/Alarm2/Alarm3/Alarm4/
Alarm5



Game

Porter
Quinter



Toolbox

Calendar
Calculator
Conversion



Profiles

Standard
Conference
Outdoor
Mute
Cutomise

SETTING UP

Network Services

To use this mobile telephone you must subscribe to a service from a service provider. Different service providers offer different features (at a variety of charges). This may effect the features made available to you through this mobile telephone.

Passwords

This mobile telephone allows you to set up passwords to help protect your telephone from unauthorized use.

The PIN and PIN2 codes are supplied with your SIM card. The PIN code helps to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The PUK and PUK2 codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your service provider.

Install SIM card and Battery

Always switch the telephone off and disconnect the charger before removing the battery.

Take care when handling the SIM card. The SIM card and its contacts can be easily damaged by scratches or bending.

SETTING UP

 
To remove the battery compartment cover, slide the cover in the direction shown and pull it off.



Remove the battery (if battery already inside).

Slide the metal SIM card cover down slightly and then lift up. The SIM card contacts in the phone should now be exposed. Place the SIM card with the gold coloured contacts face down into the SIM card compartment. Place the SIM card cover down and then gently push down and slide upwards until the cover and SIM card are held securely in place. A small click will be audible.

Observe the battery contacts (the gold coloured contacts must face towards the top left).and insert the battery.

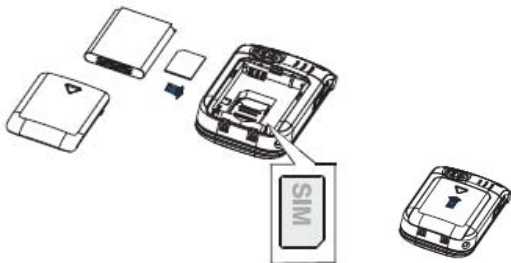

Slide the back cover back until it snaps into place.

SETTING UP

Charging the battery

Charging via the Mini USB Port

Plug the charger into a wall socket.

Connect the lead from the charger into the the Mini USB port on the bottom of the telephone (pull back the protective flap first). During charging, the battery icon



starts to fill.



Charging via the Charging Unit

Plug the charger into a wall socket.

Connect the lead from the charger into the the Mini USB port on the charging unit.

Place the mobile telephone onto the charging unit.




SETTING UP

Note: Only use batteries and chargers supplied with the telephone. The guarantee will be invalid if an unapproved cable is used. Keep the battery contacts clean and free of dirt. Try and avoid removing the battery as this could short circuit the battery.

If the battery is completely discharged, it may take a few seconds before the charging indicator appears on the display or before any calls can be made.

Before the handset is first used, the battery must be charged for a minimum of 4 hours.

Switching On/Off


Press  for 3 seconds or longer to switch the telephone on.

WELCOME will be displayed on the LCD (dependant on settings).


If no SIM card has been inserted, **LIMITED SERVICE** will be displayed. Only emergency calls can be made until the SIM has been inserted.

If this is the first time the phone has been switched on with the SIM inserted, you will be prompted to enter the time and the date (use the numeric keypad).

SETTING UP

Press  again for 3 seconds to switch the telephone off. **GOODBYE** will be displayed then the display disappears (dependant on settings).

Battery Use

The  icon is continuously displayed at the top right corner of the LCD display. The icon indicates the level of battery power. The more bars displayed, the more power available.



When the battery charge is low, a warning message will be displayed '**CHARGE THE BATTERY**'. The back lighting and certain other functions may stop working. When the battery is too weak for the telephone to operate, the handset will automatically switch off. Battery talk and standby times are subject to change. Replace the battery when the battery power has deteriorated noticeably (requires charging more frequently).

USING THE TELEPHONE

Standby Mode

When the telephone is ready for use and you have not entered any characters, the telephone is in standby mode. You can set the telephone to standby mode by


pressing .

Making a Call

Flip open the cover and dial the number on the keypad.

Press **DELETE** soft key to delete an incorrect digit

Press , the number is automatically dialled

To end the call simply press 

To place an international call you need to press **+** before the country code. Simply, press ***** key twice. Some foreign telephone networks have extension lines that cannot be dialled as dial-through, but need to be entered by the keypad. To dial these directly, press ***** quickly three times in a row after the telephone number. The **p** character will appear and then you can enter the extension.

USING THE TELEPHONE



Making a Call from the Call Record

You can find numbers dialled, received or missed in the call record.



Press




to enter the call record

Use  or  to scroll through the lists available

Press **ACCEPT** soft key to select the required list

Use  or  to scroll through the telephone numbers

On finding the desired number, press , the number is automatically dialled



To end the call simply press




Making a Call from the Phone Book

If you have stored numbers in the phone book, you can dial numbers using the phone book.

Press **Menu** to enter the phonebook

Use  or  to scroll through contact names in the phonebook

USING THE TELEPHONE

On finding the desired name, press , the number is automatically dialled



To end the call simply press 


Making a Call using Quick Dial

If you have stored numbers in the quick dial locations, press either M1, M2 or M3 (dependant on who you wish to ring). The chosen telephone number will be dialled automatically.

Making a Call from the Dialed Numbers List

Press  to display the outgoing call list

Use  or  to scroll through the list and find the desired number


Press  again, the number is automatically dialled

USING THE TELEPHONE


Receiving a Call

When an incoming call is received the telephone rings and the small white LED will flash. If the Caller ID service is activated, the caller's telephone number will be displayed. If this caller's number is stored in the Phonebook, the associated name will displayed

Press  to answer

To end the call simply press  or flip the cover closed

Rejecting a Call

To reject an incoming call, simply press  or soft key **REJECT**

Switch Off Alerts

You can temporarily switch off all of the alerts and vibrations for an incoming call.

On receiving an incoming call, press **OPTION** soft key

Press **RINGER OFF** soft key

USING THE TELEPHONE

Options During a Call

You can use a variety of functions during a call by pressing the **OPTION** soft key.

Mute Function

If you wish, you can speak privately to someone else in the room without your caller overhearing. You will still be able to hear the caller but they cannot hear you during the mute operation.

During a call, press **OPTION** soft key

Press **ACCEPT** soft key in order to select **MUTE**

To switch mute off, simply do the same again.
Press **OPTION** soft key then press **ACCEPT** soft key in order to select **UNMUTE**

Handsfree Function

You can turn on the speakerphone built into the telephone during a call. In this mode there is no need to hold the handset. You will hear the third party through the speaker and the microphone will pick up your voice.

During a call, press **OPTION** soft key

Use  or  to scroll through the menu to select **HANDSFREE**

USING THE TELEPHONE

Press **ACCEPT** soft key



To switch handsfree off, simply do the same again.
Press **OPTION** scroll through the list to find
HANDSFREE OFF and press the **ACCEPT** soft
key

Note: Before putting the handset to your ear, please ensure you have switched the speakerphone off.

Disconnect Function

You can end the current call.

During a call, press **OPTION** soft key



Use  or  to scroll through the menu to
select **DISCONNECT**

Press **ACCEPT** soft key to select

Main Menu Function

You can enter the main menu during a call. This enables you to use most of the main menu functions during the call e.g. send an SMS message.

During a call, press **OPTION** soft key

Use  or  to scroll through the menu to
select

USING THE TELEPHONE

MAIN MENU

Press **ACCEPT** soft key to select. The Main Menu screen will be displayed

Receiving Volume

During a conversation, the **V+** and **V-** buttons found on the left side, adjust the ear piece volume level, there are 8 volume levels. The **AMP** button, found on the right side, gives an extra 25dB boost.

You can adjust the Tone by pressing the T control on the left side of the phone repeatedly until you find the correct tone level for your hearing requirements. There are 5 tone levels covering tone control of 10 dB

Ringer Volume

When the phone rings with an incoming call, you can adjust the ringer volume by pressing **V+** or **V-**. This will override the ringer volume setting in the profile currently being used.

Call Timer

Your handset automatically times the duration of every external call. The time is shown during the call and for a few seconds after the call has ended.

Send a Text Message

A text message using this telephone can contain up to 160 characters. This figure includes spaces.

Press **MENU** soft key to activate the menu

Press **ACCEPT** soft key to select **SHORT MESSAGE**

Or

Press **MESSAGE** soft key in standby

Press **ACCEPT** soft key to select **WRITE MESSAGE**

 
Enter the text message using the numeric keypad (see Phonebook Chapter about entering text using the numeric keypad)

Press **ACCEPT** soft key when you completed composing your message

There are 3 different options to perform on your message:

1) Select **ONLY SEND**. Dial the number and press **ACCEPT**.

Or, press **ACCEPT** to enter the phonebook. Use





to search for required number using the

SMS

Phonebook. Press **ACCEPT** to select and **ACCEPT** again to confirm

2) Select **ONLY SAVE** to save the message in the Draftbox.

3) Select **SEND and SAVE** to send the message and store it in the Outbox. Dial the number and press **ACCEPT**.

Or, press **ACCEPT** to enter the phonebook. Use  or  to search for required number using the Phonebook. Press **ACCEPT** to select and **ACCEPT** again to confirm

Receiving a Text Message

On receiving a text, an alert tone will be audible. **1** **NEW MESSAGE** will be displayed on the LCD.



Press **SELECT** soft key followed by **ACCEPT** to display the message

Reviewing Stored Text Messages (Inbox)





Press **MENU** soft key to activate the menu

Press **ACCEPT** soft key to select **SHORT MESSAGE**

SMS

Use  or  to scroll through the menu to select **INBOX** (received text messages are stored in the Inbox).

Press **ACCEPT** soft key to select

Use  or  to scroll through the menu to select the required message. Unopened messages are marked with . Opened messages are marked with .

Press **ACCEPT** soft key to view the message

Press **OPTION** soft key to see all the options available that can be performed on this selected text message

These options include **TEXT REPLY, DELETE, FORWARD, EDIT, DIAL BACK, EXTRACT NUMBER** (use the number and store to SIM or phone memory)



Outbox

The outbox stores successfully sent and saved messages.



Press **MENU** soft key to activate the menu

SMS

Press **ACCEPT** soft key to select
SHORT MESSAGE

Use  or  to scroll through the menu to select
OUTBOX

Press **ACCEPT** soft key to select

Use  or  to scroll through the menu to select the
required message.

. Press **ACCEPT** soft key to view the message

Press **OPTION** soft key to see all the options available
that can be performed on this selected text message

These options include **FORWARD, DELETE, EDIT,**
DIAL BACK, EXTRACT NUMBER (use the number
and store to SIM or phone memory)

Draftbox



The draft box stores messages that you have saved but
not sent yet.

Press **MENU** soft key to activate the menu



Press **ACCEPT** soft key to select

SMS

SHORT MESSAGE

Use  or  to scroll through the menu to select **DRAFTBOX**

Press **ACCEPT** soft key to select

Use  or  to scroll through the menu to select the required message.

Press **ACCEPT** soft key to view the message

Press **OPTION** soft key to see all the options available that can be performed on this selected text message

These options include **FORWARD, DELETE, EDIT**



Delete SMS

You can delete messages in the Inbox, Outbox, Draftbox or all messages stored.



Press **MENU** soft key to activate the menu

Press **ACCEPT** soft key to select **SHORT MESSAGE**

SMS

Use  or  to scroll through the menu to select
DELETE ALL

Press **ACCEPT** soft key to select

Use  or  to scroll through the menu to select
either
**DELETE ALL MESSAGES, DELETE INBOX
MESSAGES, DELETE OUTBOX MESSAGES or
DELETE DRAFTBOX MESSAGES**

You will be prompted to confirm your choice

Press **ACCEPT** soft key to select or **CANCEL** to quit

Text Message Settings

Service Centres distribute SMS messages. Your mobile telephone must have the telephone number for the service centre programmed into memory. Generally, on receiving your telephone this will have already been set up by your service provider. If it has not, then you can set it up yourself



SMS Service Centre

Press **MENU** soft key to activate the menu

Press **ACCEPT** soft key to select **SHORT**

SMS

MESSAGE

Use  or  to scroll through the menu to select
MESSAGE SETUP

Press **ACCEPT** soft key to select

Now select **SERVICE CENTRE** and enter the required number using the numeric keypad.

Protocol Type

Text, fax and email are available.

Validity

You can stipulate how long an attempt at delivering a message should be

Status Report

You can opt to receive a message confirming that a message you sent has been delivered successfully.



Reply Path

If you activate this feature, when you reply to a message, the cost of sending it is charged to the recipient's account instead of your own.

Storage Media

If you select **SIM PREFERRED**, when you receive a new message it will be stored on the SIM card by default. When the SIM card memory is full new messages will be stored in the phone.

Storage Status



A useful option is to request to see how much memory is occupied and how much is free on both the SIM card and the telephone e.g,  17/40,  2/40.

Broadcast Messages

This telephone supports the broadcast messages i.e. information services from your service provider

Press **MENU** soft key to activate the menu

Press **ACCEPT** soft key to select **SHORT MESSAGE**

Use  or  to scroll through the menu to select **BROADCAST MSG**

Press **ACCEPT** soft key to select

You can select the language of broadcast together with topic preference.

VOICE MAIL

Vicemail Number Setting



The voicemail function allows you to listen to any voicemail messages people may have left for you.

The voice mailbox is a network service to which you may need to subscribe. Contact your service provider if in doubt.



If your service provider does give you access to voice mail, the telephone number used to access the voice mail system will normally be set up on your telephone. However, if it is not, it can be set up as follows.

Press **MENU** soft key to activate the menu

Press **ACCEPT** soft key to select
SHORT MESSAGE

Use  or  to scroll through the menu to select
VOICEMAIL

Press **ACCEPT** soft key to select

Use  or  to scroll through the menu to select
NUMBER

Press **ACCEPT** soft key to select

Enter the mailbox number using the numeric keypad

Press **ACCEPT** soft key to select



VOICE MAIL

Listen to Voicemail

If you have missed a call, you will receive a message on the phone's display, **1 MISSED CALL**. Press **SELECT**, you will see a list of all missed calls in the Call Record.

Press **MENU** soft key to activate the menu

Press **ACCEPT** soft key to select **SHORT MESSAGE**

Use  or  to scroll through the menu to select **VOICEMAIL**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key to select **LISTEN TO MSG**

Or



Simply press **1**. You will be connected to voice mail and can listen to your messages.

PHONE BOOK



Telephone numbers and names can be stored in the phone book. This is held both on the SIM and in the phone memory. It allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the telephone number. You can search and recall numbers in order to make a call, send a message or use an entry as an emergency contact. The phone book can contain at least 40 entries. If you try to add a new entry when all the memory is filled, a warning message will be displayed. You will need to delete an existing entry in order to add the new telephone number. The contacts saved in the SIM card memory are indicated by **SIM**. The advantage of saving to SIM means you can transfer the information to another telephone.

Create a Phone Book Entry

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **PHONEBOOK**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CREATE**

Press **ACCEPT** soft key to select

PHONE BOOK


Use  and  to scroll through the menu to select memory location, either **SAVE TO SIM** or **SAVE TO PHONE**

Press **ACCEPT** soft key to select

Press **EDIT** soft key

Enter the name using the numeric keypad

Press **ACCEPT** soft key to confirm

Use  to move to the number field

Press **EDIT** soft key



Enter the number using the numeric keypad – up to 41 digits allowed (always include the local area code)

Press **SAVE** soft key to confirm

Press **SAVE** soft key. **DONE!** will be displayed

PHONE BOOK

The numeric keypad also has characters printed on the keys. These characters are used for entering text for the purposes of phonebook entry and modification, SMS text writing and searching for an entry in the phonebook. Press each key the relevant number of times to get the letter you need e..g. to get the letter J, press the 5 key once, to get the letter S, press the 7 key four times in quick succession.

To move on to the next letter, wait a few seconds and the cursor will appear | after the last letter you entered. You may now enter the next letter. To switch between upper and lower case use the  key. You can also switch to numbers using  key. The input mode will be indicated in the top left of the LCD display.

Press 0 to insert a space.

Press the **DELETE** soft key to delete the last character typed in while entering a number or a name. Press and hold the **DELETE** soft key to clear the screen.

PHONE BOOK



Character Map

Key	Characters in the displayed order				
	ABC				
0	(spc)	0			
1	,	.	?	!	1
2	A	B	C	2	Ä Æ Å Ç
3	D	E	F	3	É
4	G	H	I	4	
5	J	K	L	5	£
6	M	N	O	6	Ö Ø Ñ
7	P	Q	R	S	7 \$
8	T	U	V	8	Ü
9	W	X	Y	Z	9

Create a Phone Book Entry from Standby

Enter the number using the numeric keypad (always include the local area code)

Press **SAVE** soft key

Use  and  to scroll through the menu to select memory location, either **SAVE TO SIM** or **SAVE TO PHONE**

PHONE BOOK

Press **ACCEPT** soft key to select

Press **EDIT** soft key



Enter the name using the numeric keypad

Press **SAVE** soft key to confirm

Press **SAVE** soft key. **DONE!** will be displayed

View Phone Book Entries



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select

PHONEBOOK

Press **ACCEPT** soft key to select



Press **ACCEPT** soft key again to select
BROWSE

Use  and  to scroll through the list until you find the desired contact. Or, you can search for a contact in the phonebook via an alphabetic search. Simply, type the first character of their name and you will be automatically positioned at the correct part of the phonebook



PHONE BOOK

You can search through phonebook entries that are stored in the SIM or entries that are stored in the phone memory.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select
PHONEBOOK

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select memory location, either **SIM CARD** or
PHONE



Press **ACCEPT** soft key to select

Press **LIST** soft key

Use  and  to scroll through the phonebook until you find the desired contact

Editing and Deleting a Phone Book Entry

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select

PHONE BOOK

PHONEBOOK

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key again to select **BROWSE**

Use  and  to scroll through the list until you find the desired contact or to skip directly to the required number simply press the the first letter of the name

Press **OPTION** soft key

Options available to be performed on that contact record are as follows:

DIAL to
SEND MESSAGE
EDIT
DELETE



Perform the option and then **ACCEPT**

Copying All Phone Book Entries



You can copy all the phonebook entries between the phone and the SIM Card

Press **MENU** soft key to activate the menu



PHONE BOOK

Use  and  to scroll through the menu to select **PHONEBOOK**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **COPY**

Press **ACCEPT** soft key to select



Use  and  to select either **SIM TO PHONE** or **PHONE TO SIM**

Press **ACCEPT** soft key to select

Editing and Deleting All Phone Book Entries



You can delete all the phonebook entries stored in the phone or the SIM card.

Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **PHONEBOOK**

PHONE BOOK

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select

DELETE ALL

Press **ACCEPT** soft key to select

Use  and  to select either **DELETE ALL PHONE** or **DELETE ALL SIM**

Press **ACCEPT** soft key to select



DELETE ALL? will be displayed

Press **ACCEPT** to confirm or **CANCEL** to quit

Storing a Speed Dial Number



You can assign a speed dial number to a phonebook entry. This means you can dial a number very easily whenever you want simply by pressing the associated number.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **PHONEBOOK**

PHONE BOOK

Press **ACCEPT** soft key to select



Use  and  to scroll through the menu to select
ABBR DIAL

Press **ACCEPT** soft key to select

Use  and  to select position **M1, M2, M3,**
2,3,4,5,6,7,8 or-9

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key again to select
SET/CHANGE

Use  and  to scroll through the phonebook to
select the desired contact name

Press **ACCEPT** soft key to select



Dialling a Speed Dial Number

Press and hold the desired key to dial out the corresponding number.



PHONE BOOK

Using Speed Dial Options



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **PHONEBOOK**



Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **ABBR DIAL**

Press **ACCEPT** soft key to select

Use  and  to select position **M1, M2, M3, 2,3,4,5,6,7,8 or-9**

Press **ACCEPT** soft key to select

Use  and  to scroll through the options available:

SET/CHANGE – Set or Change the speed dial number

DETAIL – View the speed dial number

DELETE – Delete the speed dial number

Press **ACCEPT** soft key to select

CALL RECORD

Information about all calls is stored on this telephone in the Call Record. These calls include:



Calls received (incoming)

Calls dialled (outgoing)

Calls received but not answered (missed)



Display Incoming Calls

Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **CALL RECORD**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key again to select **INCOMING CALL**

Use  and  to scroll through the list until you find the desired contact

Press the soft key **OPTION**, the following will be available to perform on that call record entry:

DETAILS: To display the dialled number and other call information
such as the date and time



DIAL TO:

CALL RECORD



SEND MESSAGE TO:
DELETE:
SAVE NUMBER:
DELETE ALL:

Display Outgoing Calls



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **CALL RECORD**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **OUTGOING CALL**

Press **ACCEPT** soft key to select

Use  and  to scroll through the list until you find the desired contact

Press the soft key **OPTION**, the following will be available to perform on that call record entry:

DETAILS: To display the dialled number and other call information such as the date and time



CALL RECORD

DIAL TO:
SEND MESSAGE TO:
DELETE:
SAVE NUMBER:
DELETE ALL:



Display Missed Calls

When you have a missed call, a message **n MISSED CALLS** will appear on the display e.g. **3 MISSED CALLS**. Press **SELECT** soft key to review the details or press **CANCEL** to exit. You can also review missed calls via the menu as follows:



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **CALL RECORD**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **MISSED CALL**

Press **ACCEPT** soft key to select

Use  and  to scroll through the list until you find the desired contact

CALL RECORD

Press the soft key **OPTION**, the following will be available to perform on that call record entry:

DETAILS: To display the dialled number and other call information

such as the date and time

DIAL TO:

SEND MESSAGE TO:



DELETE:

SAVE NUMBER:



DELETE ALL:

Calls Duration

Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **CALL RECORD**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CALL DURATION**

Press **ACCEPT** soft key to select

CALL RECORD

**OUTGOING DURATION, INCOMING
DURATION, LAST CALL DURATION** data will
be displayed



You can press **CLEAR** to clear the selected
counter or **BACK** to exit

HANDSET SETTINGS

Time and Date Setting

The date and time can be set up manually. The date and time format can also be changed.

Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key again to select **PHONE**

Press **ACCEPT** soft key again to **CLOCK**

Press **ACCEPT** soft key again to **DATE & TIME**

Press **ACCEPT** soft key

Enter the time using the numeric keypad and press **ACCEPT**

Enter the date using the numeric keypad and press **ACCEPT**

HANDSET SETTINGS

If you have selected **12 HOURS** in the **TIME FORMAT** menu, be sure to enter the time in a 12 hour format and select **AM** or **PM**. Otherwise, enter the time in 24 hour format. There are three **DATE FORMAT** options available, **YYYY/MM/DD**, **DD/MM/YYYY** or **MM/DD/YYYY**.



Security Settings

This mobile telephone allows you to set up passwords to help protect your telephone from unauthorized use.

The PIN and PIN2 codes are supplied with your SIM card. The PIN code helps to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The PUK and PUK2 codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your service provider.



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

HANDSET SETTINGS

Press **ACCEPT** soft key again to select **PHONE**

Use  and  to scroll through the menu to select **SECURITY**

Press **ACCEPT** soft key to select

STATUS: You can switch the PIN code **ON** or **OFF**

CHANGE PIN1: The PIN1 can be changed. You must enter the current PIN1 before you enter the new one.

There is also a Phone Code which protects the telephone from unauthorised use.



STATUS: You can switch the phone code **ON** or **OFF**

CHANGE PHONE CODE: The code can be changed. You must enter the current code before you enter the new one (default code is 0000).

Shortcut Settings

You can set the phone so as you only need to press one key to enter the desired menu on the telephone. Two shortcuts can be set up: one on the up key and the other on the down key.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select

HANDSET SETTINGS



SETTINGS

Press **ACCEPT** soft key to select



Press **ACCEPT** soft key again to select **PHONE**

Use  and  to scroll through the menu to select **SHORTCUT**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select either
UP KEY or **DOWN KEY**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select either
INBOX, PHONEBOOK, CALL RECORD,
PROFILES, GAME, ALARM, WRITE MESSGE
and **FM RADIO**



Press **ACCEPT** soft key to select

HANDSET SETTINGS

Local Number Settings



Up to two local numbers can be stored on the SIM card and then read from this location as and when necessary.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key again to select **PHONE**


Use  and  to scroll through the menu to select **LOCAL NUMBER**

Press **ACCEPT** soft key to select

Use  and  to select the entry you wish to edit

Press **ACCEPT** soft key to select then press **EDIT**

Enter the name. Press **SAVE**

Press  to move to the number field

HANDSET SETTINGS

Press **EDIT** soft key



Enter the number (up to 41 digits). Press **SAVE**

Press **SAVE** again

Power On/Off Settings



Whenever you turn the phone on or off, a tone can be heard. This tone can be switched off for silent use.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key again to select **PHONE**

Use  and  to scroll through the menu to select **ON&OFF RING**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select either

HANDSET SETTINGS



ON or OFF

Press **ACCEPT** soft key to select

Amplify Settings



Whenever you make or receive a call the amplify feature can be set to on as a default.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key again to select **PHONE**

Use  and  to scroll through the menu to select **AMPLIFY ON**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select either **ON or OFF**



Press **ACCEPT** soft key to select

HANDSET SETTINGS

Language Settings

There are five languages available to display the menu i.e. English, French, Spanish, Dutch and German. There is also an Automatic option, the phone will automatically select a language.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

Press  to select **DISPLAY**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key to select **LANGUAGE**

Use  and  to scroll through the menu to select the desired language



Press **ACCEPT** soft key to select

HANDSET SETTINGS


LCD Contrast Settings

You can adjust the contrast of the text on the screen against the background. This optimises the way text is displayed on the LCD display.


Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**



Press **ACCEPT** soft key to select

Press  to select **DISPLAY**

Press **ACCEPT** soft key to select

Press  to select **LCD CONTRAST**

Press **ACCEPT** soft key to select e



Use  and  to scroll through the 10 contrast levels available

Press **ACCEPT** soft key to select


HANDSET SETTINGS

Wallpaper Settings



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select
SETTINGS



Press **ACCEPT** soft key to select

Press  to select **DISPLAY**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
WALLPAPER

Press **ACCEPT** soft key to select e

Use  and  to scroll through the menu to select
**WALLPAPER1, WALLPAPER2 or WALL
PAPER 3**



Press **ACCEPT** soft key to select e

HANDSET SETTINGS


Back Light Time Settings

The backlight turns on whenever you touch a key, place the phone on charger or take it off the charger. The length of time the backlight remains on can be altered.



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**



Press **ACCEPT** soft key to select

Press  to select **DISPLAY**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **BACK LIGHT**

Press **ACCEPT** soft key to select e

Use  and  to scroll through the menu to select **ALLWAYS ON, 15 SECONDS ON, 30 SECONDS ON or 60 SECONDS ON**



Press **ACCEPT** soft key to select e

HANDSET SETTINGS


Greeting Note Settings

If this setting is switched on, a greeting note will be displayed every time the handset is switched on.



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**



Press **ACCEPT** soft key to select

Press  to select **DISPLAY**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **GREETING NOTE**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **ENABLE** or **DISABLE**

Press **ACCEPT** soft key to select

Use the numeric keypad to edit the greeting note (up to 10 characters)



HANDSET SETTINGS

Press **ACCEPT** soft key to select

Standby Settings

Date and Time can be displayed in standby mode if you activate this setting..



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select
SETTINGS



Press **ACCEPT** soft key to select

Press  to select **DISPLAY**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
DATE & TIME

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
ENABLE or **DISABLE**



Press **ACCEPT** soft key to select

HANDSET SETTINGS



Caller Line ID Settings

If this setting is activated, your telephone number will be withheld whenever you make a call.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CALL**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key to select **CLIR**

Use  and  to scroll through the menu to select **DEFAULT SETTING, ON or OFF**

Press **ACCEPT** soft key to select e



Auto Redial Settings

If this setting is activated, when you make a call but cannot get through as the other line is engaged, your



HANDSET SETTINGS

telephone will automatically redial this number after a certain amount of time (decided by you). This will take place provided you have not cancelled the call.


Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**



Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CALL**

Press **ACCEPT** soft key to select

Press  to select **AUTO REDIAL**

Press **ACCEPT** soft key to select e

Use  and  to scroll through the menu to select **ENABLE** or **DISABLE**



Press **ACCEPT** soft key to select e

Any Key Answer Settings



If this setting is activated, when there is an incoming call you can press any key to answer it.

HANDSET SETTINGS



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select
SETTINGS



Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
CALL

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
ANY KEY ANSWER

Press **ACCEPT** soft key to select e

Use  and  to scroll through the menu to select
ENABLE or **DISABLE**



Press **ACCEPT** soft key to select e

Flip Answer Settings



If this setting is activated, when there is an incoming call simply flip the phone open to answer it.

HANDSET SETTINGS



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**



Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CALL**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **FLIP ANSWER**

Press **ACCEPT** soft key to select e

Use  and  to scroll through the menu to select **ENABLE** or **DISABLE**

Press **ACCEPT** soft key to select e



Call Waiting Settings

Call waiting can be activated or deactivated. Please check that this service is available from your service



HANDSET SETTINGS

provider. You can **INTERROGATE** to find out if your service provider offers this service.



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**



Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CALL**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CALL WAITING**

Press **ACCEPT** soft key to select e

Use  and  to scroll through the menu to select **INTERROGATE, ACTIVATE or DEACTIVATE**



Press **ACCEPT** soft key to select e

HANDSET SETTINGS



Call Forwarding Settings

Incoming calls can be diverted to a specified telephone number (voicemail number generally). There are 4 options available with this function:



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**



Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CALL**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **CALL FORWARDING**

Press **ACCEPT** soft key to select e

Use  and  to scroll through the menu to select

UNCONDITIONAL: Call divert is applied to all incoming calls

HANDSET SETTINGS

IF BUSY: Call divert is applied to all incoming calls if your line is busy

IF NO ANSWER: Call divert is applied to all incoming calls if you do not answer the call



IF NO SERVICE: Call divert is applied to all incoming calls if your phone is switched off or you are not in a service area

Press **ACCEPT** soft key to select



Call Barring Settings

Incoming and outgoing calls to and from your phone can be limited. There are 5 options available with this function:

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select



Use  and  to scroll through the menu to select **CALL**

Press **ACCEPT** soft key to select

HANDSET SETTINGS

Use  and  to scroll through the menu to select **CALL BARRING**

Press **ACCEPT** soft key to select e

Use  and  to scroll through the menu to select

ALL OUTGOING CALLS: No outgoing calls can be made

All INT'L CALLS: No outgoing international calls can be made from this phone

INT'L EXCEPT TO HOME: No outgoing international calls can be made from this phone except to a domestic phone number or a number serviced by a domestic provider

ALL INCOMING CALLS: No incoming calls can be received

INCOMING WHILE ROAM: No incoming calls can be received when you are not in a serviced area.



Press **ACCEPT** soft key to select e

Network Selection Settings



You can choose a network when using an international roaming service either manually or automatically.

Press **MENU** soft key to activate the menu



HANDSET SETTINGS

Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **NETWORK**

Press **ACCEPT** soft key to select



Use  and  to scroll through the menu to select
AUTOMATIC or **MANUAL**

Press **ACCEPT** soft key to select e

Restore Default



You can undo all the changes you have made to the telephone settings and restore to the factory settings. The default password is 0000.

Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**

HANDSET SETTINGS

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **FACTORY DEFAULT**

Press **ACCEPT** soft key to select

You will be asked to enter the current phone code (0000). Type it in using the numeric keypad.

Press **ACCEPT** soft key

SOS Function

In an emergency, you can move the **SOS** switch to the **ON** position for help.

If you have preset an SOS text message and set the SMS **RECEIVER** (generally another mobile phone), once you move the **SOS** switch to **ON**, the phone will send the SOS text message to the receiver.

The SOS message will be sent before starting to call the numbers on the **SOS list**. Up to 6 numbers can be preset on the **SOS list** (please check that this service is available from your service provider). The phone will dial numbers on this SOS list automatically one by one. If a busy tone is detected or a call is aborted by user, the next number will be dialled immediately. The phone will dial these numbers until the handset is powered off.

If you want to quit the SOS mode, move the switch to **SOS OFF**.



Note: When you move the SOS switch ON, you cannot turn the telephone OFF. You must switch the SOS mode OFF before turning the phone off.

SOS



SOS Number Settings

You can set up to 6 SOS numbers.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select
SETTINGS

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
SOS

Press **ACCEPT** soft key to select



Press **ACCEPT** soft key to select **SOS NUMBER**

Use  and  to scroll through the menu to select from
SOS No 1 to SOS No 6

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key to select **ASSIGN
NUMBER**

SOS



Use  and  to scroll through the phonebook to find the desired entry

Press **ACCEPT** soft key to select



SOS Message Receiver Settings

You can enter the number to receive the SOS text message.


Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **SOS**

Press **ACCEPT** soft key to select



Use  to select **SOS MESSAGE**

Press **ACCEPT** soft key to select

SOS

Press **ACCEPT** soft key to select **RECEIVER**

Press **ACCEPT** soft key to select **ASSIGN
NUMBER**



Use  and  to scroll through the phonebook to find the desired entry

Press **ACCEPT** soft key to select



SOS Message Context Settings

You can enter the SOS text message.

Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **SETTINGS**

Press **ACCEPT** soft key to select


Use  and  to scroll through the menu to select **SOS**

Press **ACCEPT** soft key to select

Use  to select **SOS MESSAGE**

SOS

Press **ACCEPT** soft key

Use  to select **CONTEXT**

Press **ACCEPT** soft key to select

Enter the message text (up to 29 characters) See
Phonebook chapter re text input.

Press **SAVE** soft key

RADIO

Radio Use

In order to use the radio, you must insert the headset first.

Press **MENU** soft key to activate the menu

Use **▲** and **▼** to scroll through the menu to select **FM RADIO**

Press **ACCEPT** soft key to select

Press **OPTION** soft key to select one of the following:

TURN OFF: Switches the radio off

SAVE CHANNEL: Saves the current channel

AUTO SEARCH: Searches for channels automatically and saves them

SET FREQUENCY: Search for channels manually and save them

CHANNEL LIST: Displays the channel list

BACKGROUND PLAY: Sets the background play mode on or off

Or, use **▲** and **▼** to search through the channels and use **V+** and **V-** to adjust the volume.





ALARM



Setting the Alarm

An alarm can also be set to sound at specific times if required. The alarm can be set to go off only once or repeatedly on a weekly schedule. Five different alarm times can be set up.

Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select **ALARM**

Press **ACCEPT** soft key to select


Use  and  to scroll through the menu to select **ALARM 1** to **ALARM 5**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key to select **STATUS**.
Current Status will be displayed

Use  and  to scroll through the menu to select **ON** or **OFF**

Press **ACCEPT** soft key to select



Press  to select **TIME SETTINGS**

ALARM



Press **ACCEPT** soft key to select

Enter the time using the numeric keypad (HH:MM)


Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
SELECT MODE

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
ONE SHOT ALARM or **WEEKLY ALARM**

Press **ACCEPT** soft key to select

Press any key to stop the alarm sound. The alarm will keep ringing every 5 minutes until you actually turn the alarm setting to Off or press M1 or simply press .

The alarm still works when the telephone is switched off.



Ensure the phone ringing tones are not set to silent, otherwise you will not hear the alarm!

GAMES



Games Use

There are two games available.

Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select **GAME**

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select **PORTER** or **QUINTER**



Press **ACCEPT** soft key to select

TOOLS

Calendar

You can review the calendar and move to a certain date quickly.



Press **MENU** soft key to activate the menu





Use  and  to scroll through the menu to select **TOOLBOX**

Press **ACCEPT** soft key to select

Press **ACCEPT** soft key to select **CALENDAR**

The current month will be displayed. The current date is highlighted.

Use  and  to move to previous or next month

Use , ,  and  buttons as a means of navigation to move to the desired date

Press **OPTION** soft key

Press **ACCEPT** soft key to select **GO TO DATE**

Enter the date you wish to jump to



TOOLS

Press **ACCEPT** soft key


Press **BACK** soft key to exit

Calculator



Press **MENU** soft key to activate the menu



Use  and  to scroll through the menu to select
TOOLBOX

Press **ACCEPT** soft key to select

Press  to select **CALCULATOR**

Press **ACCEPT** soft key to select

Enter the first number using the numeric keypad (use  to insert a decimal point or  to add a negative sign)

Use  and  to scroll through the menu to select the correct arithmetic symbol

Press **ACCEPT** soft key to select

TOOLS

Enter the second number using the numeric keypad



Press **RESULT** soft key

Note: Press **DELETE** soft key to clear the last digit.
Press **CLEAR** soft key to clear the display completely.



Conversion

You can convert one measurement unit to another using this function.



Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select
TOOLBOX

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select
CONVERSION

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select the desired measurement

TOOLS

TEMPERATURE
QUALITY (WEIGHT)
LENGTH
LANDMEASURE
VOLUME
CURRENCY

Press **ACCEPT** soft key to select

Select the units you wish to convert

Press **ACCEPT** soft key to select

Enter the number you wish to convert. The newly
converted number will be displayed below
automatically



PROFILES

Profiles

There are 5 types of profile available. You can make changes to the detail of the profile selected. A profile is made up of the following settings:



RINGING TONE, SMS ALERT TONE, CALL ALERT, RINGING VOLUME, KEY VOLUME, VIBRATING ALERT and ALARM TONE

Press **MENU** soft key to activate the menu

Use  and  to scroll through the menu to select



PROFILES

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select either

STANDARD, CONFERENCE, OUTDOOR, MUTE and CUSTOMISE

Press **ACCEPT** soft key to select

Use  and  to scroll through the menu to select either

SET AS DEFAULT, PERSONALISE and RESET. If you select **PERSONALISE** you can

PROFILES

set your preferences for the following:

RINGING TONE
SMS ALERT TONE
CALL ALERT
RINGING VOLUME
KEY VOLUME
VIBRATING ALERT
ALARM TONE

TROUBLESHOOTING

Telephone cannot be switched on

- Check battery is inserted and check that it is inserted correctly

Nothing appears on the display

- Check the handset is switched on
- Check the battery and SIM are inserted correctly

Display is locked when the telephone is switched on

- Enter the PUK to unlock the SIM

No signal icon is displayed

- There is no network connection. Move around to try and get to an area where there may be coverage
- Contact your service provider

Message to say that a function is not possible

- Your service provider might not provide the function in question or you may need to subscribe to that service. Contact the service provider.

No display during the charging process

- The battery charge is very low. Wait a few minutes.

“Insert Sim” or “Limited Service” message is displayed

- Ensure the SIM is inserted correctly

The battery is discharged quickly or cannot be charged at all.

- Charge the battery for 4 hours
- Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging unit with a soft, dry cloth.
- Try a new battery

TROUBLESHOOTING

Failure to link to the network

- The signal is too weak, or there may be some radio interference
- Is the SIM card installed incorrectly or damaged? If the SIM card is damaged, please ask your service provider for a replacement.

Cannot make a Call

- Is the SIM card registered to the network
- Is the bar outgoing calls feature enabled
- There may be a problem with the network, call your service provider
- Check the service provider number, local area number or NMC number (see Handset Settings)

Cannot answer a call:

- Is the bar incoming calls feature enabled
- Is the call diverting function enabled

The keys appear to be locked

- Power the phone off and then on

Caller Number is not displayed

- Ensure you have subscribed to the Caller ID service. Contact your service provider
- The caller may have withheld their details
- Let the phone ring a few times as there may be a delay in receiving the Caller ID information

Any problems not referred to above

- Check through the User Guide
- Power off and then on again. Check to see if the problem persists

SAFETY INFORMATION

General

Only use the power supply included with the product.

Only use the approved rechargeable battery supplied.

Do not open the handset (except to replace the handset batteries) or base. Contact the helpline for all repairs.

Never dispose of batteries in a fire. There is a serious risk of explosion and/ or the release of toxic chemicals.

If you are sure you are not going to use the telephone for over a month, remove the battery

Cleaning

Clean the telephone with a soft cloth. Keep the base and handset charging contacts clean. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms.

Do not expose your product to fire or other hazardous conditions.

The telephone is designed for working within a temperature range of -20°C to 60°C.

SAFETY INFORMATION

Usage

In summary, read these simple guidelines. Not following them may be dangerous or illegal.

SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE

All wireless devices may be susceptible to interference. This could affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELLING

Do not use the device at a refuelling point. Do not use near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.

USE SENSIBLY

Use only in the normal position as explained in the product documentation.

BACK-UP COPIES

Remember to make back-up copies or keep a written record of all-important information.

CHARGING

Do not use the telephone during charging

HEARING AID INFORMATION

Some phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

NETWORK SERVICES

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of one year. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only

DECLARATION: Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EEC and in particular article 3 section 1a, 1b and section 3. The telephone does not operate if the line current is lower than 18 mA.

The declaration of conformity may be consulted at www.geemarc.com



GUARANTEE

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN60950 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.

- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at

www.geemarc.com

Telephone 01707 384438

Or fax 01707 832529

UGCL8400_En_v1.1



UGCL8400_En_v1.1

geemarc™
Telecom SA United Kingdom

5 Swallow Court
Swallowfields
Welwyn Garden City
Hertfordshire, AL7 1SB
For product support:
01707 384438
www.geemarc.com

geemarc™
Telecom SA FRANCE

Parc de l'Etoile
2, rue Galilée BP20061
59791 Grande Synthe CEDEX
Tél. service après vente :
03 28 58 75 99
www.geemarc.com

geemarc™
Telecom SA Deutschland

Siemensstrasse 10,
53121 Bonn
Deutschland
Tel: +49(0)228/ 74 87 09 0
Fax: +49(0)228/ 74 87 09 20
www.geemarc.com