

## LG Aria Digital Systems

### **2 & 8 Button Handset User Guide (LKD-2N/S & LKD-8D/S)**

- REDIAL:** dial SPEED \* up/down volume then HOLD (or 552)
- DND:** dial 553 DND = Do Not Disturb.
- CALL FWD:** dial 554 1=fwd all,2=busy,3=no answer,4=busy/no answer,5=off net,6=line off net,  
7=DVU,8=DVU no ans,0=follow me,\*=offnet no answer.
- CANCEL FWD:** dial 554 #
- CALLBK:** dial TRANS 556 (call-back a busy or no answer extension.)
- CALLBK:** dial 557 (answers a call-back or dial the number on the screen.)
- BGM:** dial TRANS/PGM 73 (channel 01-12, 00 to cancel) save. BGM = Back Ground Music.
- PICKUP:** dial \*\* or \*7 Ext.No.
- PAGEALL:** dial #00 **INTERNAL:** dial #5 **EXTERNAL:** dial #8
- PROG. KEYS:** dial TRANS/PGM DSS (flexible key) dial code or Ext.No. SAVE

#### **To use CONFERENCE & MUTE firstly store them into FLEX locations:**

- CONF:** dial TRANS Flex button TRANS 91 HOLD MON
- MUTE:** dial TRANS Flex button TRANS 95 HOLD MON

#### **Other common user instructions:**

- MAKE AN INTERNAL CALL:** dial EXT.No. (100-399)
- SELECT A LINE:** dial 9 ( or 0 )
- TRANSFER A CALL:** dial TRANS Ext.No. Hangup or wait for an answer then hangup.
- CALL PARKING:** dial TRANS 601-619 (**RETRIEVE CALL:** dial 601-619)
- CHANGE INTERCOM MODE:** dial TRANS 12 1=Handsfree, 2=Tone ring, 3=Privacy Handsfree SAVE
- CHANGE RING TONE:** dial TRANS 11 1-4 HOLD/SAVE.
- PROGRAM SPEED DIALS:** dial TRANS/PGM SPEED 001-099 Ph.No. save Name save  
MON to exit.

**Note:** On the 8 button handset most features can be accessed via the menu. Press TRANS/PGM & scroll up & down by the volume keys. Make your selection by pressing the relevant digits.