

DEAR CUSTOMER

You have just acquired a new generation Sagemcom telephone. Thank you for placing your confidence in us.

This device has been manufactured with the utmost care.

If you should have difficulties in operating it, we recommend that you consult this manual or contact the Sagemcom Support Team on **0845 0900 316**.

You can also find information on the following site:

www.sagemcomdigital.co.uk

For your comfort and safety, we ask that you read the following section carefully:
« **Recommendations and safety instructions** ».

The CE marking certifies that the product meets the essential requirements of Directive 1999/5/CE of the European Parliament and of the Council pertaining to microwave radio equipment and telecommunication terminal equipment, for the safety and health of users, for electromagnetic interference.

Furthermore, it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interference.

The declaration of compliance may be looked up on the www.sagemcom.com site "Support" section or can be obtained from the following address :

Sagemcom Broadband SAS
250, route de l'Empereur
92848 Rueil-Malmaison Cedex - France

*: 3.95 pence per minute from all fixed lines, tariff cost effective from 01/09/2009

D750-D750A

How to navigate among the menus

To navigate among the menus, use the keys : (▲) and (▼).

NOTE: Only the "up" and "down" keys of the navigator function. The "left" and "right" keys have no effect on any action. Refer to paragraph «**Navigators**», page 3.

Step 1: accessing a menu

- Press (■).

Step 2: selecting a menu / a sub-menu

- Select "the desired menu" use the keys (▲) or (▼).
- Confirm by pressing the key (■).

Step 3: selecting a function

- Select "the desired function" use the keys
- Confirm by pressing the key (■).
- Modify the parameter.
- Confirm by pressing the key (■).

Example: how to use the menu to change your handset ring tone.

Go to the menu *HS SETTINGS* → *RING SETUP*.

Step 1: accessing a menu

- Press (■).

Step 2: selecting a menu

- Select " *HS SETTINGS* " using the (▲) or (▼) key.
- Press (■).
- Select " *RING SETUP* " using the (▲) or (▼) key.
- Press (■).
- Select " *INT. RING* " (or " *EXT RING* ") using the (▲) or (▼) key.
- Press (■).

 
Step 3: selecting a function

- 10 melodies are available: " *MELODY 1* "... " *MELODY 10* ".
Select the desired melody using the (▲) or (▼) key.
- Press (■) to confirm your selection.


D750-D750A

BEFORE YOU BEGIN


Make sure your package includes the following:

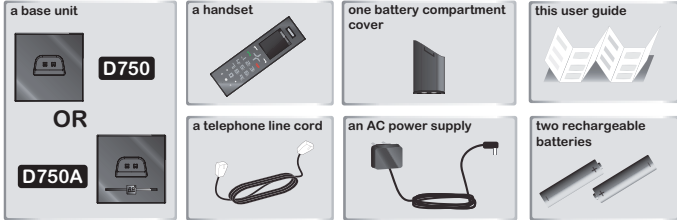

 If you have purchased the Duo / Trio version you will find below additional accessories per handset:

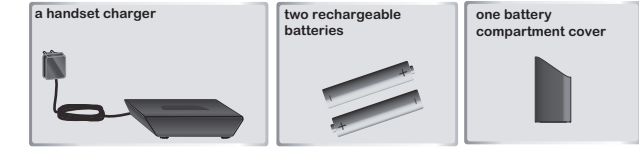


The base

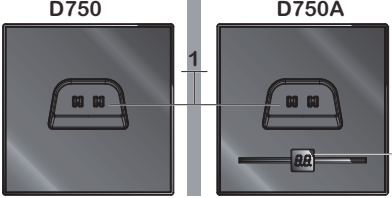 

1. Handset port

2. Display
(refer to paragraph «**How the base display works**», page 15).

 
Handset keys

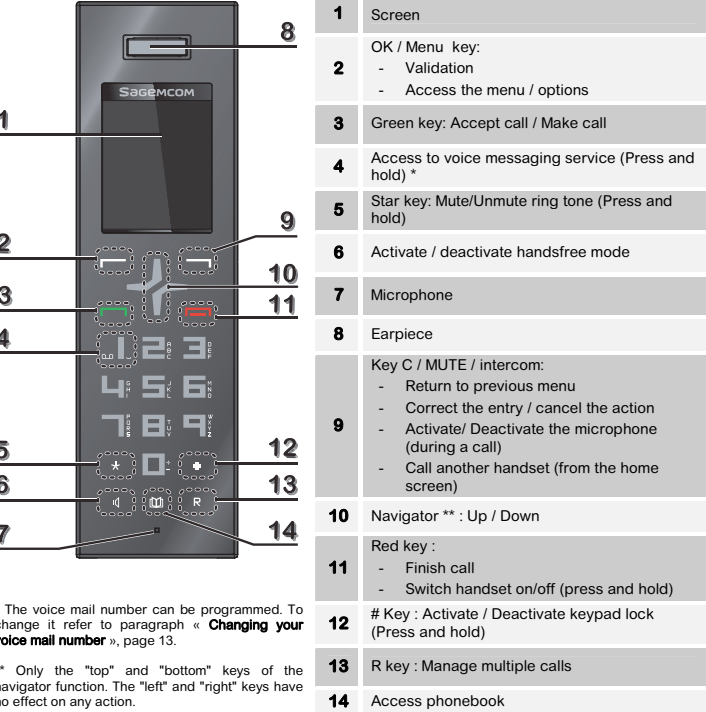

* The voice mail number can be programmed. To change it refer to paragraph « **Changing your voice mail number** », page 13.


** Only the "top" and "bottom" keys of the navigator function. The "left" and "right" keys have no effect on any action.

 Navigator

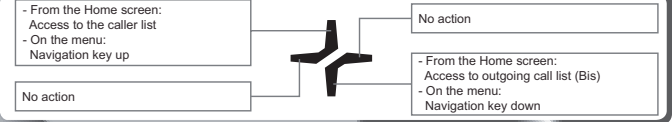

D750-D750A

 Rear view

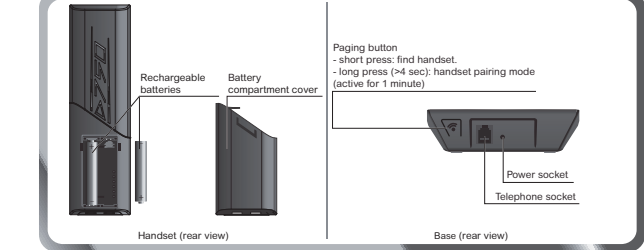

Installing the phone

- Plug the phone cable into the socket of your D750 base.
- Connect the other end of the cable with the phone wall socket.
- Connect the power adapter cord to the underside of the base.
- Connect the power adapter plug to the wall socket.
- Insert the batteries according to their polarities.
- Close the battery compartment.
 - « *SEARCHING...* » appears on the screen.
 - A welcome message in all the languages supported by the telephone is displayed on the screen, press (■).
 - Select the country using ▲ or ▼ keys, press (■).
 - A screen asks you to confirm your choice. Press (■).
 - You will hear a confirmation tone. The standby screen is displayed.
- Place the handset in the base station to charge for **15 hours** prior to first use.

IMPORTANT

If your handset batteries are empty leave the handset in the charging unit for at least 10 minutes. You will then be able to switch it on again.

* depending on version

D750-D750A

CALL LOG

Calling Line Identification Presentation (CLIP)

This CLIP phone stores and displays CLIP information provided by your local telephone company. If you have not subscribed to CLIP service or if the caller number is suppressed, the display shows "unknown".

NOTE: Display of numbers not available:
- *OUT OF AREA*: you are not in same area as your contact.
- *WITHHELD*: your contact does not want their number to be displayed.

Received/Missed call log

The list contains the numbers of the last 10 calls received.

- Press (▲) .
- The most recent name or call number is displayed (depending on whether or not your contact is stored in your phonebook).
- Press the ▲ or ▼ key to go through the list. Press (■).
- Select " *DETAILS* ". Press (■).
- The date and time when the selected call was received are displayed.
- Press the ▲ or ▼ key to go through the list.

NOTE: If icon ► is displayed the number of this caller exceeds 11 digits and cannot be displayed onscreen. Press (■) to view the complete number.

Consulting a missed call

When call(s) have been missed, the message " *X NEW CALLS* " is displayed on the screen (X is the number of missed calls).

- Press (■).
- The most recent name or call number is displayed (depending on whether or not your contact is stored in your phonebook).
- Press the ▲ or ▼ key to go through the list. Press (■).

NOTE: Missed calls are indicated by the icon ★ in the incoming call log.

Dialled call log

The dialled call log presents the calls you made (max. 5 last calls). To consult the list:

- Press briefly (▼) (■).
- The last dialled number is displayed. Press the ▲ or ▼ key to consult the list of the last 5 numbers dialled.

Calling back a number in your call list

 
- Press the (▲) or (▼) (■) key.
- Press the ▲ or ▼ key to go through the list.
- Press (■).

Making an entry in the phonebook from the list of calls

- Press the (▲) or (▼) (■) key.
- Use ▲ or ▼ to select the desired caller number.

D750-D750A

Handset display

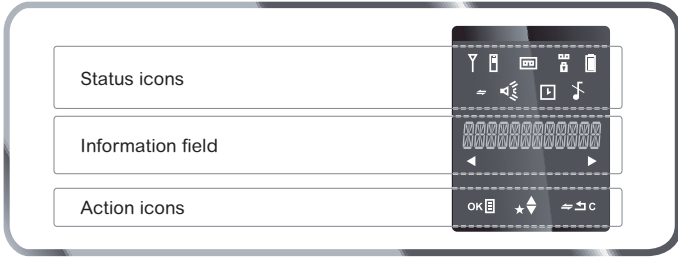

Status icons

	Flashes when the handset is out of range or when the base is disconnected from power.		Hands-free activated
	External call		Charging status icon
	Internal call		Fixed : batteries are full
	New voice messages		Blinks : charging in progress
	Silent mode activated.		Batteries are low.
			Keypad locked
			Alarm set
			On: answering machine activated. Blinks : new message(s) on your answering machine.

Information field

	Telephone number longer than screen display area (11 digits).		88..
--	---	--	------

D750-D750A

- Select " *DELETE* " (or " *DELETE ALL* " to delete the entire phonebook list).
- To confirm the deletion of the entry, Press (■).

Directory capacity

Your directory has a capacity of 50 contacts.

When the memory is full, the message " *PB FULL* " is displayed and you cannot add any new contacts.

USING THE MULTI-HANDSET CAPABILITIES

These functions are used for handset management when two or more handsets are registered on the same base.

Intercom Call

- Make sure your handset is on standby mode.
- Press the (■) key.
 - If your installation has two handsets, the second handset is directly called, and " *CALLING HS X* " appears on the screen (x is the number of the handset called) and " *EXT* " flashes.
 - If your telephone installation has more than two handsets, the icon " *HS* " appears on the screen followed by the numbers of all registered handsets.
- Enter the desired handset number or press the (■) key if you want to call all handsets.

Answering an internal call

- " *CALL FR HS* " followed by the calling handset number is displayed on the screen and " *EXT* " flashes.
- Press (■) to accept the call.

Managing an external and an internal call

Transferring an external call to another handset registered on same base

- During a call, press (■).
- Select " *INTERCOM* ", press (■). The incoming call is put on hold.
- Enter the internal call number. When the user answers, you can announce the call.
- Press (■) key to transfer the call.

NOTE: If the called handset does not answer, press (■) to take back the call.

Making conference calls (3-way conversation)

You can connect one external call to two handsets registered at the base station. To set up a telephone conference from an external call :

- During a call, press (■).
- Select " *INTERCOM* ", press (■). The external user is put on hold.
- Enter the internal call number. Wait until the internal user answers.
- Press and hold (★) until you hear a confirmation tone to start a three-way conference. " *CONFERENCE* " is displayed on the handset screen.

Join in a conversation already taking place

If the share call mode is activated, you can join in a conversation from another handset registered with the same base (refer to paragraphe « Authorise / prohibit call sharing », page 15).

From another handset (registered on the same base), press the green key (■). You will then join in the conversation.

D750-D750A

Action icons

	By pressing the key (■) you access a menu or a list of options		While entering a number: Pressing the key (■) will delete the last letter / character. During a call: By pressing the key (■) you activate / deactivate the handset microphone.
	Pressing the key (■) confirms an action.		By pressing the key (■) you return to the previous menu
	Missed call not consulted.		By pressing the key (■) you can make an internal call (see section " <i>Intercom Call</i> ", page 11).

MENU STRUCTURE

Quick reference

CALL LIST	HS SETTINGS	ALARM
(■)	(■)	(■)
(■)	(■)	(■)
(■)	(■)	(■)
(■)	(■)	(■)
PHONEBOOK		(■)
(■)	(■)	(■)
(■)	(■)	(■)
(■)	(■)	(■)
(■)	(■)	
(■)	(■)	
(■)	(■)	
	(■)	
	(■)	
	(■)	(■)
		(■)
		(■)
		(■)
		(■)

* D750A

D750-D750A

Two outside calls

Accepting a second call whilst being in another call

During a call, a beep is emitted by your operator to inform you that a second call is on hold. A screen displays the number of this second caller on hold.

Press (■) then the key (■) to take back this new call.

Your first contact is put on hold and you can talk with the second caller.

Making a second call whilst being in another call

During a conversation, press (■) then dial the number to be called.

The call in process is then put on hold and you can take the second call back.

Switching from one call to the other

To switch from one call to the other, press (■) then the key (■).

The call in process is then put on hold and you can take the second call back.

Ending one of the two calls

To end one call and continue with the other, press (■) then the key (■).

The call in process is then ended finally and you take the second call back.

To set up a 3-way conference (the 2 calls and yourself)

During a conversation, press (■) then the key (■).

You can then talk with the 2 contacts at the same time.

To end the 3-way conference, press the red key (■).

CUSTOMISING THE HANDSET

Select the ring tone (internal / external)

- Go to the menu " *HS SETTINGS* " → " *RING SETUP* " → " *EXT. RING* " (or " *INT. RING* ").
- Select the ring tone of your choice using ▲ or ▼. Press (■).

Handset ringer level

- Go to the menu " *HS SETTINGS* " → " *RING SETUP* " → " *RING VOLUME* ".
- Use ▲ or ▼ to select the volume level then press (■) to confirm your selection.

Activating/deactivating the warning beeps

- Go to the menu " *HS SETTINGS* " → " *TOPE SETUP* " → " *KEY TONE* " or " *BATTERY TONE* " or " *OUT OF RANGE* ".
- Change the status using the keys ▲ or ▼.
- Press (■).

Modifying the language

- Go to the menu " *HS SETTINGS* " → " *LANGUAGE* ".
- Use ▲ or ▼ to choose the desired language. Press (■) key to confirm your selection.

Handset naming

The default name of the handset is " *HANDSET n* " where *n* is the number of the registered handsets.

- Go to the menu " *HS SETTINGS* " → " *RENAME HS* ".
- Use the keypad to enter the new name (up to 10 characters).
- Use (■) key to delete wrong input if necessary. Press (■).

