 




# OWNER'S MANUAL GPO WINCHESTER NOSTALGIC RADIO

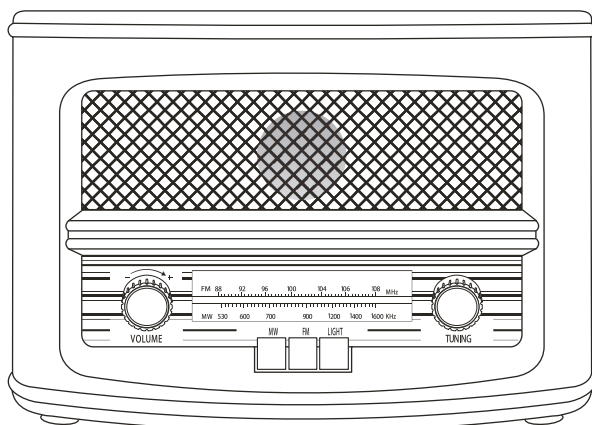

## **IMPORTANT**

### **SAFEGUARDS FOR AUDIO PRODUCTS**

1. **Read Instructions** - All the safety and operating instructions should be read before the product is operated.
2. **Retain instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **Water and Moisture** - Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, laundry tub, in a damp basement, or near a swimming pool, etc.

8. **Accessories** - Do not place this product on an unstable cart, stand tripods, bracket or table. The product may fall and could cause serious injury to a child or an adult, and serious damage may occur to the product. Use only with a cart, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and only a mounting accessory should be used that is recommended by the manufacturer.



9. **Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surfaces. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of the power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, please refer to the operating instructions.
11. **Power Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacle and point where they exit from the product.
12. **Protective Attachment Plug** - The product is equipped with an attachment plug with overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer, with the same overload protection as the original plug.

13. **Lightning** - For added protection for this product during lightning storms or when it is left unattended and unused for long periods of time, unplug from the outlet socket and disconnect the antenna or cable system, where applicable. This will prevent damage to the product due to lightning and power line surges.
14. **Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken not to touch such power lines or circuits as contact with them might be fatal.
15. **Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
16. **Servicing** - Do not attempt to service this product by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
17. **Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
18. **Heat** - The product should be situated away from heat sources such as radiators, heaters, fireplaces and cookers and other products (including amplifiers) that produce heat.
19. When the plugs is used as the disconnect device, plug shall remain readily operable.

## Protect Your Furniture

This model is equipped with non-skid rubber feet to prevent the product from moving when you operate the controls. These feet are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polished, wood preservatives, or cleaning sprays may cause the rubber feet to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centres everywhere, and apply these pads to the bottom of the rubber feet before you place the product on fine wooden furniture.

# PREPARATION FOR USE

## UNPACKING AND SET UP

 
- . Carefully remove the unit from the display carton and remove all packing materials from the unit.
- . Unwind the AC power cord and extend it to its full length.
- . Unwind the FM Antenna wire and extend it to its full length.
- . Place the unit on a stable, level surface, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dust, moisture, humidity or strong magnetic fields.
- . Connect the plug to your AC outlet.

## POWER SOURCE

This system is designed to operate on normal 230V 50Hz AC only. Attempting to operate this system from any other power source may cause damage to the system and such damage is not covered by your warranty.


## NOTE:

You will note that this system is equipped with a polarized AC power plug. If this plug does not fit into your existing AC outlet, you probably have an outdated non-polarized AC outlet. You should have your outlet changed by a qualified licensed electrician.

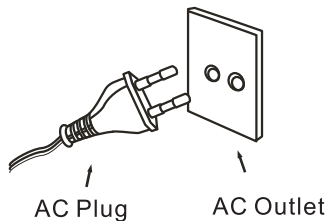


# LOCATION OF CONTROLS AND INDICATORS
 
## FRONT PANL

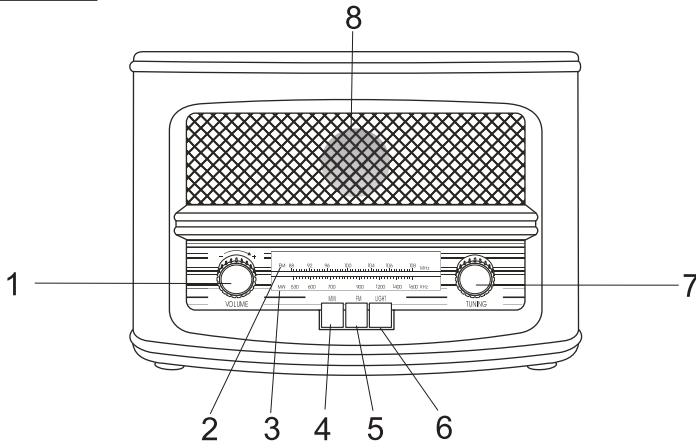

- 1.) VOLUME Control
- 2.) FM Tuning Dial Scale
- 3.) AM Tuning Dial Scale
- 4.) AM Function Button
- 5.) FM Function Button
- 6.) LIGHT Button
- 7.) TUNING Control
- 8.) Speaker

## BACK PANEL

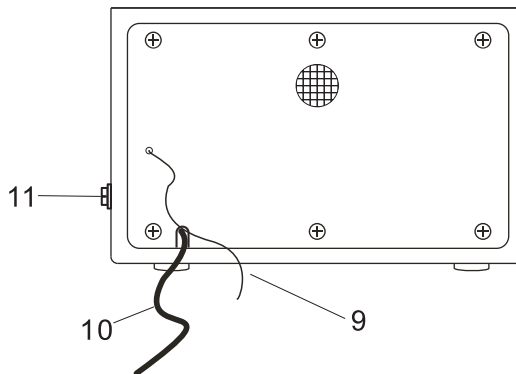 

- 9.) FM Wire Antenna(Back Cabinet)
- 10.) AC Power Cord
- 11.) POWER Button

# OPERATING INSTRUCTIONS

## Attention

 
- 1) Turn on the unit: Press the "POWER" switch (left side of the unit) to pos. "I".
- 2) Turn off the unit: Press the "POWER" switch (left side of the unit) to pos. "O".

## Listening To The Radio


1. To turn the system ON, press the POWER button one time and set the VOLUME to a low level.
2. Press AM/FM buttons for the desired band, AM or FM.
3. Rotate the TUNING control to select the desired radio station
4. Rotate the VOLUME control to the desired level.
5. When finished listening, press POWER button for turning off

## Antenna Information

**AM**- The AM bar antenna is inside the cabinet. If AM reception is unsatisfactory try repositioning the cabinet slightly until the internal antenna is picking up the strongest signal.

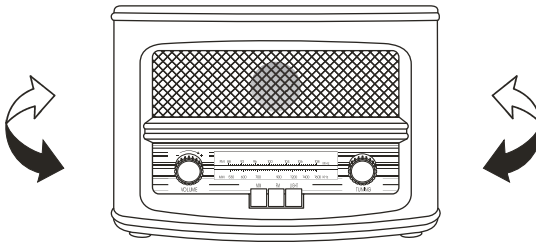

 **FM** - The FM wire antenna is located on the back cabinet. If necessary adjust the position and direction of this antenna until you find the position that provides the reception.

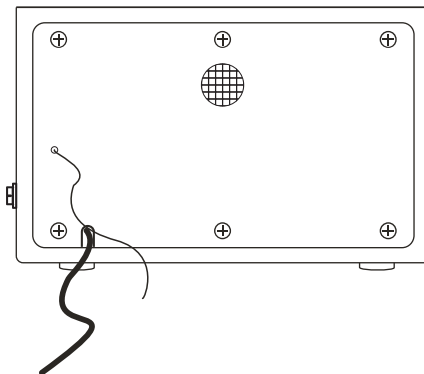

## **WARNING:**

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. PILOT LAMPS SOLDERED IN PLACE. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



**CAUTION:**  
TO REDUCETHE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER - SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

## **SPECIFICATIONS**

### **Frequency Range**

AM 530 - 1600KHz

FM 88 -108MHz

### **Power Source**

AC 230V ~50Hz

### **Power Consumption**

9W

### **Antennas**

Built-in Ferrite Bar for AM

External Antenna for FM

### **Speaker**

3.5 Dynamic type x 1

## WARRANTY & SUPPORT

Your ProTelX product has been carefully manufactured and 100% tested using high quality assured components. It is guaranteed against faulty workmanship and materials for a period of 12 months from the date of purchase. In the unlikely event that failure should occur, the unit will be repaired or replaced free of charge when returned postage paid to the address below within the guarantee period.

The guarantee does not include damage or failure resulting from misuse or damage in transit. Your statutory rights under common law are in no way affected by this guarantee.

For service in or out of the guarantee period, please return the unit postage paid to the ProTelX address below.

When returning your unit please ensure that the package contains a covering letter stating where and when the unit was purchased and the nature of the faults plus your proof of purchase.

\*Repair or replacement is at the discretion of the manufacturer.

ProTelX reserves the right to change product specification without prior notice.

**ProTelX**  
Suite B  
Floor 8 St James House  
Salford  
Manchester  
M6 5FW

**You may wish to call our customer service department on  
0845 521 4095**