


Installation Guide

16-Port Gigabit Smart Managed Plus Switch With PoE
JGS516PE


24-Port Gigabit Smart Managed Plus Switch With PoE
JGS524PE

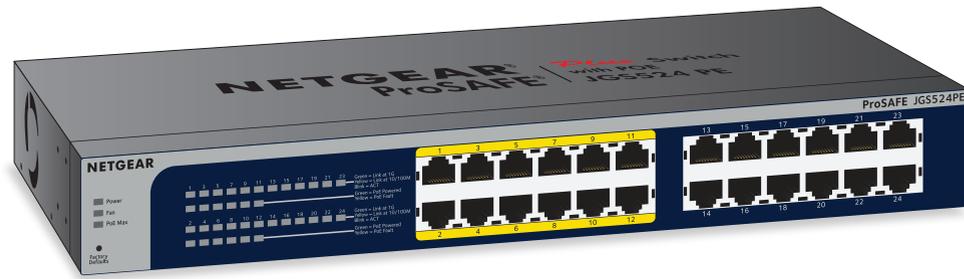

Package Contents


- Switch (Model JGS516PE or JGS524PE, which is shown in the previous figure)
- AC power cord (varies by region)
- A bag that contains rubber footpads for tabletop installation and a kit for rack-mount installation
- Installation guide

Step 1. Connect the equipment.

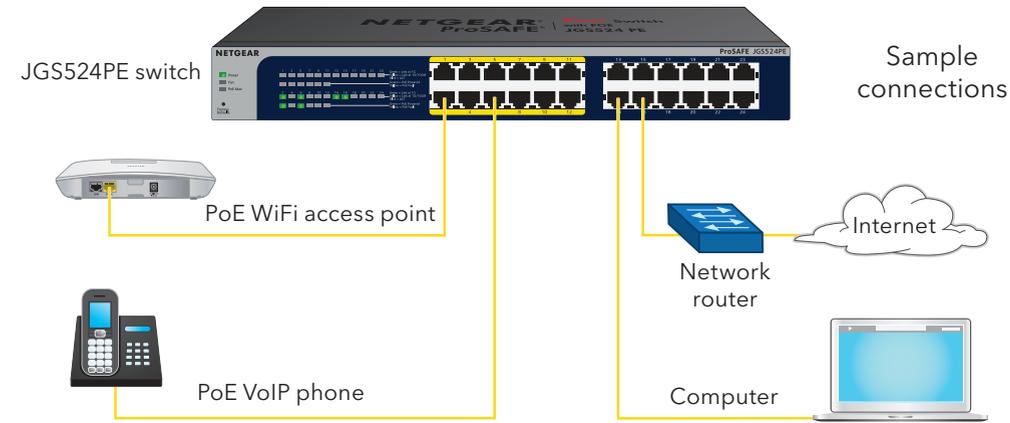

Step 2. Connect power.

Step 3. Check the status.

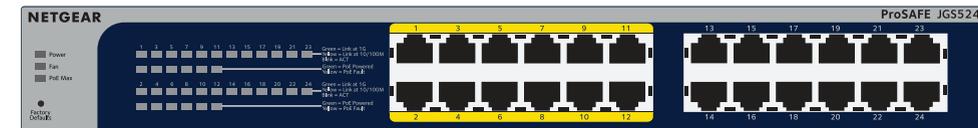

Power System LED



On



Off

Fan System LED



Normal operation



Fan failure

PoE Max System LED



At least 7W of PoE power is available.



At least once during the last two minutes, less than 7W of PoE power was available.



Less than 7W of PoE power is available.

 
PoE Status Port LED



No PoE device powered



PoE device powered



A PoE fault occurred

Speed & Activity Port LED



1000 Mbps link



100 or 10 Mbps link



Activity (blinking)



No link

Access the Switch

Smart Managed Plus switches are plug-and-play so you do not need to configure them. You can also configure and manage additional advanced features of the switch either by using a computer's web browser or by installing the ProSAFE Plus Configuration Utility on a Windows-based computer.

Web Browser Access

You can configure a switch when it is connected only to your computer (off-network), or connected to your computer and your network (on-network).

To use your web browser to configure your switch:

1. If you are configuring the switch off-network, record your computer's TCP/IP configuration settings, and then configure the computer with a static IP address of 192.168.0.210 and with 255.255.255.0 as the subnet mask.

If you are unsure how to do this, visit netgear.com/support and search for Static IP address on computer.

2. Open a web browser and enter the IP address of the switch.

If the switch is connected to a network with a DHCP server (which usually is a router), use the IP address that the DHCP server assigns to the switch. If the switch is off-network or connected to a network without a DHCP server, use the switch's default IP address, <http://192.168.0.239>.

If you are unsure how to determine the IP address of the switch, you can use the NETGEAR Insight mobile app, ProSAFE Plus Utility, or NETGEAR Switch Discovery Tool.

3. Enter the password.

The default password is **password**.

4. Click the **Login** button.

You can now configure additional switch settings in the local browser interface.

5. When you finish configuring an off-network switch, return your computer to its original TCP/IP settings and connect the switch to your network using an Ethernet cable.

ProSAFE Plus Configuration Utility Access

The ProSAFE Plus Configuration Utility runs on Windows-based computers. Visit www.netgear.com/support/product/PCU to download the latest utility.

To configure the switch by using the ProSAFE Plus Configuration Utility:

1. Unzip and install the ProSAFE Plus Configuration Utility on your computer.
2. Connect your computer to the same network as the switch.
2. Double-click the **ProSAFE Plus Utility** icon.
The configuration home page displays a list of Smart Managed Plus switches that the ProSAFE Plus Utility discovers on the local network.
3. Select the switch that you want to configure from the list.
4. When prompted, enter the password.
The default password is **password**.
5. Use the ProSAFE Plus Utility to configure the switch settings.
For a description of Smart Managed Plus features, see the *ProSAFE Plus Configuration Utility User Manual*. You can access the user manual through links on the **Help** tab of the utility.

Note: If an installation problem occurs or you cannot discover the switch when you use the ProSAFE Plus Utility or NETGEAR Switch Discovery Tool, temporarily disable the firewall, Internet security, or antivirus program, or all of these. After you complete the installation and finish configuring the switch, reenable the security services on your computer.

Find the IP Address of the Switch Using the NETGEAR Discovery Tool

The NETGEAR Switch Discovery Tool lets you discover the switch in your network and access the local browser interface of the switch from a Mac or a 64-bit Windows-based computer. Download the latest Switch Discovery Tool by visiting <https://www.netgear.com/support/product/netgear-switch-discovery-tool.aspx>.



201-17412-02

May 2018

© NETGEAR, Inc., NETGEAR and the NETGEAR Logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

Find the IP Address Using the NETGEAR Insight Mobile App

To find the IP address of the switch by using the Insight mobile app:

1. On your iOS or Android mobile device, visit the app store, search for NETGEAR Insight, and download the latest app.
  
 2. Connect your mobile device to the WiFi network of the router or access point that is connected to the switch.
 3. Open the NETGEAR Insight app.
 4. If you do not have a NETGEAR account, tap **CREATE MYNETGEAR ACCOUNT** and follow the onscreen instructions.
 5. To log in to your NETGEAR account, tap **LOG IN** and enter your credentials.
- The NETGEAR Insight app can discover the switch and display its IP address.

Support

Thank you for purchasing this NETGEAR product. You can visit www.netgear.com/support to register your product, get help, access the latest downloads and user manuals, and join our community. We recommend that you use only official NETGEAR support resources.

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à <http://downloadcenter.netgear.com/other/>. (If this product is sold in Canada, you can access this document in Canadian French at <http://downloadcenter.netgear.com/other/>.)

For the current EU Declaration of Conformity, visit <http://kb.netgear.com/11621>.

For regulatory compliance information, visit <http://www.netgear.com/about/regulatory/>.

Do not use this device outdoors. If you connect cables or devices that are outdoors to this device, see <https://kb.netgear.com/000057103> for safety and warranty information.

See the regulatory compliance document before connecting the power supply.

NETGEAR, Inc.
350 East Plumeria Drive
San Jose, CA 95134, USA



NETGEAR INTL LTD
Building 3, University Technology Centre
Curraheen Road, Cork, Ireland

Specifications

Specification	Description
Network interface	RJ-45 connector for 10BASE-T, 100BASE-TX, or 1000BASE-T
Network cable	Category 5e (Cat 5e) or higher-rated Ethernet cable
Ports	JGS516PE: 16, of which ports 1-8 are PoE ports JGS524PE: 24, of which ports 1-12 are PoE ports
Power input	JGS516PE: 100-240 VAC, 50-60Hz, 1.5A maximum JGS524PE: 100-240 VAC, 50-60Hz, 2.5A maximum
Power budget	JGS516PE: 15.4W per port for ports 1-8 Maximum power budget for the switch: 85W JGS524PE: 15.4W per port for port 1-12 ports Maximum power budget for the switch: 100W
Power consumption	JGS516PE: 110W maximum with PoE JGS524PE: 123W maximum with PoE
Weight	JGS516PE: 3.58 lb (1.621 kg) JGS524PE: 4.04 lb (1.828 kg)
Dimensions (W x D x H)	12.91 in. x 6.65 in. x 1.7 in. (328 mm x 169 mm x 43 mm)
Operating temperature	32° to 122°F (0° to 50°C)
Operating humidity	10%-90% relative humidity, noncondensing
Electromagnetic compliance	KC Class A, CCC Class A, FCC part 15 Class A, CE Class A, RCM Class A, VCCI Class A, EAC
Safety agency marks	UL/cUL, CE, CCC, EAC, RCM, MSIP, VCCI