



















**WIL668**  
**USER MANUAL**

# Content

1. SAFETY AND PRECAUTIONS .....	4
2. CARE AND MAINTENANCE .....	4
3. APPEARANCE .....	7
4. ICONS IN THE IDLE SCREEN AND LED.....	8
5. KEYPAD DEFINITIONS .....	8
6. GETTING STARTED .....	10
6.1 SIM CARD INSTALLATION .....	10
6.2 INSTALLING THE BATTERY .....	10
6.3 CHARGING THE BATTERY .....	10
6.4 SECURITY CODES .....	11
7. DOCKING STATION.....	12
8. YOUR HANDSET .....	12
8.1 TURN ON .....	12
8.2 TURN OFF.....	13
8.3 MAKING A CALL .....	13
8.4 ANSWERING A CALL .....	13
8.5 END A CALL .....	13
8.6 EMERGENCY SERVICE.....	13
8.7 CALL RECORDS .....	13
9. IDLE SCREEN .....	13
10. LIST OF MAIN MENU.....	14
11. REMOTE SMS.....	15
11.1 SET LOVE NUMBER .....	15
11.2 SET SOS NUMBER.....	15
11.3 ADD NEW ENTRY .....	15
11.4 SET ALARM .....	15
12. LOVE NUMBER .....	15
13. ANSWERING MACHINE .....	16
14. REMOTE CONTROL .....	16
14.1 REMOTE .....	16
14.2 SOS.....	16
15. REMOTE CONTROL SOS BUTTON .....	17
16. MESSAGES.....	17
16.1 CREATE.....	17
16.2 INBOX .....	17
16.3 DELETE ALL .....	17
17. PHONEBOOK.....	17
17.1 VIEW .....	17

17.2 CREATE .....	18
17.3 DELETE .....	18
17.4 DELETE ALL .....	18
17.5 MEMORY STATUS.....	18
<b>18. SETTINGS .....</b>	<b>18</b>
18.1 ALARM .....	18
18.2 RINGTONE .....	18
18.3 TIME&DATE .....	19
18.4 LANGUAGE.....	19
18.5 KEYPAD LOCKING.....	19
18.6 HEARING AID .....	19
<b>19. SHORTCUT KEY .....</b>	<b>19</b>
19.1 CALENDAR .....	19
19.2 CALCULATOR .....	20
<b>20. STK (SIM TOOL KITS).....</b>	<b>20</b>
<b>21. INPUT MODE.....</b>	<b>20</b>
21.1 ENGLISH INPUT MODE .....	20
21.2 FRENCH INPUT MODE .....	20
21.3 SPANISH INPUT MODE.....	21
21.4 ITALIAN INPUT MODE .....	21
21.5 GERMAN INPUT MODE .....	21
21.6 DUTCH INPUT MODE .....	22
21.7 NUMBER INPUT MODE.....	22
21.8 SYMBOL SELECT MODE .....	22

# 1. SAFETY AND PRECAUTIONS

-  Please read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.
-  Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.
-  Keep the phone far away from children.
-  When driving, please use the hands free calling device to ensure safety. Please park the car at roadside for communication unless in emergency.
-  Switch off the phone when boarding an airplane and do not switch the phone on during the flight.
-  Be careful when using the mobile phone in the vicinity of such devices as pacemakers, hearing aids and other electro-medical equipment, which may be interfered by the mobile phone.
-  No guarantee for the accessories and parts not produced by the original factory.
-  Never attempt to disassemble the phone by yourself. Contact the supplier in case of any trouble with your mobile phone.
-  Do not recharge the phone without battery being installed.
-  Charge the phone in well-ventilated environment and keep away from inflammable and high explosive articles.
-  To avoid demagnetization, keep the handset away from magnetic substances, such as magnetic discs or credit cards.
-  Keep the phone away from liquid. If soaking or erosion occurs, take the battery out and contact the supplier.
-  Avoid using the phone in too high or too low temperature environments. Never leave the phone exposed under direct sunlight, in high humidity or in a dusty environment.
-  Do not use liquid or a damp cloth with strong detergents to clean the handset.
-  Wireless phones may be susceptible to interference, which can affect performance.
-  Use only approved enhancements and batteries. Do not connect incompatible products.
-  Use only in the normal position as explained in the produce documentation. Do not touch the antenna unnecessarily.
-  Ensure the phone is switched on and in service. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so

# 2. CARE AND MAINTENANCE

## Battery care

·Your device is powered by a rechargeable battery. When the charge is low, please re-charge the battery. In order to extend the lifetime of the battery allow the battery to run out of power before recharging.

·Unplug the charger from power source and the phone when not in use. Do not leave the battery connected to a charger once the battery is full. Overcharging may shorten battery lifetime.

·Extreme temperature can affect the ability of your battery to charge. Battery works only at room temperature (between 15 and 25°C). If the temperature of the battery is too hot or too cold, the battery will not charge and can malfunction. Extreme temperatures reduce and cause malfunctions in the battery.

## ·Use the battery only for intended purpose.

Never use unauthorized charger or battery or that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the polarity; (+) and (-) terminals of the battery (metal stripes on the battery). This might happen, for example, when you have a spare battery or magnetic objects in the

vicinity. Short-circuiting the terminals can damage the battery or the connectors.

• Do not leave the battery in very warm or cold places, such as in a closed car in summer or winter.

All of the above suggestions apply to the phone, battery, charger, or any accessory.

If phone or accessories are not working properly, take only to authorised service facilities.

Damaged batteries can damage or ruin components (e.g. Plastics).

- When the phone or accessories return to normal temperature, moisture can form inside and damage circuit boards.

- Do not attempt to open the phone or accessories other than as instructed in this guide.

- Do not drop, knock, or shake the phone or accessories. Rough handling can break internal circuit boards and fine mechanics.

- Do not use chemicals, solvents, or detergents to clean the phone or accessories.

- Do not paint the phone or accessories. Paint can clog the moving parts and prevent proper operation.

- Use only the supplied or authorized replacement parts. Unauthorized parts, modifications, or attachments can damage the phone and may violate regulations governing radio devices.

- Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

### **Mobile phone maintenance**

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode internal parts and circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.

- Do not use or store the device in dusty, dirty areas to avoid damage to moving parts and components.

- Do not store the phone or accessories in warm areas. High temperatures reduce the life of electronic devices.

### **Charging your battery**

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only approved batteries and recharge your battery only with approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a long period, it may be necessary to connect the charger, disconnect it and then reconnect it to begin charging the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting will occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

**Note: Actual operation time of the battery varies according to operation mode, network settings and call settings.**

**Note:**

1. After the phone has run out of battery, we recommend you recharge in time.
2. To ensure safety, do not change the parts and accessories of the battery by yourself or take off the battery shell.
3. We suggest you only use the original battery supplied with your phone by our company to avoid any damage to your phone.
4. The temperature range for charging the phone is 0°C-40°C. Do not charge the battery in too high or too low temperatures.
5. Do not use the mobile phone during charging. Keep the phone away from charger before use.
6. Please don't keep charging for a long time. Pull out the charger quickly after the battery is fully charged.

### 3. APPEARANCE



- 1. Neck strap Eyelet
- 2. LCD
- 3. SOS Shortcut key
- 4. Send key
- 5. End key

- 6. Love Number Key
- 7. Answering Machine Key
- 8. Menu Key
- 9. Clear key
- 10. Upside Key

11. Downside Key

12. Number Key

13.\*Key












14. #Key

15. Loudspeaker

16. Microphone

17. USB Socket









 


## 4. ICONS IN THE IDLE SCREEN AND LED


Icon	Functions introduction
	<b>Signal strength</b> Vertical bars show the strength of the network connection. The icon is displayed on the idle screen.
	<b>Battery power</b> Filled area shows the battery level. The icon is displayed on the idle screen.
	<b>Alarm on/off</b> The icon shows an alarm is on. When the alarm is off, it disappears.
	<b>Keypad locked</b> The icon shows when the keypad is locked. Press the pound key to activate or deactivate.
	<b>Unread message</b> The icon is displayed on the idle screen when there are unread messages in the inbox.
	<b>Messages full</b> The icon is displayed and blinks continuously on the idle screen when the messages memory is full.
	<b>Silent environment</b> When the phone settings are set to meeting, the icon is displayed on the idle screen.
	<b>Ring and Vibrate</b> When the setting ring and vibrate is set, the icon is displayed on the idle screen.
	<b>Answering machine on</b> When turned the answering machine on, the icon will displayed on the idle screen.
	<b>Unread voice message</b> When there are unread voice message, the icon will displayed on the idle screen.
	<b>Remote Control</b> When the Remote Control function is activated, the icon will keep on displayed on the idle screen.

## 5. KEYPAD DEFINITIONS

Key	Definitions
-----	-------------



	<b>Menu Key</b> In the standby mode, press the key to access the menu.
	<b>Clear key</b> ① In the menu, press the key back to the previous interface. ② In the editing mode, press the key to delete characters.
	<b>Love Number Key</b> Short press: Enter the Love Numbers menu. Long press: Activate cycle love number dialing.
	<b>Answering Machine</b> In the standby mode, press the key to access the menu.
	<b>SOS Shortcut Key</b> Press to dial SOS.  <b>The SOS order can be activated by press and hold the SOS shortcut key at least 2 seconds when keypad is locked.</b>
	<b>End Key ( Red Key)</b> ①End or reject calls ②Turn phone on/ off by long press. ③Exit menu system.
	<b>Send Key ( Green Key)</b> ①Make and answer calls. ②Confirm choices in menu. ③During a call: Activate or deactivate loudspeaker
	<b>Number Key</b> ①Input phone numbers; ② For editing SMS message.
	<b>Star key</b> ①Press the * key to list the symbol chart in the edit mode; ②Long press * key to lock or unlock the keypad in the standby mode.
	<b>Pound key</b> ①Press the # key to switch the input method in text edit interface; ②Long press # key to switch the silent/general mode in the idle screen.
	<b>Upside Key</b> ① Increase the volume. ② Long press to enter the Calendar. ③ Scroll the menu options.


	<p><b>Downside Key</b></p> <ul style="list-style-type: none"> <li>① Decrease the volume.</li> <li>② Long press to enter the Calculator.</li> <li>③ Scroll the menu options.</li> </ul>
---	--

## 6. GETTING STARTED
 
### 6.1 SIM CARD INSTALLATION

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

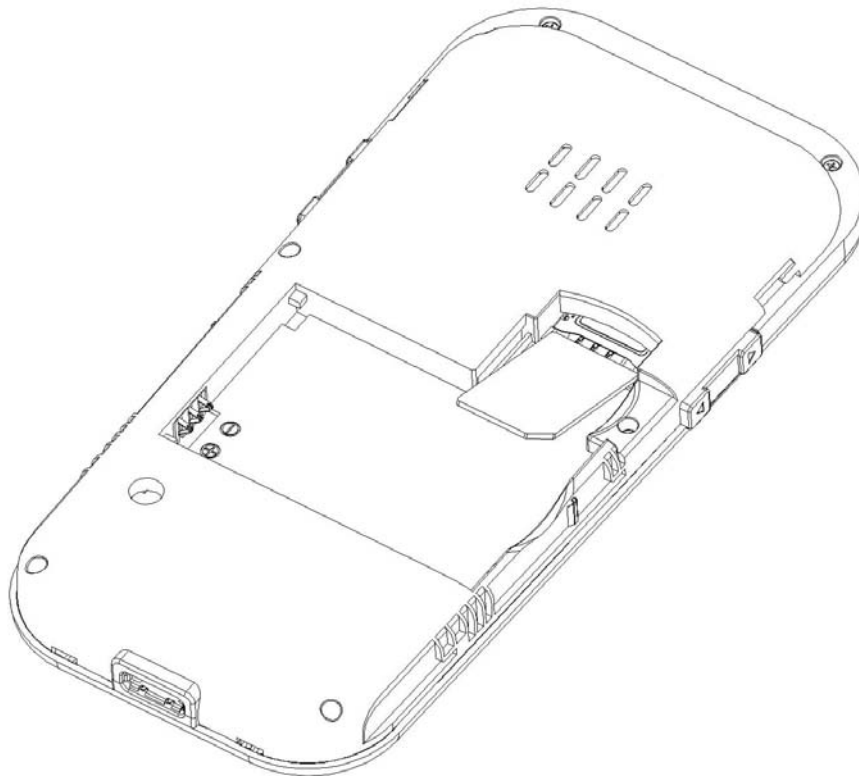

### 6.2 INSTALLING THE BATTERY

Note: Please refer to the graphical representation for correct operation and avoid damages to the battery and contact tag.


### 6.3 CHARGING THE BATTERY

Insert the charger plug into the phone socket , plug the other end of the charger into the

appropriate electrical outlet and the phone will provide a visible or audible indication that the battery is charging. When the phone is full of charge, press the release tab and remove the charger.

The battery can be damaged if left at low level for long periods.

To ensure the phone working properly, please use the authorized charger.

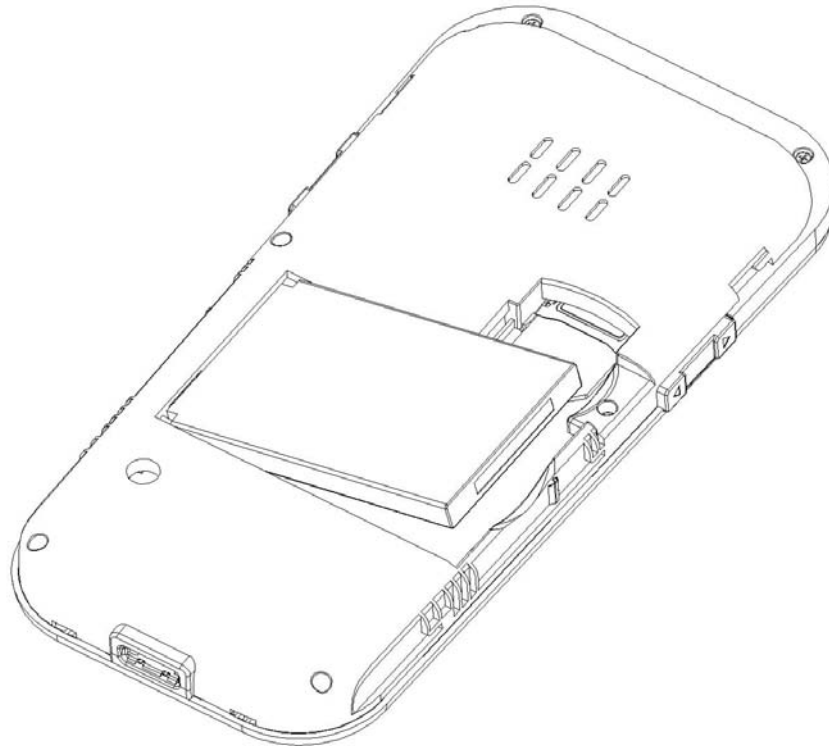

## 6.4 SECURITY CODES

### —PIN code

**PIN** code (Personal identify number) prevents unauthorized use of your phone. The **PIN** code usually comes from your service provider along with the **SIM** card.

If you enter the wrong code three times continuously, the **PIN** code is locked. To unlock the **PIN** code, you need a personal unlocking key (**PUK**) from your service provider.

### —PIN2 code

Some functions, call costs for example, require a second **PIN2** code. The **PIN2** code comes from your service provider along with some of the SIM cards, and these functions are only available when the SIM card supports them.


If you enter the wrong PIN2 code three times, the **PIN2** code is locked. To unlock the PIN2 code, you need a personal unblocking key (**PUK2**) from your service provider.

### —Phone code

Activate/Modify/Deactivate Startup password (the length of the password is 4-8 digital numbers).

If you activate the "Startup password", you need to enter the password each time you turn the phone on. If you want to modify the Startup password or deactivate "Startup password", you can enter Modify/Deactivate option to set.

## 7. DOCKING STATION

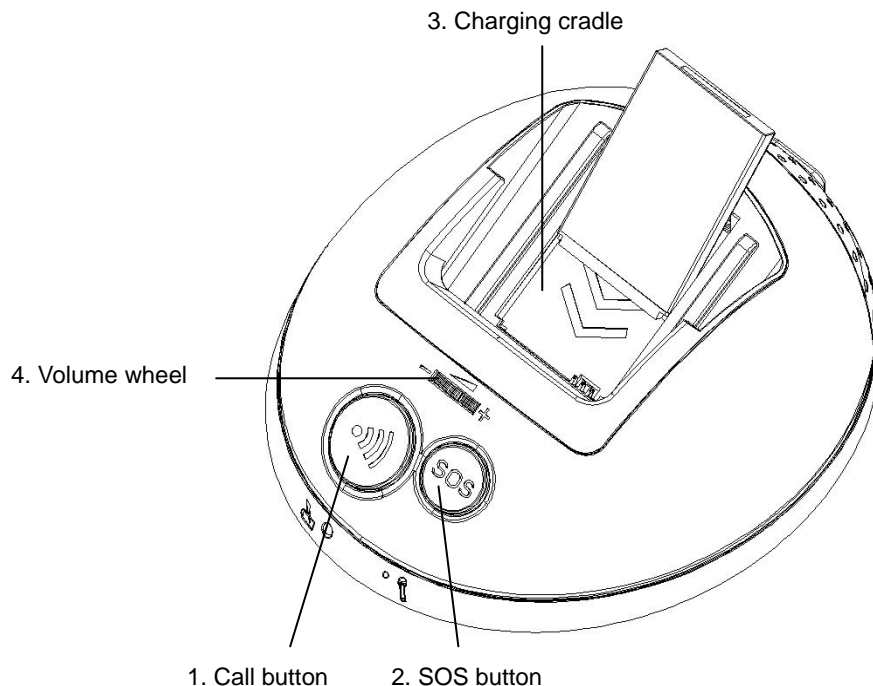

1. **Call button:** To answer or to end a call. The call will be automatically in loud speaker mode.
2. **SOS button:** SOS call can be activated by pressing the SOS button on the docking station.
3. **Charging cradle /docking station:** Insert the battery into the charging cradle of the docking station, the battery will start charging automatically (shown by red LED light on the base) When fully charged, the red LED will turn green.
4. **Volume wheel:** Adjust the volume by turning the small wheel.

## 8. YOUR HANDSET

### 8.1 TURN ON

·Press and hold the power key to turn the phone on, the phone LCD illuminates, and displays power on animation.

Not all menu interfaces, which do not rely on the SIM card, are accessible when SIM card is not installed or incorrectly installed.

·When the **PIN** code is activated, the phone will display “Please enter **PIN** code” at power on. Input the correct **PIN** code and press Left soft key to continue.

·If the **PIN** code is locked, the alert message for inputting **PUK** code will display in the screen at power on.

·The phone will search for the network automatically when turned on.

On correct connection to the network, the name of the network and signal strength are displayed; if the network is not found or registration fails, you can only access emergency

calls and other functions that do not require the network.

## 8.2 TURN OFF

In the standby mode, press and hold the End key for several seconds until the phone turns off, both in standby or during conversation.

## 8.3 MAKING A CALL

In idle screen, dial the phone number then press the green key to make the call. Press the Clear key to delete a digit if necessary or press and hold the Clear key to delete all the digits.

## 8.4 ANSWERING A CALL

When you received a call, your phone rings and vibrates and displays an incoming call message. Press the green key to answer the call.

## 8.5 END A CALL

Press the red key to end a call or cancel an outgoing call when required.

## 8.6 EMERGENCY SERVICE

You can call emergency services when SIM card is not inserted. Contact your service provider to obtain the emergency call function.

## 8.7 CALL RECORDS

In idle screen, press the green key to view all the call records, you can check the time, date and number of these calls. Press the green key again to dial the selected record.

# 9. IDLE SCREEN

After power on the first screen that appears is the idle screen:



The screen shows icons indicating the network status, signal strength, battery level, time, date and configuration information.

## 10. LIST OF MAIN MENU

In idle screen:

Press the menu key to access the menu. The menu includes items:

(1) Phonebook (2) Messages (3) Remote control (4) Settings

List of menu as below:

<b>Phonebook</b>	View Create Delete Delete all Memory status
<b>Messages</b>	Create Inbox Delete all
<b>Remote control</b>	Remote    On/Off SOS
<b>Settings</b>	
1) <b>Alarm</b>	
2) <b>Ringtone</b>	Incoming call Message tone
3) <b>Time&amp;Date</b>	
4) <b>Language</b>	Automatic English French Spanish Italian German Dutch Finnish Danish Swedish Norwegian
5) <b>Keypad Locking</b>	OFF 5 sec 30 sec 1 min 5 min
6) <b>Hearing aid</b>	On/Off

## 11. REMOTE SMS

It is possible to set below features via remote SMS;

①Love number ②SOS number ③Add numbers in phone book ④Alarm.

Remote SMS Feature Operation:

Write the SMS message as below on another phone→Send the message to the Easycell phone→Upon receipt of the SMS message the Easycell registers the information automatically.

### 11.1 Set Love Number

**Edit: AT+L:name:num**

[For example:] AT+L:Jack:123456789

-The information to be registered in phone is:

Name: Jack Number: 123456789

-5 favourite numbers can be stored, when the limit is exceeded, the last number will be deleted and replaced by the new entry.

### 11.2 Set SOS Number

**Edit: AT+S:name:num**

[For example:] AT+S: Police:123123123 Police Number is 123123123

You can save 1 SOS Number only, when you set a new number, the existing number will be replaced by the new number.

### 11.3 Add New Entry

**Edit: AT+P:name:num**

[For example:] AT+T:Jill:345345345 Jill new entry is 345345345

When the limit is reached, you can not add entry anymore.

### 11.4 Set Alarm

**Edit: AT+A:hh:mm:content**

[For example:] AT+A: 19:23: Goodbye. The alarm is 19:23. The content is "Goodbye".

- Time Format must be 24-hour.

- The content: Maximum amount of characters are 20.

**Notices:**

(1) Name: Maximum amount of character input is 16, when the limit is reached, you can not set more.

(2) Number: Maximum amount of digits is 20, it can not be empty.

## 12. LOVE NUMBER

5 love numbers can be recorded.

-Press the love key to enter and browse the number list, up/down key to scroll entries.

-Press the menu key to enter the options:

1. **View** → ①Name → Menu key to edit,clear key to delete digits.

②Phone number → Input the number→Menu key to save → Done

2. **Delete**

3. **Send SMS** → Menu key to start edit, clear key to delete digits→Menu key to confirm and send.

-Press send key to dial the selected record.

## 13. ANSWERING MACHINE

-Press Answering Machine Key to enter the menu.

1. Play: (Listen to the incoming voice messages.)

2. Settings: (To set your outgoing voice message.)

↓ Options

(1)On/Off (Press the menu key to set the answering machine on or off)

(2)OGM (Outgoing Message)→ ① Play: Listen to the outgoing message.

② Re-record: Press the menu key to start recording, pause or continue, clear key to exit and save.

-When there have unread incoming voice message, the indicator light on the docking station will keep on, press answering machine key to hear the voice message.

**Notice:** ①Please close to the microphone as much as possible when recording outgoing message.

②The time limit of each incoming message is 20 seconds.

③Only 1 outgoing message can be creating, if a new one to be created, it will replace the previous.

## 14. REMOTE CONTROL

### 14.1 Remote

Press menu key to set On/Off.

### 14.2 SOS

**When keypad is locked, long press SOS button for 2 seconds can also activate SOS feature.**

SOS Setting (Press up/down key to choose the options below.)

①**SOS Number:** Input the SOS phone number.

②**SMS Status:** Press “ \* ” or “ # ” to select ON or OFF to activate or deactivate the SMS.

(SMS Status: When a SOS call activated, after the SOS countdown count to 1, the stored SMS will send automatically to the first contact of the Love Number.)

③**SMS Content:** Create the SOS message.

Ⓢ PressClear key to exit and save.



## 15. REMOTE CONTROL SOS BUTTON





1. An incoming call can be answered by pressing the Remote Control SOS button.
2. When the phone is in standby, pressing the remote control SOS button can activate an SOS call.

**Note:** In open space, the transmitting distance is about 100 meters.

## 16. MESSAGES

MESSAGE ICON DESCRIPTION

ICON	DESCRIPTION
	<b>Unread SMS</b> Indicates unread SMS stored in inbox.
	<b>Read SMS</b> Indicates read SMS stored in inbox.

### 16.1 Create

- Press number key to write a message.
- Press “ \* ” to select symbol, “ # ” to switch input method.
- Press the menu key to confirm and send out, clear key to delete digits or exit.

### 16.2 Inbox

- All the SMS received stored in Inbox.
- The icon of the unread SMS will shows on the screen when a new SMS message received. Press menu key or green key to read the SMS, time of receipt, date, and sender.
- After reading the SMS, there have 3 options for you to operate of the message.
  - Reply To make a response.
  - Delete To delete the message.
  - Edit To edit the message or forward to others.

### 16.3 Delete All

Delete all : To delete all the messages of the inbox.

## 17. PHONEBOOK

Store the contacts information in this function.

### 17.1 View

- Press the menu key to browse the contact's information, or edit at it.

## 17.2 Create

-Add new entries to the phonebook, press the menu key to create, then press menu key to confirm or clear key to exit.

## 17.3 Delete

-Press menu key to confirm delete.

## 17.4 Delete All

-Delete all the contact records stored in the phone  
-Press menu key to confirm, clear key to cancel.

## 17.5 Memory Status

To shows the memory status of the Phonebook.

-Phone  
-SIM

# 18. SETTINGS

The Settings menu includes items: (1) Alarm (2) Ringtone (3) Time&Date (4) Language (5) Keypad Locking (6) Hearing Aid

-Press: Menu key or green key to enter menu and options;  
Upside or downside Key to scroll in menus;  
Clear key back to previous menu;

## 18.1 Alarm

Press the menu key to enter the alarm setting, clear key to cancel or exit.

-Time  
Edit and set the time of the alarm.  
-On/Off  
Press \* key or # key to activate or deactivate the alarm.  
-Snooze  
Press \* key or # key to set the snooze time.  
-Mode  
Press \* key or # key to set the alarm mode: Once/Customized/Everyday.  
-Alarm content  
Edit the alarm text.

## 18.2 Ringtone

1. Incoming call  
2. Message tone  
-Press the Up/Down key to select options.  
-Press the Menu key to save.

### 18.3 Time&date

Press the menu key to enter the menu.

1. Time
2. Date
3. Date format

-Press “\*” or “#” key to choose date format.

-Press menu key to save.

### 18.4 Language

Seven languages are available.

Up/Down key to scroll the options, menu key to save.

1. Automatic (It is normally selected according to SIM card provider nation.)
2. English
3. French
4. Spanish
5. Italian
6. German
7. Dutch
8. Finnish
9. Danish
10. Swedish
11. Finnish

### 18.5 Keypad Locking

Press the upside or downside key to select the automatical lock time of the keypad.

Off/5 sec/30 sec/1 min/5 min/

### 18.6 Hearing Aid

1. Press the menu key to set the hearing aid on or off.

**Note:** The hearing aid function only available in the call.

2. In the standby mode, plug in the earphone, long press the Clear key to open the audiphone.

## 19. SHORTCUT KEY

### 19.1 Calendar

In the standby mode, long press the Upside key to enter the Calendar feature.

## 19.2 Calculator

In the standby mode, long press the Downside key to enter the Calculator feature.

This feature allows you to do simple calculations.

Press the numbers on the keypad to enter the corresponding numbers. Use following direction keys to calculate:

\*key: switch  $+$   $/$   $-$   $\times$   $\div$

#key: decimal point

Press the clear key to cancel digits.

Press menu key and the Send key to show the calculation result.

## 20. STK (SIM Took Kits)

If the SIM card supports STK function, the phone can display different first level menu by different STK card.

This function needs the network operator's support. To use this function it must be supported by the SIM card operator and the various functions available depend completely on the support of the SIM card operator.

## 21. INPUT MODE

On text editing status, press the # key to switch input mode. As you press the # key, the following icons (not the descriptions) appear in the upper right of the display.

Press a key once to insert the first letter on the key, twice for the second letter, etc. If you pause briefly, the last letter in the display is accepted and your phone awaits the next entry.

For example, press the "2" key continuously, it will appear "A", "B", "C", "2" one by one. The character or characters can be input as per the following lists:

### 21.1 ENGLISH INPUT MODE

Key	Uppercase characters	Lowercase characters
1	, . ? ! 1	, . ? ! 1
2	ABC2	abc2
3	DEF3	def3
4	GHI4	ghi4
5	JKL5	jkl5
6	MNO6	mno6
7	PQRS7	pqr7
8	TUV8	tuv8
9	WXYZ9	wxyz9
0	Space or 0	Space or 0

### 21.2 FRENCH INPUT MODE

Key	Uppercase characters	Lowercase characters
-----	----------------------	----------------------

1	. , - ? ! \ @ : # \$ / _ 1	. , - ? ! \ @ : # \$ / _ 1
2	ABC2ÂÄÇ	abc2áàç
3	DEF3ÊË	def3éeè
4	GHI4Ï	ghi4ï
5	JKL5	jkl5
6	MNO6ÑÓÖ	mno6ñoò
7	PQRS7	pqrs7
8	TUVÜ8	tuvúü
9	WXYZ9	wxyz9
0	Space or 0	Space or 0

### 21.3 SPANISH INPUT MODE

Key	Uppercase characters	Lowercase characters
1	. , - ? ! \ @ : # \$ / _ 1	. , - ? ! \ @ : # \$ / _ 1
2	ABC2ÂÄÇ	abc2áàç
3	DEF3ÊË	def3éeè
4	GHI4Ï	ghi4ï
5	JKL5	jkl5
6	MNO6ÑÓÖ	mno6ñoò
7	PQRS7	pqrs7
8	TUVÜ8	tuvúü
9	WXYZ9	wxyz9
0	space or 0	space or 0

### 21.4 ITALIAN INPUT MODE

Key	Uppercase characters	Lowercase characters
1	. , - ? ! \ @ : # \$ / _ 1	. , - ? ! \ @ : # \$ / _ 1
2	ABC2À	abc2à
3	DEF3ÊË	def3èé
4	GHI4Ì	ghi4ì
5	JKL5	jkl5
6	MNO6Ò	mno6ò
7	PQRS7	pqrs7
8	TUV8Ù	tuv8ù
9	WXYZ9	wxyz9
0	space or 0	space or 0

### 21.5 GERMAN INPUT MODE

Key	Uppercase characters	Lowercase characters
1	. , - ? ! \ @ : # \$ / _ 1	. , - ? ! \ @ : # \$ / _ 1
2	ABC2ÄÅ	abc2äå
3	DEF3Ê	def3é
4	GHI4	ghi4
5	JKL5	jkl5
6	MNO6Ö	mno6ö
7	PQRS7	pqrs7

8	TVU8Ü	tuv8ü
9	WXYZ9	wxyz9
0	space or 0	space or 0

## 21.6 DUTCH INPUT MODE

Key	Uppercase characters	Lowercase characters
1	. , - ? ! \ @ : # \$ / _ 1	. , - ? ! \ @ : # \$ / _ 1
2	ABC2ÇÄÅÄÄ	abc2çääää
3	DEF3ÉÊËËË	def3ëëëë
4	GHI4ÏÎÎÎ	ghi4ïîîî
5	JKL5	jkl5
6	MNO6ÖÖÖÖÖ	mno6ööööö
7	PQRS7	pqrs7ß
8	TUV8ÜÜÜÜÜ	tuv8üüüüü
9	WXYZ9	wxyz9
0	space or 0	space or 0

## 21.7 NUMBER INPUT MODE

Press the # key to switch the Entry Mode to Number Entry Mode, and then press the corresponding number keys.

## 21.8 SYMBOL SELECT MODE

In each input mode, you can press \* key to Insert the following symbols.

Key	Letters
*	, . ' ? ! " @ ¥ _ ^ { } \ [ ~ ]   # ¤ % & ( ) * + - / : ; < = > i § ¿ ◀

Press the 2/4/6/8 keys to scroll up/down left and right. Press the left soft key to insert the symbol.