



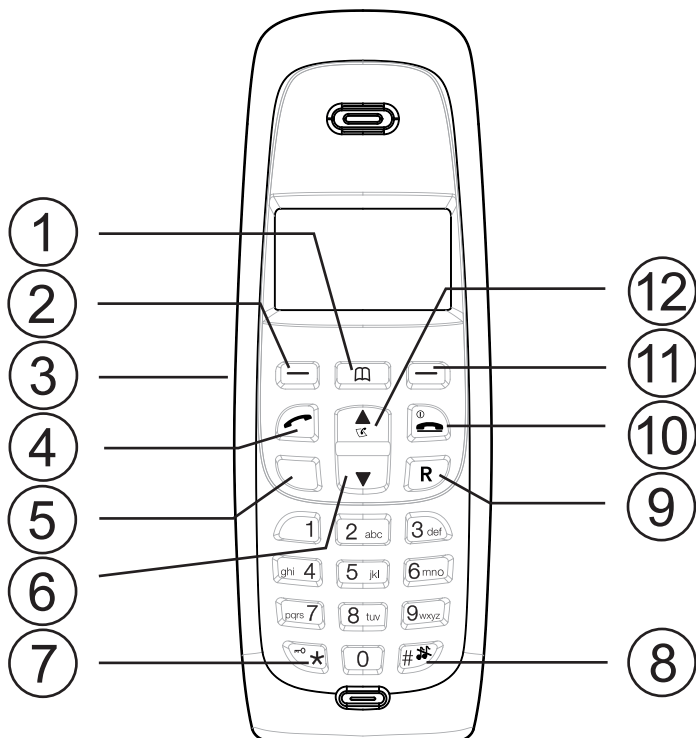

NeoBio 10/15r/20/25r

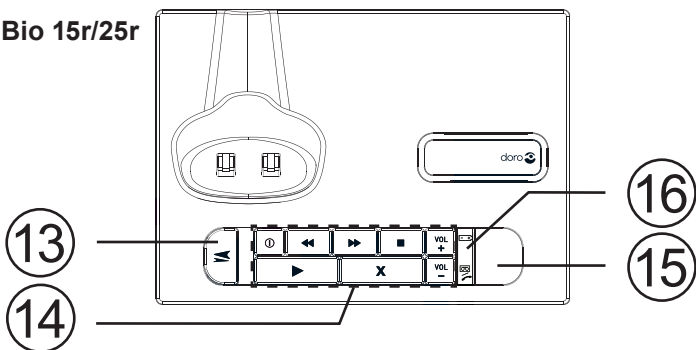

NeoBio 15r/25r



English

- 1 Phone book
- 2 Left menu button/OK
- 3 Headset connector (NeoBio 20/25r)
- 4 Talk button
- 5 Speaker phone (NeoBio 20/25r)
Redial (NeoBio 10/15r)
- 6 Down/Redial
- 7 ✖ and keypad lock
- 8 📠 and ring signal off/on
- 9 Recall button (PBX features)
- 10 End call and on / off button
- 11 Right menu button/Back/Internal call
- 12 Up / missed call
- 13 Paging

Only for NeoBio 15r/25r:

- 14 Answer machine functions, see
answer machine section
- 15 Message indication/display
- 16 Indicators, see separate description

Français

- 1 Répertoire
- 2 Touche menu / OK
- 3 Prise casque (NeoBio 20/25r)
- 4 Touche de prise de ligne
- 5 Touche Mains-libres (NeoBio 20/25r)
Touche Bis (NeoBio 10/15r)
- 6 Touche défilement / Bis
- 7 ✖ et Verrouillage du clavier
- 8 Touche 📠 et Sonnerie Off/On
- 9 Touche R
- 10 Touche de raccroché et on/off
- 11 Touche menu / Retour / Intercom
- 12 Touche défilement / Journal des
appelants
- 13 Touche de recherche du combiné

Uniquement pour le modèle NeoBio 15r/25r:

- 14 Fonctions répondeur, voir la section
Répondeur
- 15 Compteur de messages
- 16 Témoins lumineux, voir description.

Connection

1. Connect mains adapter/phone cable to wall sockets.
2. Insert batteries (1.2V NiMH AAA) in accordance with the markings.
3. Charge with the keypad facing outwards (24 hours the first time).
4. Press  (left menu button).
5. Scroll / to **HS SETTINGS**.
6. Press **OK** (left menu button).
7. Scroll to **LANGUAGE**. Press **OK**.
8. Scroll to **ENGLISH**. Press **OK**.
9. Press  or  several times to exit the menu screens.

If the NeoBio 15r/25r base unit's display is showing -- the answer machine is disconnected, or time/date is not set.

Date/Time

10. Press  (left menu button).
11. Scroll / to **HS SETTINGS**. Press **OK**.
12. Scroll to **HS DISPLAY**. Press **OK**.
13. Scroll to **TIME**. Press **OK**.
14. Scroll to **DATE & TIME**. Press **OK**.
15. Scroll to **SET TIME**. Press **OK**.
16. Enter time of day (HH-MM). Press **OK**.
17. Scroll to **SET DATE**. Press **OK**.
18. Enter date (DD MM YY). Press **OK**.
19. Press  or  several times to exit the menu screens.

The format of date/time can also be adjusted.

Battery

When the batteries are relatively new and fully-charged (10 hours) they will last for approx. 100 hours' standby time or approx. 10 hours' call time. **These times apply at normal room temperature. Full battery capacity will not be reached until the batteries have been charged 4-5 times. It is not possible to overcharge or damage the batteries by charging them for "too long".** It may take up to 5 minutes charging before display wakes up, if batteries are totally empty.

Please note!

When the battery is low or when there is too great a distance to the base unit the telephone will be unable to connect to a line. Do not place the base unit close to other electrical equipment, in direct sunlight or other strong heat sources! This is to minimize the risk of any interference. It is normal for the device to become warm during charging and this is not dangerous. Use only original batteries. The guarantee does not cover any damage caused by using the wrong batteries.

Battery LED

When the batteries are running low,  will flash and a warning tone will be heard when a call is in progress.

Please note that the complete battery indicator in the display will flash as long as the handset is charging, and when the battery is fully charged only the inner segment will flash.

Base unit indicators

 Steady light while charging is in progress and flashes when fully charged.

Only NeoBio 15r/25r:

 Steady light during calls and flashes when there is an incoming call or new message on the answer machine.

Range

The telephone's range depends on whether or not the radio waves carrying the call are restricted by obstacles in their path, and is usually between 50 and 300 metres. Coverage can be improved by turning one's head so that the handset is aligned with the base unit. Sound quality declines as the limit is reached until the call is finally interrupted.

The  symbol is shown when the phone is within range and goes out/flashes when it is out of range.

Making a call

1. Enter the required number. Delete if necessary with right menu button .
2. Press  to make the call. Press  to end the call.

Please note! (Only NeoBio 20/25r)

To switch between handset/speaker press  In speaker mode, you cannot both speak at once – you must take it in turns to talk.

Receiving a call

1. Wait for the handset to ring.
2. Press  to answer. Press  to end the call.

Volume control

The volume may be adjusted during a call with /.

Redial

Press . Scroll among the 5 most recently dialled numbers with /. Press .

Mute button

The microphone can be switched off/on during a call with  (right menu button).

Paging

The handset will ring when  (on the base unit) is pressed. The signal will stop automatically after a while or if the  button on the handset or the  button on the base unit are pressed.

Temporary silent mode

When someone calls, you can press **C** (right menu button) to turn off the handset ring signal.

Softkeys

Note the top two keys are “softkeys”. Their function is shown in the Display directly above them.

Phonebook

You can save 20 numbers/names. If you subscribe to a caller ID service, the name allocated to the caller in the phonebook will be shown for incoming calls. It is possible to choose between various ringers for the numbers saved in the Phonebook (only functions if you subscribe to a caller ID service).

Save name/number in handset

1. Press . Press .
2. Scroll to **ADD**. Press **OK**.
3. Press equivalent digit key several times for desired name. Press **OK**.
4. Enter the telephone number, including the area code. Delete if necessary with right menu button **C**. Press **OK**.
5. Scroll to required ringer. Press **OK**.

Managing the phonebook

1. Press . Scroll between entries with /. You can quick search the phonebook by pressing the corresponding number key for the first letter.
2. Press  to make a call or press  for various options.

Edit number

1. Press  (left menu button).
2. Scroll / to **PHONEBOOK**, press **OK**.
3. Scroll to the name you choose to edit, press .
4. Scroll to **EDIT**, press **OK**.
5. Check name is correct, press **OK**.
6. Number will appear with cursor flashing at the end of the number
7. Press **C** to backspace/delete number
8. Re-enter correct number, press **OK**.
9. Select melody, press **OK**.

Delete number

1. Press  (left menu button).
2. Scroll / to **PHONEBOOK**, press **OK**.
3. Scroll to the name you choose to delete, press .
4. Scroll to **DELETE**, press **OK**.

Incoming numbers/Caller ID

The display shows you who is calling and the 10 most recent missed calls. **NEW CALLS** will be shown in standby mode and ★ in the list indicates a missed call. This function requires a subscription from your service provider!

Retrieving and dialling

1. Press ▲. Scroll to the desired entry with ▼.
2. Press  to call or press  for various options
( = back).

Deleting new calls/number log

1. Scroll ▲ to new call number, press  (left menu button)
2. Scroll ▼ to **DELETE** or if more than one number, scroll to **DELETE ALL**, press **OK**.
3. **CONFIRM** will be displayed on screen, press **OK**.

Caller identification messages

In addition to number display, the following messages will be shown occasionally:

OUT OF AREA Unknown number, e.g. international call.

WITHHELD Information about the number is blocked. Number cannot be shown.

OO MSG indication from your network operator*

**To remove the message indicator press: Press ▲ and then hold down 4.*

Functions

1. Press . Scroll to **HS SETTINGS**. Press **OK**.
2. Scroll to desired function e.g. **LANGUAGE**. Press **OK**.
3. Scroll to desired setting. Press **OK**.

ALARM When the alarm is activated  will be shown in standby mode. When the alarm goes off, a signal will be heard for 45 seconds. The signal can be turned off with any button. If **SNOOZE** is activated the alarm will go off again approx. 7 minutes later. Turn the alarm off permanently via the menu or by holding  down for a few seconds. The volume is determined by the set ringer level.

RING SETUP The handset's ringer signal. **INT/EXT**=internal/external.

Melodies 2,3,4... can continue for up to 8 seconds if the call is answered in another phone.

PHONE SETUP Any of the following warning tones can be disabled, Keytone, low battery and range.

LANGUAGE The language of the display texts.

RENAME HS The text shown in standby mode.

HS DISPLAY Show name or time in standby mode.

AUTO ANSWER The call is answered when the handset is lifted from the base.

DATE & TIME Setting the date/time. The format of date/time can also be adjusted.

System settings

System PIN is 0000 on delivery.

1. Press . Scroll to **BS SETTINGS**. Press **OK**.

2. Scroll to desired function. Press **OK**.

3. Enter the desired setting. Press **OK**.

BS RINGER/ The base unit's ringer signal can be
RING VOLUME adjusted. Only applies to NeoBio 15r/25r.

DELETE HS Warning: To de-register a handset: WARNING, A deregistered handset can not be used with the system.

DIAL MODE TONE/PULSE, should normally be set to **TONE**.

FLASH TIME RECALL TIME.

LONG=New Zealand. **MEDIUM**=France/Portugal. **SHORT**=others incl. UK/AUS.

CHANGE PIN The code(e.g. 0000) can be changed.

Expanded system (Two or more handsets e.g +1...)

The call number for internal calls will be shown in the display in standby mode. The base unit should be positioned centrally so that the coverage area is roughly equal for all handsets.

Intercom / internal call

1. Press (right menu button).

2. If using more than 2 handsets: Enter call number **1-6** for the desired handset or press **9** for all.

A tone will be heard if an external call comes in while an internal call is in progress. End the internal call with and then answer the external call with .

Transferring calls/Conference between handsets

When an external call is connected;

1. Press . Scroll to **INTERCOM**. Press **OK**.

2. If using more than 2 handsets: Enter call number **1-6** for the desired handset or press **9** for all.

3. To transfer: press ,

For conference: hold pressed down.

Register a new handset

All handsets included in the package are already registered to the base unit. Only for separate handsets/service measures. You can register up to 6 handsets to one base unit.

This model is GAP (Generic Access Profile) compatible, which means that the handset and the base unit can both be used with most other GAP compatible units irrespective of manufacturer. However the GAP protocol cannot guarantee that all functions may be accessed. Extra handsets will not be available as accessories.

1. Hold down (base unit) until indicator flashes.

2. Press . Scroll to **REGISTRATION**. Press **OK**.

3. Enter the base unit's PIN code (e.g. 0000). Press **OK**.

4. If the registration is successful the unit will return to standby mode within one minute.

Answer machine (only NeoBio 15r/25r)

When the answer machine is switched on calls are answered after a set number of rings, your outgoing message is heard and the caller can leave a message. Total memory capacity is up to 15 minutes depending on the set sound quality (NeoBio 15r), or 30 min (NeoBio 25r). Most functions can be accessed from both base unit and handset.

Switching the answer machine on/off

Press **1** (on the base unit) to switch the answer machine off/on. If the base unit's display is flashing/ showing -- the answer machine is disconnected, or time/date is not set.

Off/On from the handset

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **TAM OFF/ON**. Press **OK**.
3. Scroll to desired setting. Press **OK**.

If the handset's display shows  with a steady light the answer machine is switched on. If there are new messages, the indicator will flash whether the answer machine is off or on.

Even when answer machine is OFF it will still answer after 10 rings, please see Remote activation.

Outgoing message

The outgoing message (max 3 min) is heard by incoming calls. There are two separate outgoing messages, one for Answer only (callers cannot leave a message) and one for normal answering function. Please also select desired answer function. See *TAM Settings*.

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **TAM SETTINGS**. Press **OK**.
3. Scroll to **OGM SETTINGS**. Press **OK**.
4. Scroll to **ANSWER & REC/ANSWER ONLY**. Press **OK**.
5. Scroll to **RECORD MESS**. Press **OK**.
6. After the long beep you can record your message (speaking 20 cm from the keypad). Press **OK**.
7. The message will be played back to you. Repeat the above to change.

*A pre-recorded message is used until you make your own recording, and that message can also be restored if required. To restore this, press **C** (right menu button) during playback of outgoing message.*

Screening

Incoming messages will be heard on the loudspeaker of the base unit as they are received. If nothing can be heard, check that the volume is turned up and that the function has been activated – see separate description *Answer machine settings*. You can also press **OK** on the handset while recording is in progress. The call can be intercepted by pressing  or lifting the receiver of another telephone connected to the same line.

Use of answer machine (base unit)

The number in the base units' display will flash when there are new messages.



and the numbers on the base unit will flash when there are new messages.

Press  (base unit) to start playback.

Command	Function
 / 	Prev msg/Skip forward.
	Stop playback.
X	Delete current message.
VOL + / -	To increase/decrease the volume.

Delete all old messages

After playback: Hold down **X** until you hear a beep.

Use of answer machine (handset)

New messages are indicated by  flashing in the display in standby mode. Playback always starts with new messages.

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **MSG PLAYBACK**. Press **OK**.
3. During playback the following commands are available.
4. End by pressing .

Command	Function
2 (X)	Delete during playback
4 ()	Previous message
5 ()	Stop
6 ()	Skip to next message.
	Speaker Off/On. Only NeoBio 25r.
 / 	Volume control

Delete all old messages

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **DELETE ALL**. Press **OK**.
3. Confirm by pressing **OK**.

Personal message (Memo)

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **MEMO**. Press **OK**.
3. After the long beep you can record your message (speaking approx. 20 cm from the keypad).
4. Press **OK**. The message will be played back to you.
5. Memos are played back in the same way as ordinary incoming messages.

Out of memory

The memory has room for up to 59 messages (including the outgoing message) max. 15 minutes (the NeoBio 15r) or 30 minutes (the NeoBio 25r) depending on the compression you set. When **TAM FULL** is shown or the base unit flashes **FF**, no new messages can be recorded until the old ones have been played back and deleted. In that case, the telephone answer machine responds with the outgoing message for Answer Only.

PLEASE NOTE!

Remember to delete messages regularly!

Answer machine settings

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **TAM SETTINGS**. Press **OK**.
3. Scroll to desired function. Press **OK**.
4. Scroll to desired setting. Press **OK**.

ANSWER MODE	Choose between ANSWER & REC and ANSWER ONLY (caller cannot leave message).
TAM LANGUAGE	Select language for pre-recorded outgoing message. To activate this, press C (right menu button) during playback of outgoing message.
OGM SETTINGS	Record/listen to outgoing msg.
ANSWER DELAY	Select after how many rings (2,4,6,8, time saver*) the call will be answered.
RECORD TIME	Select maximum recording time for each msg.
REMOTE ACC.	Select remote access off/on.
COMPRESSION	Higher compression gives longer recording time but reduced sound quality, LOW = best sound quality but about half memory capacity.
BS SCREENING	Enable/disable the function in base unit which is described in chapter <i>Screening</i> .
CHANGE PIN	Change remote access code (0000).

The Time Saver function answers calls after six ring signals, until the first new message has been registered - then the answer machine switches to answering after approximately two signals. This is useful when using remote access; if you call up the answer machine and there is no reply after four rings that means there are no messages recorded and you can hang up before you are charged for the call.

Remote activation

The answer machine can be activated via the remote access functions.

1. Call the answer machine. It will answer after approximately 10 rings.
2. Press  when the outgoing message is played.
3. Enter the PIN code, see *Answer machine Settings*. One beep confirms correct code.
4. Press .
5. Replace the handset.

Remote access

The unit can be remotely accessed using an ordinary tone dialling telephone.

1. Call the answer machine.
2. Press **✖** when the outgoing message is played.
3. Enter the PIN code, see *TAM Settings*. One beep confirms correct code.
4. Select a remote access command, see below.
5. Replace the handset.

Command	Function
2.....	Erase single msg during playback
4.....	Skip to previous message
5.....	Playback of messages
6.....	Skip to next message
7.....	Turn on the answer machine
8.....	Stop
9.....	Turn off the answer machine

Troubleshooting

Check that the telephone cord is undamaged and properly plugged in. Disconnect any additional equipment, extension cords and other phones. If the problem is resolved, the fault is with some other equipment.

Test the equipment on a known working line (e.g. at a neighbour's house). If the equipment works there the fault is probably with your telephone line. Please report this to your network operator.

No number shown when ringing

- This function requires a Caller ID subscription from your service provider.

Warning tone/Not possible to make calls

- The batteries may be running low (charge the handset).
- The hand unit may be nearly out of range. Move closer to a base unit.

Telephone does not work

- Check that the adapter/phone cord is connected correctly.
- Check that you have selected 'Tone Dial', see *System Settings*.
- Check the charge status of the handset batteries.
- Connect another functioning telephone to the network wall socket.

The telephone continues to ring

- Some of the telephone's ringers do not follow the line signal, which means that the signal may continue for up to 8 seconds after answering a call.

The answer machine does not respond to remote access

- Check that you are using a tone dial telephone.
- Try holding the buttons down longer, approximately 1 second per digit.

The answer machine is not answering

- Memory may be full. Listen to/delete your messages.
- Check that the adapter/phone cord is connected correctly.
- Check that the answer machine function is turned on.

If the telephone still does not work, contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. This telephone measures 0,04 W/kg (per 10g tissue). The max. limit according to WHO is 2W/kg (per 10g tissue).

Declaration of conformity

Doro hereby declares that the products Doro NeoBio 10/15r/20/25r conform to the essential requirements and other regulations contained in the directives 1999/5/EC (R&TTE), 2002/95/EC (ROHS). A copy of the manufacturer's declaration is available at

www.doro.com/dofc

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. If you experience any problems please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period. This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the device during a thunderstorm. Batteries are consumables and are not included in any guarantee. This guarantee does not apply if other batteries than DORO original batteries have been used.

UK

If you cannot resolve the fault using the faultfinder section, technical support is available by email: tech@doro-uk.com

-premium rate telephone number: 0905 895 0854, calls cost **50 pence per minute** (prices correct at the time of publication). You can also contact us in writing (regarding any Spares or Technical query):

Customer Services

Doro UK Ltd

1 High Street

Chalfont St Peter

Buckinghamshire

SL9 9QE.

Further contact details are available on our website:

www.doro-uk.com.

Australia and New Zealand

Products permitted for connection to the telephone network are marked with  in Australia and  **TELEPERMIT** in New Zealand. These marks indicate the products comply with the regulations and can be legally connected in the country of purchase.

Customer support

AUSTRALIA
DORO Australia Pty Ltd
PO Box 6760
Baulkham Hills BC NSW 2153
Australia

Consumer Support
Ph: Ph: 1300 885 023
Fax: (02) 8853-8489
support@doro.com.au
www.doro.com.au

NEW ZEALAND
Atlas Gentech(NZ) Ltd
Private Bag 14927
Panmure
Auckland
New Zealand
Consumer Support
Ph: 0900-500-25 (Toll Call)
Fax: (09) 574-2722
support@atlasgentech.co.nz

Electro Magnetic Radiation (EMR)

This telephone complies with applicable safety requirements for exposure to radio waves. The mean power of this telephone is not greater than 14 mW. This is below the 20mW limit at which testing is required.

REN (RN for New Zealand)

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3 devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

ALL PRODUCTS

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services. This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service. This equipment may not provide for the effective hand-over of a call to another device connected to the same line. This equipment should not be used under any circumstances that may constitute a nuisance to other Telecom Customers.

CND PRODUCTS

If a charge for local calls is unacceptable, the "DIAL" button should NOT be used for local calls. Only the 7 digits of the local number should be dialled from your telephone. DO NOT dial the area code digit or the "0" prefix.

Raccordement

1. Reliez les câbles du bloc d'alimentation et du téléphone aux prises murales.
2. Insérez les batteries en respectant la polarité.
3. Chargez le combiné, le clavier tourné vers l'extérieur, en continu pendant 24 heures avant la première utilisation.
4. Appuyez sur  (touche de menu gauche).
5. Atteignez **▲/▼ REGL. COMB/HS SETTINGS**.
6. Appuyez sur **OK** (touche de menu gauche).
7. Atteignez **LANGUE/LANGUAGE**. Appuyez sur **OK**.
8. Atteignez l'option requise. Appuyez sur **OK**.
9. Appuyez deux fois sur  ou sur  pour repasser en veille.

Synchronisation de la touche R

10. Appuyez sur . Atteignez **REGL. BASE**. Appuyez sur **OK**.
11. Atteignez **DELAI R**. Appuyez sur **OK**.
12. Vérifiez que le réglage est **MEDIUM**. Appuyez sur **OK**.

Batteries

Des batteries (1,2V NiMH) neuves et complètement chargées (charge de 10 heures) ont une autonomie d'environ 10 heures en communication et 100 heures en veille. Ces durées sont données pour une utilisation à l'intérieur à des températures normales. Les batteries sont complètement chargées au bout de 4 à 5 charges. Le système de régulation de charge automatique évite de les surcharger et de les endommager par une recharge prolongée. Lorsque que les batteries sont totalement déchargées l'afficheur peut fonctionner qu'après 5 minutes max. de rechargement.

Témoin de charge

Quand la charge des batteries est faible,  s'affiche et le combiné émet un signal sonore en cours d'appel. Veuillez noter que le témoin de charge des batteries clignote tant que le combiné est sur la base, même lorsque les batteries sont complètement chargées.

Remarque !

Vous ne pouvez pas obtenir de ligne quand les batteries sont déchargées ou lorsque le combiné est trop éloigné de la base. Ne placez pas la base à proximité d'appareils électriques, d'une source de chaleur ou dans un endroit exposé directement au soleil afin de minimiser les risques d'interférences. Vous pourrez observer un réchauffement de l'appareil pendant la charge ; ce phénomène est normal. Utilisez uniquement des batteries d'origine. La garantie ne couvre pas les dommages causés par l'utilisation de mauvaises batteries.

Portée

En général, la portée du téléphone varie de 50 à 300 mètres en fonction des conditions ambiantes. Vous pouvez améliorer la portée en tournant la tête de façon à pointer le combiné vers la base. La qualité du son se détériore quand le combiné se rapproche de la limite de sa portée, puis la communication est coupée. Le symbole  s'affiche quand le téléphone est à portée et clignote lorsqu'il est hors de portée.

Appeler

1. Composez le numéro. Au besoin effacez les erreurs avec la touche de menu **C**.
2. Appuyez sur  pour appeler. Appuyez sur  pour mettre fin à l'appel.

Remarque ! (NeoBio 20/25r uniquement)

Pour alterner entre les modes combiné et mains-libres, Appuyez sur . En mode mains-libres les deux correspondants ne peuvent pas parler simultanément, mais uniquement un à la fois.

Recevoir un appel

1. Attendez que le combiné sonne.
2. Prenez l'appel en appuyant sur . Appuyez sur  pour mettre fin à l'appel.

Réglage du volume

Vous pouvez ajuster le volume en cours de communication avec les touches de défilement /.

Touche Bis

Appuyez sur . Appuyez sur / pour faire défiler les 5 derniers numéros composés. Appuyez sur .

Touche Secret

Vous pouvez couper ou activer le micro en cours d'appel en appuyant sur **C**.

Coupure de sonnerie temporaire

Quand vous recevez un appel, vous pouvez appuyer sur **C** pour couper la sonnerie du combiné.

Répertoire

Le répertoire peut enregistrer 20 noms/numéros. Lorsque vous êtes abonné à la présentation du numéro, celui de votre correspondant s'affiche à la réception d'un appel (le nom peut également s'afficher pour les numéros sauvegardés dans le répertoire). Vous pouvez choisir différentes mélodies pour les numéros du répertoire.

Enregistrement d'un nom/numéro dans le combiné

1. Appuyez sur . Appuyez sur .
2. Atteignez **AJOUTER**. Appuyez sur **OK**.
3. Entrez le nom par pressions successives des touches numériques. Appuyez sur **OK**.
4. Saisissez le numéro de téléphone ainsi que l'indicatif (**C**=effacer). Appuyez sur **OK**.
5. Atteignez la mélodie désirée. Appuyez sur **OK**.

Utilisation du répertoire

1. Appuyez sur . Faites défiler les entrées avec les touches /. Vous pouvez aussi effectuer une recherche rapide en appuyant sur la touche numérotée correspondant à la première lettre du nom de la personne.
2. Appuyez sur  pour appeler ou sur  pour afficher les différentes options, par ex. **EDITER** pour consulter les détails.

Présentation du numéro

Le nom du correspondant qui appelle et ceux des 10 derniers appels reçus en absence s'affichent. **NVX APPEL** s'affiche en veille et ★ indique un appel reçu en absence. Cette fonction est disponible sous réserve d'abonnement auprès de votre opérateur !

Appeler à partir du Journal des appelants

1. Appuyez sur ▲. Atteignez l'entrée désirée avec la touche ▼.
2. Appuyez sur  pour appeler ou sur  pour afficher les différentes options (↩ = retour).
Lorsque le nom est affiché, appuyez sur  pour visualiser le numéro correspondant.

Informations supplémentaires

En plus des numéros de téléphone, l'écran peut afficher :

HORS ZONE Numéro inconnu, par ex. un appel de l'étranger.

SECRET L'appel provient d'un numéro masqué. Aucun numéro ne s'affiche.

OO Message déposé sur la messagerie de votre opérateur*.

* Pour l'effacer : Appuyez sur ▲ puis de façon prolongée sur .

Recherche du combiné

Le combiné sonne quand on appuie sur la touche  de la base. Le signal s'arrête automatiquement au bout de quelques secondes ou lorsqu'on appuie sur la touche  du combiné ou sur la touche  de la base.

Témoins de la base

 Allumé en continu pendant la charge et clignote lorsque les batteries sont complètement chargées.

(NeoBio 15r/25r uniquement)

 Allumé en continu en cours d'appel et clignote quand vous recevez un appel ou un nouveau message sur le répondeur.

Fonctions

1. Appuyez sur . Atteignez **REGL. COMB.** Appuyez sur **OK**.
2. Atteignez la fonction désirée, par ex. **LANGUE**. Appuyez sur **OK**.
3. Atteignez l'option requise. Appuyez sur **OK**.

ALARME Lorsqu'une alarme est activée,  s'affiche en veille. La sonnerie de l'alarme dure 45 secondes. Vous pouvez la couper en appuyant sur n'importe quelle touche. Si l'option **SNOOZE** est activée, l'alarme sonne à nouveau au bout de 7 minutes. Coupez complètement l'alarme dans le menu ou en appuyant quelques secondes sur la touche . Le volume est celui réglé pour la sonnerie.

SONNERIE La sonnerie du combiné. **INT/EXT** = appel interne/externe.

Les mélodies 2,3,4... peuvent se prolonger pendant 8 secondes lorsque l'appel est pris sur un autre téléphone.

ALERTE SON. Bip des touches, avertissement sonore : batteries faibles et hors de portée.

LANGUE Voir la section Raccordement.

RENOMMER CB Personnalisation du texte affiché en veille.

AFFICHAGE Permet de choisir entre l'heure & le nom du combiné en veille.

RÉP. AUTO ON/OFF Décrochage automatique lorsque combiné est retiré de la base.

DATE & HEURE Réglage de la date et de l'heure

Configuration du système

Le code du système est 0000 à la livraison.

1. Appuyez sur . Atteignez **REGL. BASE**. Appuyez sur **OK**.
2. Atteignez la fonction désirée. Appuyez sur **OK**.
3. Entrez l'option requise. Appuyez sur **OK**.
SONN. BASE/ Pour régler la sonnerie de la base
VOL.SONNERIE NeoBio 15r/25r uniquement:
ANNULER COMB Pour annuler l'appairage d'un combiné
NUMEROTATION Pour la France, sélectionnez le mode fréquences vocales.
DÉLAI R **MEDIUM** = France/Portugal **COURT** = autres pays
MODIFIER PIN Pour changer le code (par ex. 0000).

Système élargi (Packs)

Le numéro attribué au combiné pour les appels internes est affiché en mode veille. Placez la base à distance égale des combinés pour une portée répartie sur la zone à couvrir.

Intercom

1. Appuyez sur  (touche de menu droite).
2. Si vous utilisez plus de 2 combinés: composez le numéro du combiné voulu **1-6** ou appuyez sur **9** pour appeler l'ensemble des combinés.

Transfert d'appel/Conférence entre combinés

1. Vous êtes en communication avec un correspondant de l'extérieur.
2. Appuyez sur . Atteignez **INTERCOM**. Appuyez sur **OK**.
3. Si vous utilisez plus de 2 combinés: composez le numéro du combiné voulu **1-6** ou appuyez sur **9** pour appeler l'ensemble des combinés.
4. Pour transférer l'appel: appuyez sur , Pour établir une conférence à 3: appuyez de façon prolongée sur **✕**.

Déclaration d'un nouveau combiné

Tous les combinés livrés avec la base sont déclarés sur celle-ci.

Cette opération n'est nécessaire que pour les nouveaux combinés.

Vous pouvez utiliser (déclarer) jusqu'à 6 combinés par base.

Les combinés supplémentaires ne seront pas disponibles en tant qu'accessoires.

Néanmoins ces modèles sont compatibles GAP (Generic Access Profile) c'est-à-dire qu'ils peuvent fonctionner avec des bases ou mobiles d'autres marques (GAP eux-mêmes). Toutefois cette compatibilité peut se limiter à certaines fonctions. La procédure décrite ci-dessous vous permettra de redéclarer un combiné dans le cas où celui-ci perdrait son appairage. Veuillez à ne poser aucun combiné sur la base pendant la déclaration.

1. Appuyez sur la touche  de la base jusqu'à ce que le témoin clignote.
2. Appuyez sur . Atteignez **ASSOCIATION**. Appuyez sur **OK**.
3. Entrez le code secret de la base (0000 à la livraison). Appuyez sur **OK**.
4. Si la déclaration du combiné est réussie, le combiné repasse en veille dans la minute qui suit.

Répondeur (NeoBio 15r/25r uniquement)

Une fois mis en service, le répondeur prend les appels au bout d'un nombre donné de sonneries ; votre correspondant entend l'annonce et peut laisser un message. La capacité totale de la mémoire est de 15 minutes, en fonction de la compression utilisée (NeoBio 15r), ou de 30 minutes (NeoBio 25r). La plupart des fonctions sont accessibles à partir de la base ou du combiné.

Mise en/hors service du répondeur

Appuyez sur la touche ① de la base pour mettre le répondeur en marche et le couper. Si l'afficheur de la base indique -- alors cela indique que le répondeur est éteint ou que l'heure/date ne sont pas réglés.

Mise en/hors service à partir du combiné

1. Appuyez sur . Atteignez **REPONDEUR**. Appuyez sur **OK**.
2. Atteignez **REP. ON/OFF**. Appuyez sur **OK**.
3. Atteignez l'option requise. Appuyez sur **OK**.

Lorsque  s'affiche sur le combiné accompagné d'un témoin lumineux qui reste allumé, le répondeur est alors allumé. En cas de nouveaux messages, le témoin clignote, que le répondeur soit ou non en service.

Annonce

Vos correspondants entendent l'annonce d'accueil d'une durée de 3 minutes maximum. Il existe deux types d'annonces : une pour le Répondeur seul (votre correspondant ne peut laisser de message) et une autre pour le Répondeur enregistreur.

1. Appuyez sur . Atteignez **REPONDEUR**. Appuyez sur **OK**.
2. Atteignez **REGLAGES REP**. Appuyez sur **OK**.
3. Atteignez **ANNONCES**. Appuyez sur **OK**.
4. Atteignez **REP. ENREG./REP. SEUL**. Appuyez sur **OK**.
5. Atteignez **ENR MSG**. Appuyez sur **OK**.
6. Après le bip sonore, enregistrez votre annonce en parlant face au combiné éloigné d'environ 20 cm. Appuyez sur **OK**.
7. Votre annonce est diffusée. Procédez de la même façon pour changer votre annonce. N'oubliez pas de sélectionner le mode du répondeur. Voir *Configuration du répondeur*.

Utilisation du répondeur (base)

Les affichages de la base clignotent quand vous avez de nouveaux messages.



Les chiffres de la base clignotent quand vous avez de nouveaux messages.

Appuyez sur la touche ► de la base pour commencer la lecture.

Commande Fonction

- ◀◀ / ▶▶ Message préc/Message suivant.
- Arrêt de la lecture.
- X Suppression du message courant.
- VOL +/- Augmentation/diminution du volume.

Effacer tous les anciens messages

Après la lecture : appuyez sur la touche X jusqu'à ce que vous entendiez un bip.

Utilisation du répondeur (combiné)

Lorsque vous recevez un message,  clignote en veille à l'affichage. La lecture commence toujours par les nouveaux messages.

1. Appuyez sur . Atteignez **REPONDEUR**. Appuyez sur **OK**.
2. Atteignez **LIRE MSG**. Appuyez sur **OK**.
3. Utilisez les options ci-dessous en cours de lecture.
4. Terminez en appuyant sur .

Commande Fonction

- 2 (X) Effacement en cours de lecture
 4 (◀◀) Message précédent
 5 (■) Stop
 6 (▶▶) Message suivant.
 Ecoute amplifiée Off/On NeoBio 25r uniquement.
 ▼/▲ Réglage du volume

Effacer tous les anciens messages

1. Appuyez sur . Atteignez **REPONDEUR**. Appuyez sur **OK**.
2. Atteignez **SUPPRIM.TOUT**. Appuyez sur **OK**.
3. Confirmez en appuyant sur **OK**.

Mémo (message personnel)

1. Appuyez sur . Atteignez **REPONDEUR**. Appuyez sur **OK**.
2. Atteignez **MEMO**. Appuyez sur **OK**.
3. Après le bip sonore, enregistrez votre mémo en parlant face au combiné éloigné d'environ 20 cm.
4. Appuyez sur **OK**. Votre message est alors diffusé.
5. Vous lisez les mémos de la même façon que les messages.

Filtrage

Les messages que vous recevez sont diffusés au niveau du haut-parleur de la base. Si vous n'entendez rien, augmentez au besoin le volume sur la base ou activez la fonction **FILTRAGE** en appuyant sur la touche **OK** en cours d'enregistrement d'un message. Vous interceptez l'appel en appuyant sur  ou en prenant le combiné d'un téléphone branché sur la même ligne.

Mémoire pleine

La mémoire enregistre jusqu'à 59 messages (annonce comprise) avec une durée max. de 15 minutes (NeoBio 15r) ou de 30 minutes (NeoBio 25r) en fonction du réglage de la compression. Quand **MEM REP SAT** s'affiche ou que **FF** clignote sur la base, faites une lecture des messages puis effacez-les pour en pouvoir en recevoir de nouveaux. Dans ce cas, le répondeur du téléphone diffuse l'annonce du mode répondeur seul.

REMARQUE ! N'oubliez pas d'effacer régulièrement vos messages!

Configuration du répondeur

1. Appuyez sur . Atteignez **REPONDEUR**. Appuyez sur **OK**.
2. Atteignez **REGLAGES REP**. Appuyez sur **OK**.
3. Atteignez la fonction désirée. Appuyez sur **OK**.
4. Atteignez l'option requise. Appuyez sur **OK**.

MODE REP.	Les options sont REP. ENREG. et REP. SEUL (impossible de laisser un message).
LANGUE REP	Choisissez la langue de l'annonce pré-enregistrée. Pour activer cette option, appuyez sur C en cours de lecture de l'annonce.
ANNONCES	Enregistrez/écoutez l'annonce.
NB SONNERIES	Sélectionnez le nombre de sonneries (2,4,6,8, économiseur*) avant que le répondeur ne prenne les appels.
TMPS ENREG.	Sélectionnez la durée maximum de chaque message.
CODE INTERRO	Activez/annulez l'interrogation à distance.
COMPRESSION	Une forte compression augmente la durée d'enregistrement mais diminue la qualité sonore, LOW = meilleure qualité mais durée réduite de moitié.
FILTRAGE	Voir la description de cette fonction de la base.
MODIFIER PIN	Changez le code d'accès à distance (0000).

La fonction économiseur répond aux appels au bout de six sonneries, jusqu'à ce qu'un message soit enregistré ; à l'appel suivant, l'appareil répond après deux sonneries. Le mode économiseur d'appel est utile si vous interrogez votre répondeur à distance. Si le répondeur ne se déclenche pas après la quatrième sonnerie, vous pouvez raccrocher et ainsi économiser le coût d'un appel inutile puisque vous n'avez pas reçu de nouveaux messages.

Accès à distance

Vous pouvez interroger le répondeur à distance au moyen des touches d'un téléphone utilisant la numérotation à fréquence vocale.

1. Appelez le répondeur.
2. Appuyez sur  pendant la diffusion de l'annonce.
3. Entrez le code de sécurité, voir *Configuration du répondeur*. Un bip confirme que le code est correct.
4. Sélectionnez une des options d'interrogation à distance, voir ci-dessous.
5. Raccrochez.

Commande	Fonction
2.....	Effacement d'un message en cours de lecture
4.....	Passage au message précédent.
5.....	Lecture des messages
6.....	Passage au message suivant.
7.....	Mise en service du répondeur
8.....	Arrêt
9.....	Mise hors service du répondeur

Activation à distance

Le répondeur peut être mis en marche à distance.

1. Appelez le répondeur. Il se déclenche à la dixième sonnerie.
2. Appuyez sur **2** pendant la diffusion de l'annonce.
3. Entrez le code de sécurité, voir *Configuration du répondeur*. Un bip confirme que le code est correct.
4. Appuyez sur **7**.
5. Raccrochez.

En cas de problèmes

Vérifiez que le câble téléphonique soit en bon état et qu'il soit branché correctement. Débranchez tout autre matériel, rallonges et téléphones. Si l'appareil fonctionne alors normalement, la panne est causée par le matériel additionnel.

Testez le matériel sur une ligne en état de marche (chez un voisin par ex.). Si le matériel fonctionne sur ce raccordement, votre propre ligne téléphonique est défectueuse. Signalez la panne à votre opérateur.

Pas de présentation du numéro à réception d'un appel

- Cette fonction de présentation du numéro est disponible sous réserve d'abonnement auprès de votre opérateur.

Bip sonore en cours de communication/Impossible d'appeler

- Vérifiez le niveau de charge des batteries et rechargez les si besoin.
- Le combiné est en limite de sa portée. Rapprochez-vous de la base.

Le téléphone ne fonctionne pas

- Vérifiez le branchement de l'adaptateur et du cordon téléphonique.
- Vérifiez que le mode de numérotation **FREQ. VOCALE** est sélectionné, voir *Configuration du système*.
- Vérifiez le niveau de charge des batteries du combiné.
- Raccordez un téléphone en état de marche à la prise téléphonique murale.

Le téléphone continue à sonner

- La sonnerie de certains combinés peut varier par rapport à celle de la ligne téléphonique ; certains combinés peuvent continuer à sonner pendant 8 secondes après que l'appel ait été pris.

Le répondeur ne répond pas

- La mémoire peut être pleine. Ecoutez vos messages avant de les effacer.
- Vérifiez le branchement de l'adaptateur et du cordon téléphonique.
- Vérifiez que le répondeur est en service

Le répondeur ne répond pas à l'interrogation à distance

- Vérifiez que le mode de numérotation du téléphone est sur **FREQ. VOCALE**.
- Essayez aussi d'appuyer plus longtemps sur les touches (environ 1 seconde par touche).

Si le téléphone ne fonctionne toujours pas, contactez votre revendeur. N'oubliez pas de vous munir du ticket de caisse ou d'une copie de la facture.

Garantie et S.A.V.

Pour la France

Cet appareil est garanti deux ans à partir de sa date d'achat, la facture faisant foi. En cas de problèmes, contactez votre revendeur. La réparation dans le cadre de cette garantie sera effectuée gratuitement.

La garantie est valable pour un usage normal de l'appareil tel qu'il est défini dans la notice d'utilisation. Les fournitures utilisées avec l'appareil ne sont pas couvertes par la garantie. Sont exclues de cette garantie les détériorations dues à une cause étrangère à l'appareil. Les dommages dus à des manipulations ou à un emploi non conformes, à un montage ou entreposage dans de mauvaises conditions, à un branchement ou une installation non-conformes ne sont pas pris en charge par la garantie. Par ailleurs, la garantie ne s'appliquera pas si l'appareil a été endommagé à la suite d'un choc ou d'une chute, d'une fausse manœuvre, d'un branchement non-conforme aux instructions mentionnées dans la notice, de l'effet de la foudre, de surtensions électriques ou électrostatiques, d'une protection insuffisante contre l'humidité, la chaleur ou le gel. En tout état de cause, la garantie légale pour vices cachés s'appliquera conformément aux articles 1641 et suivants du Code Civil.

Si vous souhaitez obtenir de l'aide lors de l'installation ou poser une question technique sur le produit, contactez notre Service d'Assistance Téléphonique au 08 92 68 90 18 (N° Audiotel - 0,34€ /min.) Il est recommandé de débrancher l'appareil en cas d'orage.

En tant que consommables, les piles sont exclues de la garantie.

Cette garantie ne s'applique pas en cas d'utilisation de piles autres que des piles DORO originales.

Déclaration de conformité

Doro certifie que ces appareils Doro NeoBio 10/15r/20/25r sont compatibles avec l'essentiel des spécifications requises et autres points des directives 1999/5/EC (R&TTE) et 2002/95/EC (ROHS). La déclaration de conformité peut être consultée à l'adresse suivante : www.doro.com/dofc

DAS (Débit d'Absorption Spécifique)

Cet appareil est conforme aux normes de sécurité concernant l'exposition aux fréquences radioélectriques. La valeur enregistrée pour ce téléphone est de 0,04W/kg (mesurée sur un tissu de 10g). La limite applicable aux téléphones portables utilisés par le public fixée par l'OMS est de 2 W/kg en moyenne sur un tissu de dix grammes.

English
French

Version 1.10

www.doro.com

