

Gigaset

S790 - S795

Issued by

Gigaset Communications GmbH

Frankenstr. 2, D-46395 Bocholt

Manufactured by Gigaset Communications GmbH

under trademark license of Siemens AG.

As of 1 Oct. 2011 Gigaset products bearing the trademark 'Siemens' will exclusively use the trademark 'Gigaset'.

© Gigaset Communications GmbH 2009

All rights reserved. Subject to availability.

Rights of modification reserved.

www.gigaset.com

CORDLESS HOME COMMUNICATION
MADE IN GERMANY

SIEMENS

Gigaset S790/S795* – more than just a telephone

Your telephone sets new standards for the way you communicate at home.

The configuration and user interface of the cordless phone are excellent, providing you with first-class voice quality in speaker mode, while the USB port offers you enormous flexibility.

The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use.

Your phone can do a whole lot more:

- ◆ You can synchronise your directories on your telephone, mobile phone and PC via the USB port using the Gigaset QuickSync software (→ page 77).
- ◆ You can save appointments (→ page 54) and anniversaries, e.g., birthdays (→ page 34), in your phone and it will remind you of them in advance.
- ◆ You can designate important people as VIPs to identify important calls from the ringtone (→ page 32).
- ◆ You can assign a picture to entries in the directory – in future the picture will appear every time you receive a call from this number (→ page 32).
- ◆ If you do not want to take calls where the caller has withheld their number, just set your handset to only ring if Calling Line Identification has not been withheld (→ page 64).
- ◆ If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient (→ page 64). VIP calls are still connected.
- ◆ You can assign important numbers to the number keys on your phone. The number is then dialled by simply pressing a key (→ page 61).
- ◆ You can set the display to large font to increase readability in particularly important situations (e.g., the directory and lists) (→ page 63).
- ◆ You can adapt the menu display to suit your individual requirements so that only the most important functions (**standard mode**) or all functions (**expert mode** ) are displayed (→ page 25). Menu options that are only available in expert mode are marked with the  icon.
- ◆ Gigaset Green Home – Be environmentally aware when using your phone. Details about our ECO DECT products can be found at www.gigaset.com/customer-care.

You can find additional information about your phone at www.gigaset.com/gigaset790.

Have fun using your new phone!

Display symbols

The following symbols are displayed dependent on the settings and the operating status of your telephone:

Signal strength (→ page 53)
 or ECO Mode+ icon (→ page 53)

Answering machine switched on (S795 only, → page 4)

Ringtone switched off (→ page 64)

Keypad lock switched on (→ page 22)

Batteries are charged (→ page 16)

Charge status of the batteries (→ page 16)

Alarm switched on and wake-up time set (→ page 56)

Current time (→ page 15)

Current day and month (→ page 15)

Name of the handset (→ page 59)

Number of new messages:

- ◆ on the network mailbox (→ page 37)
- ◆ in the list of missed calls (→ page 37)
- ◆ in the SMS list (→ page 40)
- ◆ in the list of missed appointments (→ page 37)

Signalling

External call (→ page 28)



Alarm (→ page 56)



Internal call (→ page 58)



Anniversary (→ page 54)



Answering machine is recording (→ page 46)




Appointment (→ page 54)



The base at a glance

You can use the keys on the base to register handsets to the base, search for handsets (paging), (→ page 57) and operate the integrated answering machine (Gigaset S795 only).

Gigaset S795 base

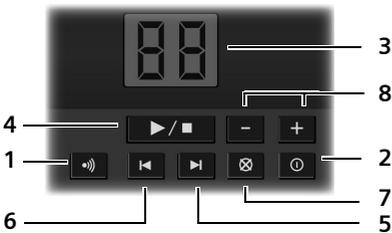

- 1 **Registration/Paging key**
Press **briefly**: search for handsets (paging) (→ page 57).
Press and **hold**: register handsets and DECT devices (→ page 57).
- 2 **On/Off key**
Activating/deactivating the answering machine.
- 3 **Display**
Lights up: answering machine is activated.
The number of saved messages is displayed.
00 flashes: the answering machine is recording a new message.
Flashes slowly: there are new messages.
The number of **new** messages is displayed.
99 flashes quickly: the answering machine is full.

During message playback:

- 4 **Play/Stop key**
Play back new messages from answering machine or cancel playback (press **briefly**).
Play back new and old messages (press and **hold**).
- 5 Skip to next message (press once) or skip ahead two messages (press twice).
- 6 Skip back five seconds (press **briefly** once), skip back to the beginning of the message (press and **hold**) or skip back to the previous message (press twice).
- 7 Delete current message.
- 8 **Adjust volume during message playback**:
[-] = quieter; [+] = louder.
While an external call is being signalled: adjust ringtone volume.

Please note:

If the answering machine is being operated from a handset or if it is recording a message (00 flashes), it cannot be operated from the base at the same time.

Gigaset S790 base



Registration/Paging key

- Press **briefly**: search for handsets (paging) → page 57.
- Press and **hold**: register handsets and DECT devices (→ page 57).

Contents

Gigaset S790/S795 – more than just a telephone	1
The handset at a glance	2
Display symbols	3
The base at a glance	4
Safety precautions	8
First steps	9
Checking the package contents	9
Setting up the base and charger (if included)	10
Connecting the base	10
Connecting the charger (if included)	11
Setting up the handset for use	12
Setting the date and time	15
Connecting the headset	17
Connecting the USB data cable	17
What would you like to do next?	18
Using the phone	19
Control key	19
Display keys	20
Keys on the keypad	20
Side keys	20
Correcting incorrect entries	20
Using the menus	21
Activating/deactivating the handset	22
Activating/deactivating the keypad lock	22
Using this guide	23
Menu overview	25
Making calls	28
Making an external call	28
Ending a call	28
Accepting a call	28
Calling Line Identification	28
Speaker mode	29
Switching to mute	29
Making calls using network services	30
Calling Line Identification	30
Ringback	30
Call waiting during an external call	30
Call divert (CD)	31
Consultation call, call swap	31

Using the directory and lists	32
Directory	32
Redial list	35
Incoming SMS message list	36
Answering machine list (Gigaset S795 only)	36
Call lists	36
Opening lists with the message key	37
List of missed alarms	37
Making cost-effective calls	38
Automatic network provider code (preselection)	38
SMS (text messages)	39
Writing/sending an SMS	39
Receiving an SMS	40
SMS with vCard	42
Notification via SMS	42
SMS mailboxes	42
Setting SMS centres	43
SMS on a PABX	44
Activating/deactivating SMS function	44
SMS troubleshooting	45
Operating the Gigaset S795 base answering machine	46
Operating via the handset	46
Activating/deactivating call screening	49
Setting the recording parameters	49
Resetting fast access for the answering machine using key 1	50
Operating when on the move (remote operation)	50
Using the network mailbox	52
Configuring fast access for the network mailbox	52
Viewing the network mailbox message	52
ECO DECT	53
Setting an appointment (calendar)	54
Displaying missed appointments, anniversaries	55
Setting the alarm clock	56
Using multiple handsets	57
Registering handsets	57
De-registering handsets	57
Locating a handset ("Paging")	57
Changing the base	58
Making internal calls	58
Listening in to an external call	59
Changing the name of a handset	59
Changing a handset's internal number	60

Using a handset as a room monitor	60
Handset settings	61
Quick access to numbers and functions	61
Changing the display language	62
Setting the display	62
Activating/deactivating auto answer	63
Changing the speaker/earpiece volume	63
Changing ringtones	64
Resource Directory	65
Activating/deactivating advisory tones	66
Setting your own area code	66
Restoring the handset default settings	66
Setting the base	67
Changing the base Gigaset S795 ringtones	67
Activating/deactivating music on hold	67
Repeater support	67
Protecting against unauthorised access	68
Resetting the base to the factory settings	68
Connecting the base to the PABX	69
Dialling modes and recall	69
Saving an access code (outside line code)	69
Setting pauses	70
Switching temporarily to tone dialling (DTMF)	70
Service (Customer Care)	71
Questions and answers	71
Authorisation	72
Guarantee Certificate	
United Kingdom	73
Protecting our environment	74
Appendix	75
Care	75
Contact with liquid	75
Specifications	75
Writing and editing text	76
Additional functions via the PC interface	77
Accessories	79
Mounting the base on the wall (Gigaset S790 only)	82
Mounting the charger on the wall	82
Index	83

Safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied, as indicated on the underside of the base.



Use only **rechargeable batteries** that correspond to the **specification provided on page 75**, as this could otherwise result in significant health risks and personal injury.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause an unpleasant humming or whistling noise in hearing aids or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Do not install the base or charger in bathrooms or shower rooms. The base and charger are not splashproof (→ page 75).



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your Gigaset to a third party, make sure you also give them the user guide.



Remove faulty bases from use or have them repaired by our Service department, as they could interfere with other wireless services.

Please note

Not all of the functions described in this user guide are available in all countries.


First steps

Checking the package contents



- 1** One Gigaset S790/S795 base
- 2** One power adapter
- 3** One Gigaset S79H handset
- 4** One phone cord
- 5** Two batteries
- 6** One battery cover
- 7** One belt clip
- 8** One plastic headset socket cover
- 9** One user guide

If you have purchased a **model with multiple handsets** the package should contain two batteries, a battery cover, a belt clip and a charger **9** with power adapter **10** for each additional handset.

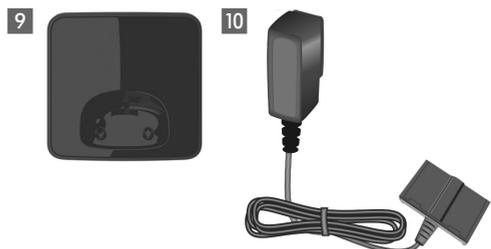

Setting up the base and charger (if included)

The base and charger are designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the base at a central point in the building on a level, non-slip surface or mount the base (Gigaset S790 only) or charger on the wall (→ page 82).

Please note

Pay attention to the range of the base.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (→ page 53) is activated.


The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the base


- ▶ **First** connect the power adapter **1**.
- ▶ **Then** connect the telephone jack **2** and insert the cables into the cable ducts.

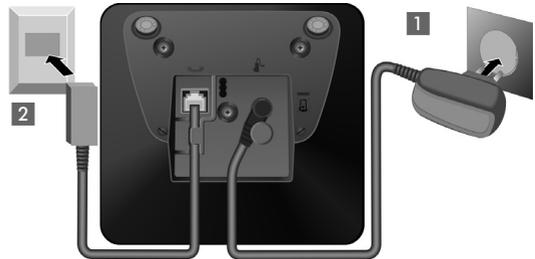

Please note:


- ◆ The power adapter must **always be connected**, as the phone will not operate without a mains connection.
- ◆ Use only the power adapter and phone cord **supplied**. Pin connections on telephone cables can vary (pin connections → page 76).

Connecting the charger (if included)

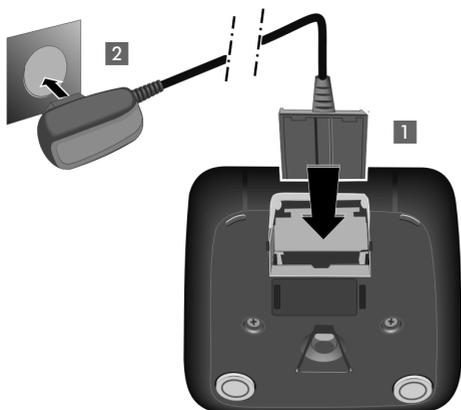

- ▶ Connect the flat plug from the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charger, press the release button **1** and disconnect the plug **2**.

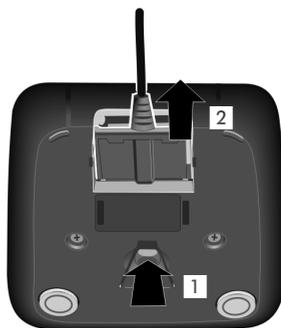

Setting up the handset for use


The display and keypad are protected by plastic films.
Remove the protective films!

Inserting the batteries and closing the battery cover

Warning

Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 75), i.e., Never use conventional (non-rechargeable) batteries, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in/on the battery compartment.

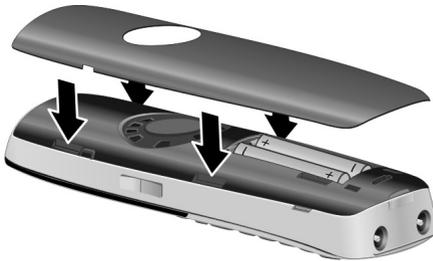

- ▶ First insert the battery cover at the top (a).
- ▶ Then press the cover (b) until it clicks into place.

To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the left-hand side of the casing, then pull the battery cover in an upward direction.




- ▶ Insert the plastic cover provided for the headset socket to ensure optimum sound in speaker mode.



Attaching the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ **To remove** – press the centre of the belt clip firmly with your right thumb, push the fingernail of your left index finger up between the clip and the housing and pull the clip in an upward direction.

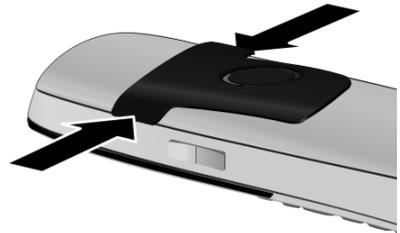

Placing the handset in the base/charger

- ▶ Place the handset in the base/charger with its **display facing forward**.

Each handset is registered with the base at the factory. You do not need to register the handset again. If you wish to use your handset with a different base or use further handsets with your base, you have to register the handset manually (→ page 57).


To charge the batteries, leave the handset in the base/charger.

Please note

Only place the handset in the designated base/charger.

First battery charge and discharge

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

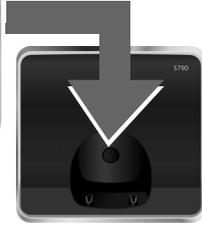

▶ Charge the handset for **8.5 hours** in the base/charger.



▶ Then remove the handset from the base/charger and do not replace it until the batteries are fully discharged.

Please note

- ◆ After the first battery charge **and** discharge, you may replace your handset in the base/charger after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.



- ▶ Press the key below **Time** on the display screen to open the input field. (If you have already set the time and date, open the input field via the menu → page 27.)




The **Date/Time** submenu is shown on the display.

- ▶ The active input position flashes. Enter day, month and year as an 8-digit number via the keypad, e.g., **1** **∞** **4** **GHI** **1** **∞** **0** **+** **2** **ABC** **0** **+** **0** **+** **9** **WXYZ** for 14/10/2009.



Press the **right** or **left** control key to change the input position and correct an entry.

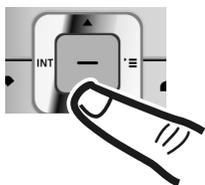

- ▶ Press **down** on the control key to switch to the time input field.

- ▶ Enter the hours and minutes in 4-digit format via the keypad, e.g., **0** **+** **7** **PGQRS** **1** **∞** **5** **JKL** for 07:15 am. Change the input position with the control key if necessary.





► Press the key below **Save** on the display screen to confirm your entry.



The display shows **Saved**. You will hear a confirmation tone and the handset will automatically return to idle status.

Display in idle status

Once the phone is registered and the time is set, the idle display is shown as in this example. If the answering machine is activated, the answering machine icon  is displayed in the header.

Displays

◆ Reception between the base and the handset:

- Poor to good: 
- No reception:  flashes

Green: Eco Mode activated (→ page 53)

◆ Charge status of the batteries:

-  (empty to full)
-  flashes **red**: batteries almost empty
-  (charging)


◆ INT 1

Internal name of the handset (→ page 59)

If **Eco Mode+** (→ page 53) is activated, the  icon is displayed in the top left corner of the display.

Your answering machine is set with a pre-recorded announcement.

Your phone is now ready for use!

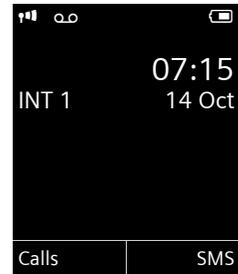

Connecting the headset



After removing the plastic cover, you can connect a headset to the left-hand side of your telephone with the 2.5 mm jack connector.

See the relevant product page at www.gigaset.com for information on recommended headsets.

The headset volume corresponds to the settings for the handset volume (→ page 63).

After using the headset, replace the plastic cover to enable optimum sound in speaker mode.

Connecting the USB data cable

You can connect a standard USB data cable with a mini-B connector to the back of your handset to connect the handset to a PC (→ page 77).

- ▶ Remove the belt clip (if attached) (→ page 13).
- ▶ Remove the battery cover (→ page 12).
- ▶ Connect the USB data cable to USB socket **1**.



What would you like to do next?

Now you have successfully set up your Gigaset, you will certainly want to adapt it to your personal requirements. Use the following guide to quickly locate the most important topics.

If you are unfamiliar with menu-driven devices such as other Gigaset telephones, read the section entitled "Using the phone" (→ page 19) first.

Information on is located here.
Setting the ringtone and volume	▶ page 64
Setting the earpiece volume	▶ page 63
Recording your own announcement for the answering machine	▶ page 46
Setting Eco Mode / Eco Mode+	▶ page 53
Preparing the telephone for SMS reception	▶ page 39
Operating the telephone on a PABX	▶ page 69
Registering existing Gigaset handsets to a base	▶ page 57
Transferring directory entries from existing Gigaset handsets to new handset(s)	▶ page 34
Connecting the phone to the PC	▶ page 77


If you have any questions about using your phone, please read the tips on troubleshooting (→ page 71) or contact our Customer Care team (→ page 71).

Using the phone

Control key

Below, the side of the control key that you must press in the respective operating situation is marked in black (top, bottom, right, left, centre), e.g.,  for "press right on the control key" or  for "press the centre of the control key".

The control key has a number of different functions:

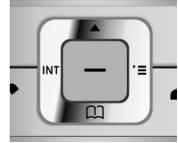

When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume (→ page 63).

In the main menu

- , ,  or  Navigate to the required function.

In submenus and lists

-  /  Scroll up/down line by line.

In input fields

Use the control key to move the cursor up , down , right  or left . Press and **hold**  or  to move the cursor **word by word**.

During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and speaker mode.

Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.


- ◆ **In idle status** the key opens the main menu.
- ◆ **In submenus, selection and input fields**, the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

Please note

These instructions demonstrate the main menu being opened by pressing the right of the control key and functions being actuated by pressing the appropriate display key. However, if you prefer, you can use the control key as described above.

Display keys

The functions of the display keys change depending on the particular operating situation. Example:

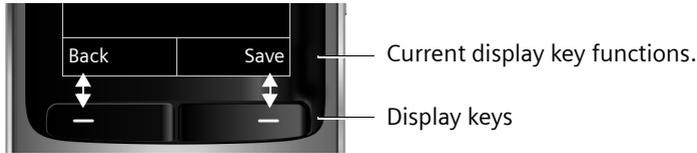

Some important display keys:

Options	Open a menu for further functions.
OK	Confirm selection.
< C	Delete key: delete character by character/word by word from right to left.
Back	Go back one menu level or cancel operation.
Save	Store entry.
→→	Open the redial list.
→ 00	Forwarding a call to the answering machine.

Keys on the keypad

 /  /  etc.
Press the matching key on the handset.


Enter digits or letters.

Side keys

 /  Press the keys on the right of the handset to set the volume for the **handset, ringtone, speaker, alarm**, signalling of **appointments** and the **headset** depending on the situation.

Correcting incorrect entries

You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Delete the **character** to the left of the cursor with the display key **< C** (**press and hold** to delete the **word**)
- ◆ Insert characters at the cursor position
- ◆ Overwrite the highlighted (flashing) character, e.g., when entering time and date.

Using the menus

Your telephone's functions are accessed using a menu that has a number of levels.

The menu display can be extended (**expert mode** ) or restricted (**standard mode**). Expert mode is the active default setting.

Settings or functions that are only available in expert mode are marked in these instructions by the  icon.

Switching between standard mode/expert mode and the menu overview (→ page 25).

Main menu (first menu level)


- ▶ When the handset is in idle status press the **right** control key  to open the main menu.

The main menu functions are shown in the display with icons. The icon for the selected function is highlighted in orange and the name of the associated function appears in the display header.

To access a function, i.e., to open the corresponding submenu (next menu level):

- ▶ Use the control key  to select the required function and press the display key **OK**.

Briefly press the display key **Back** or the end call key  to revert back to idle status.

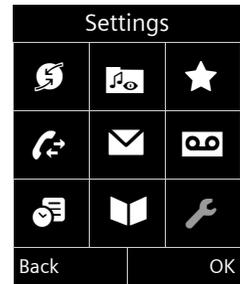


Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.

Briefly press the display key **Back** or the end call key  to return to the previous menu level/cancel the operation.

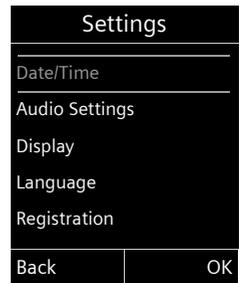

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display keys **OK**, **Yes**, **Save** or **Change** are lost.

An example of the display in idle status is shown on page 16.

Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.

Press and **hold** the end call key again to switch the handset on.

Please note

When the handset is switched on, an animation showing the **Gigaset** logo is displayed for several seconds.

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

If the keypad lock is activated, you will see a message when you press a key.

The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note

When the keypad lock is active, you cannot even call emergency numbers.

Using this guide

The operating steps are shown in abbreviated form.

Example:

The illustration:

 →  → **Eco Mode** → **Eco Mode+** (= on)

means:



- ▶ Press **right** on the control key  to open the main menu.



- ▶ Press right, left, down and up on control key  to navigate to the **Settings** submenu.

- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the **Eco Mode** menu option appears on the display.

- ▶ Press the display key **OK** to confirm your selection.



▶ Press down on the control key  until the **Eco Mode+** menu option appears on the display.

▶ Press the display key **Change** to activate/deactivate the function.



The change is effective immediately and does not need to be confirmed.

▶ Press the key below **Back** on the display screen to jump back to the previous menu level.

or

Press and **hold** the end call key  to return to idle status.

Menu overview

Setting standard mode or expert mode

The menu display can be extended (**expert mode** ) or restricted (**standard mode**). Menu options that are only available in expert mode are marked with the  icon.

To change these settings:

Select  →  → **Menu View** → **Simplified** (standard mode) or **Complete** (expert mode) → **Select** (the active mode is marked with )

Open the main menu: press  when the phone is in idle mode.

Select Services

Withhold Number	→ page 30
All Calls	Call Divert → page 31
	Call Waiting → page 30
Ringback Off	→ page 30

Resource Directory

Screensavers	→ page 65
Caller Pictures	→ page 65
Sounds	→ page 65
Capacity	→ page 65

Additional Features

Room Monitor	→ page 60
--------------	-----------

Call Lists

All Calls	→ page 36
Outgoing Calls	→ page 36
Accepted Calls	→ page 36
Missed Calls	→ page 36

 **SMS**

You have activated an SMS mailbox (general or private) without a PIN

New SMS	→ page 39
Incoming	→ page 41
Draft	→ page 40

You have activated an SMS mailbox with a PIN or 2–3 mailboxes

Mailbox	New SMS	→ page 39
	Incoming	→ page 41
	Draft	→ page 40
Mailbox 1 Mailbox 2 Mailbox 3	New SMS	→ page 39
	Incoming	→ page 41
	Draft	→ page 40
 Settings	Service Centres	→ page 44
	SMS Mailboxes	→ page 42
	Notification	→ page 42

 **Voice Mail**

Play Messages	Network Mailbox	→ page 52
	Answering Machine *	→ page 46
Activation *	→ page 46	
Announcements *	Rec. Announcement *	→ page 46
	Play Announcement *	→ page 46
	Del. Announcement *	→ page 46
	 Rec. Advisory Msg. *	→ page 46
	 Play Advisory Msg. *	→ page 47
 Del. Advisory Msg. *	→ page 47	
 Recordings *	→ page 49	
 Call Screening *	→ page 49	
 Network Mailbox **	→ page 52	
 Set Key 1 *	Network Mailbox	→ page 52
	Answering Machine	→ page 52

* Base with answering machine only

** Base without answering machine only

 **Organizer**

Calendar	→ page 54
Alarm Clock	→ page 56
Missed Alarms	→ page 55

 **Directory**

→ page 32

 **Settings**

Date/Time	→ page 15
Audio Settings	Handset Volume → page 63
	 Advisory Tones → page 66
	Ringtones(Handset) → page 64
	Ringtones (Base) → page 67
	 Music on hold → page 67
Display	Screensaver → page 62
	Large Font → page 63
	Colour Schemes → page 63
	 Backlight → page 63
Language	→ page 62
Registration	Register Handset → page 57
	De-reg. Handset → page 57
	Select Base → page 58
 Telephony	Auto Answer → page 63
	Area Codes → page 66
	Listening In → page 59
	Preselection → page 38
	Access Code → page 69
	Dialling Mode → page 69
	Recall → page 69
 System	Handset Reset → page 66
	Base Reset → page 68
	Repeater Mode → page 67
	System PIN → page 68
Menu View	Simplified → page 25
	Complete → page 25
Eco Mode	Eco Mode → page 53
	Eco Mode+ → page 53

Making calls

If the backlight is deactivated (→ page 63) it is switched on by pressing any key. In this case the pressed key has no other function.

Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

or:

  Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

Please note

Dialling with the directory (→ page 32), call list (→ page 36), redial list (→ page 35) and automatic redial (→ page 35) saves you from repeatedly keying in phone numbers.

Ending a call

 Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key .

Accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the speaker key .
- ▶ Gigaset S790: press the display key **Accept**.
- ▶ Gigaset S795: press the display key  to divert the call to the answering machine (→ page 49).

If the handset is in the base/charger and the **Auto Answer** function is activated (→ page 63), the handset automatically answers the call when you remove it from the base/charger.

To deactivate the ringtone, press the **Silence** display key. You can accept the call as long as it is displayed on the screen.


Calling Line Identification

When you receive a call, the caller's number is displayed on the screen if the following conditions are met:


- ◆ Your network provider supports CLIP, CLI.
 - CLI (Calling Line Identification): the caller's number is transmitted.
 - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
- ◆ You have requested CLIP from your network provider.
- ◆ The caller has requested CLI from the network provider.

Call display with CLIP/CLI

If the number of the caller is saved in your directory, you will see their name, and if you have assigned a caller picture to that caller, this will also be displayed.

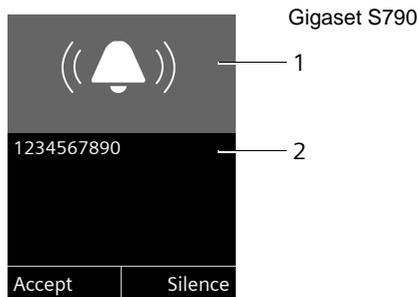

or

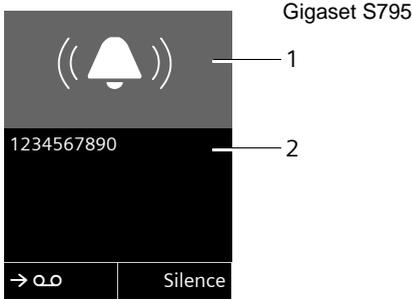

- 1 Ringtone icon
- 2 Number or name of caller

The following is displayed in place of the number:

- ◆ **External**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification (→ page 30).
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Please note

The ringtone can be switched off for unknown calls (calls with Calling Line Identification withheld) (→ page 64).

Speaker mode

In speaker mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

Activating/deactivating speaker mode

Activating while dialling



Enter the number and press the speaker key.

- ▶ Inform your caller before you use the speaker function so that the caller knows a third party may be listening.

Switching between earpiece and speaker mode



Press the speaker key.

During a call and when listening to the answering machine (Gigaset S795 only), activate or deactivate speaker mode.

If you wish to place the handset in the base/charger during a call:

- ▶ Press and hold the speaker key  while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the speaker volume (→ page 63).

Please note

If you have a headset connected, you can switch between the headset and speaker mode.

Switching to mute

You can deactivate the microphone in your handset during an external call.



Press key to mute the handset. The display shows **Microphone is off**. Press the key again to reactivate the microphone.

Please note

- ◆ If the telephone is muted, all keys except the mute key  and the end-call key  will not work.
- ◆ A connected headset will also be muted.

Making calls using network services

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ It is not possible to reprogram the network services.
- ▶ If you require assistance, please contact your network provider.

Calling Line Identification

Withhold Calling Line Identification once (CLIR):

If you make a call, your number is shown in the display of the call recipient if that person has activated CLIP (→ page 28).

If, in certain instances, you do not wish to have your number displayed, you can withhold your number for the next call (CLIR).

 →  → **Withhold Number**

 Enter phone number.

 Press the talk key.

Ringback

Initiating ringback

If the number you have called is engaged, you can initiate ringback. As soon as the line belonging to the person you called is free, your handset will ring.

You hear the busy tone.

Options → **Ringback**

 Press the end call key.

Cancelling ringback

You can cancel a ringback that has already been initiated.

 →  → **Ringback Off**

Call waiting during an external call

If the function is activated, during an **external** call you will hear a call waiting tone to signal that another external caller is trying to get through. If you have CLIP (→ page 28), the number of the waiting caller or the corresponding directory entry is shown in the display.

Activating/deactivating call waiting

 →  → **All Calls** → **Call Waiting**

Status Activate/deactivate.

Dial Press the display key.

Accepting a waiting call

You are making an external call and hear the call waiting tone.

You have the following options:

If CLIP (→ page 28) is **activated**

Accept Press the display key.

If CLIP is **not activated**

Options → **Accept Waiting call**

Once you have accepted the waiting call you can switch between the two callers ("call swap" → page 31).

Call divert (CD)

When diverting a call, the call is forwarded to another connection.

The following options are available:

- ◆ **All Calls:** Calls are diverted immediately. No more calls are signalled on your phone.
- ◆ **No Answer:** Calls are diverted if no one accepts the call within several rings.
- ◆ **When Busy:** Calls are forwarded when your line is busy. Call is diverted without a call waiting tone.

 →  → **All Calls** → **Call Divert**

- ▶ You can enter data in the following fields:

When:

Select **All Calls / When Busy / No Answer**.

Phone Number:

Enter the number to which the call is to be diverted.

Status:

Activate/deactivate call divert.

 **Send** Press the display key.

 After the announcement, press the end call key.

Consultation call, call swap

These functions enable you to:

- ◆ Call a second external caller (consultation call)
- ◆ Switch between two calls (call swap)

Consultation call

You can call a second external caller. The first call is placed on hold.

During an external call:

 **Ext. Call** Press the display key. The previous call is placed on hold. The other participant hears an announcement.

 Enter the second participant's telephone number.

The phone number is dialled. You are connected to the second participant.

If the caller does not answer, select the display key **End** to return to the first participant.

Please note

You can also select the second participant's phone number from the directory or the call list (→ page 34).

Ending a consultation call

 → **End Active Call**

You are reconnected to the first caller.

You can also end the consultation call by pressing the end call key. The connection is briefly interrupted and you will receive a call back. Once you have pressed the talk key, you are reconnected to the first caller.

Call swap

You can speak to both callers one at a time (call swap).

Prerequisite: You are conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

- ▶ Use  to swap between the participants.

The caller you are currently speaking to is marked with the  icon.

Ending the current call.

 → **End Active Call**

You are re-connected to the waiting caller.

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Redial list
- ◆ Incoming SMS message list
- ◆ Call lists
- ◆ List of missed appointments
- ◆ Answering machine list
(Gigaset S795 only)

You can create a personalised directory for your own handset. You can also send lists/entries to other handsets (→ page 34).

Directory

You can save up to 500 entries in the directory.

Please note

To quickly access a number from the directory (quick dial), you can assign the number to a key (→ page 61).

Directory

In the **directory**, you can save:

- ◆ Up to three numbers and associated first names and surnames
- ◆ E-mail addresses
- ◆ Anniversaries with reminder
- ◆ VIP ringtone with VIP icon
- ◆ Caller pictures.

You open the directory in idle status using the  key.

Length of the entries

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 64 characters

Saving a number in the directory

 → <New Entry>

- ▶ You can enter data in the following fields:

First Name:/Surname:

Enter first names and/or surnames.

If you do not enter a name in either of the fields, the phone number is saved and displayed in place of a surname. (For instructions on entering text and special characters, please see

→ page 76.)

Phone (Home): / Phone (Office): /

Phone (Mobile):

Enter a number in at least one of the fields.

When scrolling through the directory, the entries are highlighted by a prefixed symbol:  /  / .

E-mail:

Enter the e-mail address.

Anniversary:

Select **On** or **Off**.

With setting **On**:

Enter **Annivers. (Date)** and **Anniversary (time)** and select reminder type:

Anniversary (tone) → page 34.

Caller Picture:

If required, select a picture to be displayed when this person calls (see "Resource Directory", page 65).

Prerequisite: Calling Line Identification (CLIP).

Caller Melody (VIP):

Mark a directory entry as a **VIP** (Very Important Person) by assigning a specific ringtone to it. VIP calls are recognised by the ringtone.

When scrolling through the directory, VIP entries are highlighted by the

 icon.

Prerequisite: Calling Line Identification (CLIP).

Save

Press the display key.

Order of directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

Select a directory entry

 Open the directory.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name (max. 8), if necessary scroll to the entry with the  key.

The directory searches for the surname. If a surname has not been entered, the directory searches for the first name.

Select from the directory

 →  (Select entry)

 Press the talk key.
(If several numbers are entered, select the required number by pressing  and press the talk key  again).
The number is dialled.

Managing directory entries

Viewing entries

 →  (Select entry)

View Press the display key.
The entry is displayed.

Options Press the display key.

The following functions can be selected with :

Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 34).

vCard via SMS: Send a single entry in vCard format via SMS.

Editing entries

 →  (Select entry)

View Edit Press display keys one after the other.

▶ Carry out changes and save.

Using other functions

 →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

Display Number

Edit or add to a saved number and then dial with  or save as a new entry; to do so, press  after the number is displayed.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

Using the directory and lists

Copy Entry

to **Internal**: Send a single entry to a handset (→ page 34).

vCard via **SMS**: Send a single entry in vCard format via SMS.

Delete All

Delete **all** entries in the directory.

Copy All

to **Internal**: Send the complete list to a handset (→ page 34).

Available Memory

Display the number of entries that are still available in the directory (→ page 32).

Using quick dial keys

- ▶ Press and **hold** the required quick dial key (→ page 61).

Transferring the directory to another handset

Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

 →  (Select entry)
→ **Options** (Open menu) → **Copy Entry / Copy All** → to **Internal**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied - Copy next entry?** prompt with **Yes**.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ Pictures and sounds assigned to entries are not transferred.

Copying the displayed number to the directory

You can copy numbers displayed in a list, e.g., the call list or the redial list, or in an SMS, to the directory.

A number is displayed:

Options → **Copy to Directory**

- ▶ Complete the entry (→ page 32).

Gigaset S795: Message playback is interrupted during the number transfer from the answering machine list.

Copying a number or e-mail address from the directory

In some operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.

- ▶ Depending on the operating situation, open the directory with  or .

 Select entry (→ page 33).

Storing an anniversary in the directory

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: **Anniversary: Off**).

 →  (Select entry)

View **Edit** Press display keys one after the other.

 Scroll to the **Anniversary** line.

 Select **On**.

- ▶ You can enter data in the following fields:

Annivers. (Date)

Enter day/month/year in 8-digit format.

Anniversary (time)

Enter the hour/minute for the reminder call in 4-digit format.

Anniversary (tone)

Select the reminder type.

Save Press the display key.

Please note

A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

Deactivating anniversaries

 →  (Select entry)

View **Edit** Press display keys one after the other.

 Scroll to the **Anniversary** line.

 Select **Off**.

Save Press the display key.

Reminder call on an anniversary

In idle status, a reminder call is indicated on the handset display and by the selected ringtone and volume that has been set for internal calls (→ page 64).



You can:

SMS Write an SMS.

Off Press the display key to acknowledge and end the reminder call.

During the reminder call, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).

When you are on the phone, a reminder call is indicated on the handset with a **single** advisory tone.

Anniversaries that are indicated during a call and are not acknowledged are entered in the **Missed Alarms** list (→ page 37).

Redial list

The redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If one of the numbers is in the directory, the corresponding name is displayed.

Manual redial

 Press the key **briefly**.

 Select entry.

 Press the talk key again. The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the redial list

 Press the key **briefly**.

 Select entry.

Options Open menu.

The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 32).

Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The speaker key flashes and "open listening" is activated.

– Party answers:

Press the talk key . The function is ended.

Using the directory and lists

- Party does not answer:
The call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts.

Display Number (as in the directory, page 33)

Delete Entry (as in the directory, page 33)

Delete All (as in the directory, page 34)

Incoming SMS message list

All received SMS messages are saved in the incoming message list (→ page 40).

Answering machine list (Gigaset S795 only)

You can use the **answering machine list** to listen to the messages that are on the answering machine.

Call lists

Prerequisite: Calling Line Identification (CLIP, page 28)

Your telephone stores various types of calls:

- ◆ Answered calls
- ◆ Outgoing calls
- ◆ Missed calls
- ◆ Calls recorded by the answering machine (Gigaset S795 only)

You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category.

When in idle status, open the call lists by selecting the **Calls** display key or via the menu:



List entry

New messages are displayed at the top.

Example of list entries:

All Calls	
 Frank	14.10.09, 15:40
 089563795	14.10.09, 15:32
 ...0123727859362922	14.10.09, 15:07
View	Options

- ◆ List type (in header)
- ◆ Status of entry
Bold: New entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 15)
- ◆ Type of entry:
 - Accepted calls ()
 - Missed calls ()
 - Outgoing calls ()
 - Calls recorded by the answering machine ( , Gigaset S795 only)

Press the talk key  to call the selected caller back.

Press the **View** display key to access additional information, including for example the number linked to the name.

Select the **Options** display key to select the following options:

Copy to Directory

Copy the number to the directory.

Delete Entry

Delete selected entry.

Delete All

Delete all entries.

When you quit the call lists, all entries are set to the status "old", i.e., the next time you call up the list, they will no longer be shown in bold.

Opening lists with the message key

Use the message key  to open the following list selection:

- ◆ Answering machine list (Gigaset S795 only) or network mailbox, if your network provider supports this function and fast access is set for the network mailbox (→ page 52).
- ◆ Incoming SMS message list (→ page 40)
If **multiple** mailboxes are set up (→ page 42), several lists are displayed.
- ◆ List of missed calls
- ◆ List of missed alarms (→ page 37)

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:

Icon	New message...
	... in the answering machine list (Gigaset S795 only) or on the network mailbox
	... in the missed calls list
	... in the SMS list
	... in the Missed Alarms list:

The number of **new** entries is displayed under the corresponding icon.

			
02	10	09	08

Please note

If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

After pressing the message key , you can see all lists containing messages and the network mailbox list.

Lists containing new messages are at the top of the list and are marked in a bold font.

Messages & Calls	
Calls:	(3)
Missed Alarms	(1)
SMS:	(2)
Back	OK

Select a list with . To open, press **OK**.

List of missed alarms

Missed (unacknowledged) appointments from the calendar (→ page 54) and anniversaries (→ page 34) are saved in the **Missed Alarms** list under the following circumstances:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (→ page 35).
- ◆ Open the list by pressing the **message key**  (→ page 37).

Each entry is displayed with:

- ◆ Number or name
- ◆ Date and time

The most recent entry is at the head of the list.

Press the display key **Delete**, to delete the selected entry.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Making cost-effective calls

Make phone calls through a network provider who offers particularly low-cost call rates (call-by-call).

Automatic network provider code (preselection)

You can store a call-by-call number (preselection number), which is **automatically** placed in front of numbers when you dial them.

In the "**With Preselection**" list, specify the access codes or the first digits of the access codes that you wish to assign to the preselection number.

In the "**No Preselection**" list, enter the exceptions to the "**With Preselection**" list.

Example:

Preselection No.	0999
With Preselection	08
No Preselection	081 084

All numbers that start with 08, except for 081 and 084, are dialled with the preselection number 0999.

Phone number	Dialled number
07112345678	→ 07112345678
08912345678	→ 0999 08912345678
08412345678	→ 08412345678

Saving preselection numbers

 →  → Telephony → Preselection
→ Preselection No.

 Enter or change the preselection number (call-by-call number).

Save Press the display key.

Save or change entries in the preselection lists

Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**With Preselection**" list. This means, for example, that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.

 →  → Telephony → Preselection
→ With Preselection / No Preselection

 Select entry.

 Enter or edit the first digits of the number.

Save Press the display key.

Temporarily cancelling preselection

 (press and hold) → **Options**
→ Preselection off →  (dial number)

Permanently deactivating preselection

 →  → Telephony → Preselection
→ Preselection No.

<C Press and **hold** the display key until the preselection number is deleted.

Save Press the display key.

SMS (text messages)

Your phone is delivered ready to send SMS messages immediately.

Prerequisites:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS on the fixed line network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS messages.
- ◆ To receive SMS messages, you must be registered with your service provider. This occurs automatically when you send your first SMS.

Please note

If your phone is connected to a PABX, please read → page 44.

Writing/sending an SMS

Writing an SMS



Mailbox 2 Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

New SMS Select and press **OK**.



Write an SMS.

Please note

- ◆ For instructions on entering text and special characters, please see page 76.
- ◆ An SMS may contain up to 612 characters. If there are more than 160 characters, the SMS is sent as a **linked SMS** (up to 4 SMS messages with 153 characters each). The top right of the display shows how many characters are still available and which part of a linked SMS is currently being written.

Sending an SMS



Press the talk key

or:



Press the display key.



Select and press **OK**.



Select and press **OK**.



Select number with access code (even if you are in that area) from the directory or enter directly. For sending SMS messages to an SMS mailbox: add the mailbox ID to the **end** of the number.



Press the display key. The SMS is sent.

Please note

- ◆ If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft SMS list.
- ◆ If the memory is full, or if the SMS function on the base is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

SMS (text messages)

Draft SMS list

You can save an SMS in the draft SMS list, and edit and send it later.

Saving an SMS in the draft SMS list

► You are writing an SMS (→ page 39).


Options Press the display key.

Save Entry Select and press **OK**.

Opening the draft message list

 →  → , if necessary 
(mailbox, mailbox PIN), → **Draft**

The first entry in the list is displayed, e.g.:



If the entry has been saved with the phone number, i.e., when the SMS was saved from the incoming message list, the number is displayed in the first line.

Reading or deleting SMS messages

► Open the draft message list and then:

 Select SMS.

Read Press the display key. The text is displayed. Scroll line by line using .

or delete the SMS with

Options → **Delete Entry** → **OK**.

Writing/editing an SMS

► You are reading an SMS in the draft SMS list.

Options Open menu.

You have the following options:

Copy

Send stored SMS.

Edit

Edit the text of the saved SMS and then send it (→ page 39).

Character Set

Display text in the selected character set.

Deleting draft SMS list

► Open the draft message list and then:

Options Open menu.

Delete All Select, press **OK** and confirm with **Yes**. The list is deleted.

Receiving an SMS

All received SMS messages are saved in the incoming SMS list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, **regularly delete SMS messages from the list**.

The display tells you if the SMS memory is full.

Activating/deactivating first ringtone muting

Each incoming SMS is signalled by a single ring (ringtone as for external calls). If you accept such a "call", the SMS is lost. To prevent this ring, suppress the first ringtone for all external calls.

 Open the main menu.

       
Press keys.

 **OK** Make the first ringtone audible.

or:

 **OK** Mute the first ringtone.

Incoming message list

The incoming message list contains:

- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset S79H handsets by the  icon on the display, the flashing message key  and an advisory tone.

Opening the incoming message list with the key

 Press.

The incoming message list is indicated by the mailbox name and the number of entries (example):

SMS: (2)

Bold: new entries

Normal font: old entries

If necessary select a mailbox and open list by selecting **OK** (enter mailbox PIN if required and confirm by pressing **OK**).

The number and date of receipt are displayed in the entry list.

0123727859362922
14.10.09 09:07

Opening the incoming message list via the SMS menu

 →  → (If necessary, select mailbox, enter mailbox PIN) → **Incoming**

Deleting the incoming message list

All **new and old** SMS messages in the list are deleted.

▶ Open the incoming message list.

Options Open menu.

Delete All Select, press **OK** and confirm with **Yes**. The list is deleted.

Reading or deleting SMS messages

▶ Open the incoming message list, then:

 Select SMS.

Read Press the display key. The text is displayed. Scroll line by line using .

or delete the SMS with

Options → **Delete Entry** → **OK**.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

Changing the character set

▶ Read the SMS

Options Press the display key.

Character Set

Text is shown in the selected character set.

Replying to or forwarding SMS messages

▶ Read the SMS

Options Press the display key.

You have the following options:

Reply

Write and send a new SMS in reply to the sender (→ page 39).

Edit

Edit the text in the SMS and return it to the sender (→ page 39).

Forward

Forward the SMS to another number (→ page 39).

Copying the number to the directory

Copying the sender's number

▶ Open the incoming message list and select the SMS (→ page 40).

Options → **Copy to Directory**

▶ Complete the entry → page 34.

Please note

An attached mailbox identifier is added to the directory.

SMS (text messages)

Copying/dialling numbers from an SMS

- ▶ Read the SMS and scroll to the telephone number.

The digits are highlighted.

 Press the display key.

Complete the entry (→ page 34).

or:

 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the local area code (access code) in the directory.

SMS with vCard

The vCard is an electronic business card. It is displayed by the  icon in the body of the SMS.

A vCard can include:

- ◆ Name
- ◆ Private number
- ◆ Business number
- ◆ Mobile phone number
- ◆ Birthday

Entries in a vCard can be saved to the directory individually.

Opening the vCard

- ▶ Read the SMS containing the vCard.

 Press the display key.
To return to the body of the SMS, press .

 Select number.

 Press the display key.

When you save a number, the directory is opened automatically. The number and name are copied. If a birthday is entered on the vCard, the date is copied to the directory as an anniversary.

- ▶ If necessary, edit the entry in the directory and save it. You will return to the vCard automatically.

Notification via SMS

You can be notified about missed calls or new answering machine messages (Gigaset S795 only) via SMS.

Prerequisite: For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to save the telephone number to which you wish the notification to be sent.

 →  → **Settings** → **Notification**

- ▶ You can enter data in the following fields:

To:

Enter the number to which the SMS should be sent.

On missed call

Select **On** if you require SMS notification.

On message on answer machine

(Gigaset S795 only)

Select **On** if you require SMS notification.

 Press the display key.

Warning

Do **not** enter your own fixed line network number for the notification of missed calls. This can lead to chargeable endless looping.

SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can set up three additional **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).

Please note:

- ◆ If you operate a number of devices (bases) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case, you must also change the preset ID of the general mailbox ("0").
- ◆ Only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (*) to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base's default settings. This will **delete all SMS messages from all mailboxes**.

Setting up and editing a personal mailbox

Setting up a personal mailbox

 →  → **Settings** → **SMS Mailboxes**

 Select mailbox, e.g., **Mailbox 2** and press **Edit**.

- ▶ You can enter data in the following fields:

Activation:

Activate or deactivate mailbox.

Name:

Enter name.

Box ID:

Select mailbox ID (0–9). You can only select the available numbers.

Protection:

Activate/deactivate PIN protection.

SMS PIN

If necessary, enter 4-digit PIN.

Save Press the display key.

Active mailboxes are marked with ✓ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

Deactivating a mailbox

- ▶ Set **Activation** to **Off**. Confirm message with **Yes** if necessary.

All SMS messages saved in this mailbox are deleted.

Deactivating PIN protection

- ▶ Set **Protection** to **Off**.

The mailbox PIN is reset to "0000".

Changing the name of a mailbox

 →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

Edit Press the display key.

 Enter new name.

Save Press the display key.

Changing a mailbox's PIN and ID

 →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

- ▶ Set **Box ID**, **Protection** and **SMS PIN** (→ page 43).

Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

- ▶ You can send your SMS contact an SMS via your personal mailbox.

Along with this SMS, your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centres

SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.

Your SMS messages are sent via the SMS centre that is entered as the active send service centre (→ page 44). Only one

SMS (text messages)

SMS centre can be the active send service centre at any one time.

If no SMS service centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (→ page 43).

Entering/changing SMS centres

- ▶ Find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → **Settings** → **Service Centres**

 Select SMS centre (e.g., **Service Centr.1**) and press **Edit**.

- ▶ You can enter data in the following fields:

Active Send:

Select **Yes** if SMS messages are to be sent via the SMS centre.

SMS Service Centre no.:

Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

Send e-mail to:

Enter the number of the e-mail service.

Save Press the display key.

Please note

Ask your service provider for details on entering service numbers if you wish to use personal mailboxes (prerequisite: your service provider supports this function).

Sending an SMS via another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.

SMS on a PABX

- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded** to the extension of the PABX (CLIP). The CLIP evaluation of the SMS centre number is completed in your **Gigaset**.
- ◆ Depending on your PABX, you may have to add the access code (external line prefix) before the number of the SMS centre.
If in doubt, test your PABX, e.g., by sending an SMS to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case, the recipient cannot reply to you directly.

Sending and receiving SMS messages on **ISDN PABXs** is only possible via the MSN number assigned to your base.

Activating/deactivating SMS function

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings you have made for sending and receiving SMS messages (e.g., the numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after deactivation.

 Open the main menu.

Enter the digits.

  **OK** Deactivate the SMS function.

or:

  **OK** Activate the SMS function (default setting).

SMS troubleshooting

Error codes when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed; see self-help.

Self-help with errors

The following table lists problem situations and possible causes and provides advice on troubleshooting.

<p>You cannot send messages.</p> <ol style="list-style-type: none"> 1. You have not requested the CLIP service (Calling Line Identification Presentation). <ul style="list-style-type: none"> ▶ Ask your service provider to enable this service. 2. SMS transmission has been interrupted (e.g., by a call). <ul style="list-style-type: none"> ▶ Re-send the SMS. 3. The network provider does not support this feature. 4. No number or an invalid number is entered for the SMS centre set as the active send service centre. <ul style="list-style-type: none"> ▶ Enter the number (→ page 43).
<p>You receive an incomplete SMS.</p> <ol style="list-style-type: none"> 1. Your phone's memory is full. <ul style="list-style-type: none"> ▶ Delete old SMS messages (→ page 40). 2. The service provider has not yet sent the rest of the SMS.
<p>You have stopped receiving SMS messages.</p> <ol style="list-style-type: none"> 1. You have changed the ID of your mailbox. <ul style="list-style-type: none"> ▶ Give your SMS contacts your new ID or undo the change (→ page 43). 2. You have not activated your mailbox. <ul style="list-style-type: none"> ▶ Activate your mailbox (→ page 43). 3. Call divert (redirecting) is set to When: All Calls or All Calls is activated for the network mailbox. <ul style="list-style-type: none"> ▶ Change the call divert settings (→ page 31).

The SMS is played back.

1. The "display call number" feature is not activated.
 - ▶ Ask your service provider to activate this function (chargeable).
2. No agreement is in place between your mobile phone operator and your fixed line network SMS service provider.
 - ▶ Obtain information from your fixed line network SMS service provider.
3. Your terminal has been recorded by your SMS provider as having no fixed line network SMS functionality, i.e., you are not registered with the provider.
 - ▶ Send any SMS to automatically register your telephone to receive SMS.

Messages are only received during the day.

- The terminal is recorded in your SMS provider's database as having no fixed line network SMS functionality, i.e., you are not registered with the provider.
- ▶ Obtain information from your fixed line network SMS service provider.
 - ▶ Send any SMS to automatically register your telephone to receive SMS.

Operating the Gigaset S795 base answering machine

You can access the answering machine via the handset, the buttons on the base (→ page 4) or by remote operation (from another phone/mobile phone). You can record your own announcement message or advisory message via the handset.

Answering machine mode

You can use the answering machine in two different modes.

- ◆ In **Answer & record** mode, the caller hears the announcement and can then leave a message.
- ◆ In **Answer only** mode, the caller hears your announcement but cannot leave a message.

Operating via the handset

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the speaker key .

Activating/deactivating and setting the answering machine mode

You can choose between **Answer & record**, **Answer only** and **Alternating**. By using the **Alternating** setting, you can activate answer and record mode for a set period of time, outside this period the caller will only hear the announcement.

 →  → **Activation** (✓ = on)

Edit Press the display key.

- ▶ You can enter data in the following fields:

Activation:

Select **On** or **Off** to activate/deactivate the answering machine.

Mode:

Select **Answer & record**, **Answer only** or **Alternating**.

If **Alternating** mode is selected:

Record from:

Enter hours/minutes for the start of the period in 4-digit format. (The time **must** be set on the phone beforehand.)

Record until:

Enter hours/minutes for the end of the period in 4-digit format.

If **Answer & record** is not set, **Answer only** mode applies.

Save Press the display key.

If the messages memory is full and **Activation: On** has been selected, saving is interrupted and you will receive an instruction to delete old messages.

When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set, an appropriate announcement is made (set time → page 15). The  icon appears in the display. The LED display on the base lights up (→ page 4).

The phone is supplied with pre-recorded announcements for **Answer & record** mode and for **Announce only** mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

Recording personal announcements/ advisory messages

 →  → **Announcements**
→ **Rec. Announcement / Rec. Advisory Msg.**

OK Press the display key to start the recording.

You hear the ready tone (short tone).

- ▶ Now speak your announcement (at least 3 secs.).

End Press the display key to end the recording.

Cancel recording with  or **Back**. Restart the recording with **OK**.

After recording, the announcement is played back for you to check. You can re-record the announcement with **New**.

Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the pre-recorded announcement is used again.
- ◆ If the answering machine's memory is full, it will switch to **Answer only** mode.
 - ▶ Delete old messages and the answering machine will automatically switch back to **Answer & record** mode. Repeat recording if required.

Playing back personal announcements/ advisory messages

 →  → **Announcements**
→ **Play Announcement / Play Advisory Msg.**

If you have not recorded a personal announcement, the relevant pre-recorded announcement is played.

Record a new announcement while playing back the announcement:

New Press the display key.

If the answering machine's memory is full, it will switch to **Answer only** mode.

- ▶ Delete old messages and the answering machine will automatically switch back to **Answer & record** mode. Repeat recording if required.

Deleting personal announcements/ advisory messages

 →  → **Announcements**
→ **Del. Announcement / Del. Advisory Msg.**

Yes Press the display key to confirm the prompt.

Once you have deleted your announcement, the relevant pre-recorded announcement is used again.

Please note

Deleting announcements can take some time.

Playing back messages

The date and time of each message is logged (provided this has been set, → page 15) and displayed during the playback. If Calling Line Identification is activated, the caller's number is displayed. If the caller's number is saved in the directory, their name is displayed.

Playing back new messages

New messages that have not yet been played back are indicated on the display with an icon and number:



The  key on the handset and the display on the base will flash. The number of new messages is displayed on the base.

 Press the message key.

Answer. Mach.:

Select and press **OK**.

If there are new messages, playback then begins with the first new message. After the last new message, you will hear the end tone and an announcement stating how much recording time remains.

If the message has been saved with the date and time, you will hear an appropriate announcement before playback begins.

Playing back old messages

You can listen to old messages if there are no more new messages. Begin playback as described under "Playing back new messages".

After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old".

Stopping and controlling playback

During message playback:

2 ABC Pause playback. Press **2 ABC** again to resume.

or

Options Open menu.

Pause Select and press **OK**.
To continue select **Continue** and press **OK**.

1 ∞ or **1 ∞**

Go to the start of the current message.
Press twice to go back to the previous message.

3 DEF or **3 DEF**

Skip to next message.
Press twice to skip ahead two messages.

If playback is interrupted for over a minute, the answering machine returns to idle status.

Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

During message playback:

*** Δ** Press the star key.

or:

Options Open menu.

Mark as New

Select and press **OK**.

An announcement informs you of the message's new status.

Playback of the current message is cancelled. Playback of next message starts, if applicable.

The **☒** key on the handset flashes.

Copying a phone number from a message to the directory

During playback or pause:

Options → **Copy to Directory**

▶ Complete the entry (→ page 34).

Deleting messages

You can either delete all old messages together or individually.

Deleting all old messages

During playback or pause:

Options → **Delete Old List**

OK Press the display key to confirm the prompt.

Yes Press the display key to confirm the prompt.

Deleting individual old messages

During playback or pause:

Delete Press the display key.

Picking up a call from the answering machine

You can pick up a call while the answering machine is recording or is being operated via remote operation:

☒ / **Accept**

Press the talk or display key.

Recording stops and you can speak to the caller.

If two seconds of the call have already been recorded when you pick it up, the call is displayed as a new message. The **☒** key on the handset flashes.

You can answer the call, even if it is not signalled on the handset.

Diverting an external call to the answering machine

You can divert an incoming external call to the answering machine, even if it is deactivated.

Prerequisite: Sufficient memory space is available on the answering machine.

An external call is signalled on the handset:

→ Select display key.

The answering machine starts immediately in **Answer & record** mode and records the call. The set time for ring delay (→ page 49) is ignored.

Activating/deactivating two-way record

You can record an **external** call with the answering machine.

- ▶ Inform the caller that the call is being recorded.

Options Open menu.

Two-way Record

Select and press **OK**.

Two-way record is indicated on the display by an advisory text and is added to the answering machine list as a new message.

End Press the display key to stop two-way record.

The maximum recording time depends on the memory available on the answering machine. If the memory is full, you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the answering machine list as a new message.

Activating/deactivating call screening

While a message is recording, you can screen calls via the base loudspeaker and registered handsets.

Permanently activating/deactivating call screening

→ → Call Screening
→ Handset / Base (☑ = on)

Change Select display key to activate/deactivate the function.

Call screening can be simultaneously activated on the base and handset.

Deactivating call screening for the current recording

You can deactivate the function for your own handset during the recording.

Silence Press the display key.

Setting the recording parameters

The answering machine has already been preset at the factory. Individual settings can be adjusted using the handset.

→ → Recordings

- ▶ You can enter data in the following fields:

Length:

Select maximum recording time **1 min.**, **2 min.**, **3 min.** or **Maximum**.

Quality:

Select **Long Play** or **High** recording quality. If the quality is higher, the maximum recording time is reduced.

Ring Delay:

Select when the answering machine should accept a call:
Immediately, **after 10 sec.**, **18 sec.**, **30 sec.** or **Automatic**.

Save Press the display key.

Information about ring delay

In **Automatic** mode, the following applies for ring delay:

- ◆ If there are no new messages, the answering machine answers a call after 18 seconds.
- ◆ If there are new messages, the answering machine answers a call after 10 seconds.

When operating remotely (→ page 50), you can tell after approx. 15 seconds that there are no new messages (otherwise the answering machine would have already accepted your call). There are no call charges if you hang up now.

Please note:

You can configure your telephone so that the **first ring is suppressed** on all calls (→ page 40). This means that the time selected for the ring delay predetermines how long the caller must wait before the answering machine accepts the call.

Resetting fast access for the answering machine using key 1

By default, key  has been assigned for fast access to the integrated answering machine. However, if you have set the network mailbox for fast access (→ page 52), you can reset this setting.

 →  → **Set Key 1**

Answering Machine

Select and press **OK**.

Once you have selected the answering machine, press and **hold** key . You are connected directly.

The setting for fast access applies to all registered handsets.

Operating when on the move (remote operation)

You can check and activate your answering machine from any other telephone (hotel, pay phone etc.), or initiate ring-back from the answering machine with an SMS.

Prerequisites:

- ◆ You have set a system PIN other than 0000 (→ page 68).
- ◆ The phone you are using for remote operation has tone dialling (DTMF), i.e., you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

Calling the answering machine and playing back messages



Dial your own number.

When you hear your announcement, press  and enter the system PIN.

You are informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad.

The following keys are used for operation:

-  To return to the start of the current message. Press twice to go back to the previous message.
-  Stop playback. Press again to resume.
-  Go to the next message.
-  Delete current message.

Activating the answering machine

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN".



Enter system PIN.

Your answering machine is activated. It tells you how much memory time is left.

The messages are now played back.

The answering machine cannot be deactivated remotely.

Initiating ringback from the answering machine with SMS and listening to messages

Prerequisite: You must have stored an SMS notification number (→ page 42).

You can use the telephone (mobile phone or any other device with SMS functionality) for which you have stored the SMS notification number in your phone to send an SMS to your answering machine when you are away from home. It will then call you back. The message playback begins when you accept the call and press any digit key.

The SMS must contain the following:

<System PIN><Ringback number>*

The ringback number is optional.

Examples:

4711 or *4711*089123456*

If a ringback number is entered, it is dialled; otherwise the SMS notification number is dialled.

You can now operate the answering machine via the keypad, as described in the previous sections.

Using the network mailbox

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox

With fast access, you can dial the network mailbox or the integrated answering machine (Gigaset S795 only) directly.

Gigaset S790: Fast access is preset for the network mailbox. You only need to enter the number of the network mailbox.

Gigaset S795: The integrated answering machine is preset for fast access. You can configure the network mailbox instead. Ask your network provider about this.

Configuring fast access for the network mailbox and entering the network mailbox number

Gigaset S790:

 →  → **Set Key 1**

Network Mailbox

Select and press **Network Mailbox**
( **Select=** selected).

Gigaset S795:

 →  → **Network Mailbox**

To continue:

 Enter the number for the network mailbox.

Save Press the display key.

The setting for fast access applies to all Gigaset S79H handsets.

Calling the network mailbox

 Press and **hold**. You are connected straight to the network mailbox.

 Press speaker key  if required. You will hear the network mailbox announcement.

Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number is displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number is saved in the missed call list and the message key flashes (→ page 37).

Please note

Enter the network mailbox phone number into your directory along with the designation "Network mailbox"; the display and the call list will then show this designation.

ECO DECT

You are helping to protect the environment with your Gigaset S790/S795.

Reducing energy consumption

By using a power-saving adapter plug, your telephone consumes less power.

Reducing radiation

The radiation from your telephone is reduced **automatically**:

- ◆ The handset's transmission power is reduced depending on the distance to the base.
- ◆ The transmission power on the base is reduced to virtually zero when only one handset is registered and the handset is placed in the base.

You can reduce the radiation from the handset and base even more by using **Eco Mode** or **Eco Mode+**.

- ◆ **Eco Mode** reduces the base's transmission power by 80% in standby and talk mode.
- ◆ **Eco Mode+** reduces the base and handset's transmission power by 100% when the phone is not being used to make or receive a call.

Eco Mode / Eco Mode+ can be activated/deactivated independently of one another and can also be used with multiple handsets. The handset must not be placed in the base.

Activate/deactivate Eco Mode /Eco Mode+:

 →  → **Eco Mode**
→ **Eco Mode / Eco Mode+**

Change Press the display key
( = on).

Status displays

Display icon	
 (flashes)	Signal strength: – good to poor – no signal
 white	Eco Mode deactivated
 green	Eco Mode activated
 white	Eco Mode+ activated (displayed instead of the reception strength icon when in idle status)
 green	Eco Mode and Eco Mode+ activated

Please note

- ◆ With **Eco Mode+** activated, press and **hold** the talk key  to check that the base can be reached. You will hear the dialling tone if the base can be reached.
- ◆ When **Eco Mode+** is activated:
 - Call setup is delayed by approx. two seconds.
 - Handset standby time is reduced by approx. 50%.
- ◆ Registering handsets that do not support **Eco Mode+** will cause the mode to be deactivated on the base and all other handsets.
- ◆ Activating **Eco Mode** reduces the range of the base.
- ◆ **Eco Mode / Eco Mode+** and repeater support (→ page 67) cancel each other out, i.e., if you use a repeater, you cannot use **Eco Mode** or **Eco Mode+**.

Setting an appointment (calendar)

You can use your handset to remind yourself of up to **30 appointments**. Anniversaries (→ page 34) entered in the directory are automatically recorded in the calendar.

Saving an appointment.

Prerequisite: The date and time have already been set (→ page 15).

 →  → **Calendar**



- ◆ The current day is selected (highlighted in white).
- ◆ Days on which appointments have already been saved are highlighted in white.

  Select the required day in the graphical calendar.

The selected day is highlighted in white. The current day is no longer highlighted.

 Press the centre of the control key.

- ◆ If appointments have already been entered, this will open the list of saved appointments on that day. Select **<New Entry>** → **OK** to open the data input window.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.
- ▶ You can enter data in the following fields:

Activation:

Select **On** or **Off**.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digit format.

Text:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and is displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

Signal:

Select the reminder type.

Save

Press the display key.

Please note


If you have already saved thirty appointments, you will have to first delete an existing appointment before adding a new one.

Signalling appointments and anniversaries

An appointment reminder is signalled in idle status for 60 seconds with the selected ringtone at the volume that has been set for internal calls (→ page 64).

During the reminder call, you can permanently change the volume by pressing the side keys **+** (louder) or **-** (quieter).

The name is displayed for anniversaries, while the entered text is displayed for appointments along with the date and time.

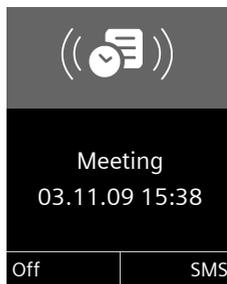

You can either deactivate or answer an appointment reminder:

Off Press the display key to deactivate the appointment reminder.

or:

SMS Press the display key to respond to the appointment reminder with an SMS.

Please note

During a call, the appointment reminder is signalled by a short tone.

Managing appointments

 →  → Calendar

Editing individual appointments

 /  Select a day in the graphical calendar and press the control key . (Days on which appointments have already been saved are highlighted in white in the calendar).

 Select appointment for the day.

You have the following options:

View Press the display key and edit or confirm the entry.

or

Options Open the menu for editing, deleting and activating/deactivating.

Deleting all appointments

Options → Delete all → **OK**

Confirm the security prompt with **Yes**. All appointments are deleted.

Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 34) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (→ page 35).

The icon  and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

Open the list by pressing the **message key**  (→ page 37) or via the **menu**:

 →  → **Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

Delete Delete appointment.

SMS Write an SMS.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting the alarm clock

Prerequisite: The date and time have already been set (→ page 15).

Activating/deactivating and setting the alarm clock

 →  → Alarm Clock

▶ You can enter data in the following fields:

Activation:

Select **On** or **Off**.

Time:

Enter the wake-up time in 4-digit format.

How often:

Select **Daily** or **Monday-Friday**.

Volume:

Set the volume (1–6).

Melody:

Select melody.

Save Press the display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signalled on the display and with the selected ringtone (→ page 3). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

While the wake-up call sounds, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).

During a call, the wake-up call is only signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Prerequisite: A wake-up call is sounding.

OFF Press the display key. The wake-up call is deactivated.

or

Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Using multiple handsets

Registering handsets

You can register up to six handsets to your base.

A Gigaset S79H handset can be registered on up to four bases.

Manually registering a Gigaset S79H to a Gigaset S790/S795

You must activate manual registration of the handset on both the handset (1) and the base (2).

When the registration process has completed successfully, the handset returns to idle status. The handset's internal number is shown in the display e.g., INT 1. If not, repeat the procedure. .

1) On the handset

The handset is not registered to a base.

Register Press the display key.

The handset is already registered to a base:

 →  → **Registration**
→ **Register Handset**

If the handset is already registered to four bases:

 Select base, e.g., **Base 3** and press **OK**.

 If required, enter the system PIN for the base and press **OK**.

A message appears stating that the handset is searching for a base that is ready for registration.

2) On the base

Within 60 seconds press and **hold** the registration/paging key on the base (→ page 4) (approx. 3 seconds).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows. .

1) On the handset

Start to register the handset as described in its user guide.

2) On the base

Press and **hold** the registration/paging key on the base (→ page 4) (approx. 3 sec.).

De-registering handsets

You can de-register any other registered handset from any registered Gigaset S79H handset.

 →  → **Registration**
→ **De-reg. Handset**

 Select the internal subscriber you wish to de-register and press **OK**.
(The handset you are currently using is highlighted with <).)

 Enter the current system PIN and press **Save**.

Yes Press the display key.

Locating a handset ("Paging")

You can locate your handset using the base.

- ▶ **Briefly** press the registration/paging key on the base (→ page 4).
- ▶ All handsets will ring simultaneously ("paging"), even if the ringtones are deactivated.

Ending paging

- ▶ **Briefly** press the registration/paging key on the base or press the talk key  on the handset.

Changing the base

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).

 →  → **Registration** → **Select Base**

 Select one of the registered bases or **Best Base** and press **Select**.

Making internal calls

Internal calls to other handsets registered on the same base are free.

Calling a specific handset

 Initiate internal call.
 Enter the number of the handset.

or:

 Initiate internal call.
 Select handset.
 Press the talk key.

Calling all handsets ("group call")

 Press and **hold**.

or:

 Initiate internal call.
 Press the star key.
or

Call All Select

 Press the talk key.

All handsets are called.

Ending a call

 Press the end call key.

Transferring a call to another handset

You can transfer an external call to another handset (connect).

 Open the list of handsets. The external participant hears music on hold, if activated (→ page 67).

 Select a handset or **Call All** and press **OK**.

When the internal participant answers:

▶ If necessary, announce the external call.

 Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or the line is busy, press the display key **End** to return to the external call.

When transferring a call, you can also press the end call key  before the internal participant answers.

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you.

Internal consultation/conference calls

When you are conducting an **external** call, you can call an **internal** participant at the same time for consultation or hold a conference call between all 3 participants.

You are conducting an **external** call:

 Open the list of handsets. The external participant hears music on hold, if activated (→ page 67).

 Select handset and press **OK**. The internal participant is called.

If the participant picks up, you can **either**:

End Press the display key. You are reconnected with the external participant.

or:

Conference Press the display key. All 3 participants are connected with each other.

Please note

- ◆ If only **two** handsets are registered, the other handset is called **immediately** by pressing the  key.
- ◆ Pressing and **holding** the  key calls **all** handsets **immediately**.

Ending a conference call

Press the end call key.

If an **internal** participant presses the end call key , the other handset remains connected to the external participant.

Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). With Calling Line Identification, the caller's number will appear in the display.

Ending an internal call, accepting an external call

Accept Press the display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting the external call

Reject Press the display key.

The call waiting tone is turned off. You remain connected to the internal participant. The ringtone can still be heard on other registered handsets.

Listening in to an external call

Prerequisite: The **Listening In** function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of additional listeners by a signal tone.

 Activating/deactivating listening in

 →  → **Telephony** → **Listening In**

Press **Change** to activate/deactivate the function ( = on).

Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. To listen in to the external call.



Press and **hold** the talk key.

You can listen in to the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

Ending listening in

Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has "listened in" remains connected to the external participant.

Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically on registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.



Open the list of handsets. Your own handset is indicated by .



Select handset.

Options

Open menu.

Rename



Enter name.

Save

Press the display key.

Changing a handset's internal number

A handset is **automatically** assigned the lowest free number when it is registered. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1–6).

 Open the list of handsets. Your own handset is indicated by ◀.

Options Open menu.

Assign Handset No.

Select and press **OK**.

 Select number. Only numbers that have not been assigned are displayed.

Save Press the display key to save the input.

Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The room monitor call to an external number is terminated after approximately 90 seconds. The room monitor call to an internal number (handset) is terminated after approximately 3 minutes (depending on the base). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor remains activated.

Warning!

- ◆ **Always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an external number.**
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the base/charger. This ensures that the battery does not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the destination number

 → ★ → **Room Monitor**

- ▶ You can enter data in the following fields:

Activation:

Select **On** to activate.

Alarm to:

Select **Internal** or **External**.

External number: Select the number from the directory (press display key ) or enter it manually.

Internal number: Select display key **Change** → . Select handset or **Call All** to call all registered handsets → **OK**.

In idle status, the destination number or the internal destination number is displayed.

Sensitivity:

Select noise level sensitivity (Low or High).

- ▶ Press **Save** to save the settings.

When the room monitor function is activated, the idle display appears as shown below:



Changing the set destination number

☰ → ★ → Room Monitor

- ▶ Enter and save number as described in "Activating the room monitor and entering the destination number" (→ page 60).

Cancel/deactivate room monitor

Press the end call key **☎** to cancel the call when the **room monitor is activated**.

In **idle status**, press the display key **OFF** to deactivate room monitor mode.

Deactivating the room monitor remotely

Prerequisites: The phone must support tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys **☎** **#**.

The room monitor function will deactivate after the call ends. There are no further room monitor calls. The other room moni-

tor settings on the handset (e.g., no ring-tone) will remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 60).

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Quick access to numbers and functions

You can assign a **number from the directory** to each of the **digit keys** **0+** and **2 ABC** to **9 wxyz**.

The left and right **display keys** have a default **function**. You can change the assignment (→ page 62).

The number is then dialled or the function started by simply pressing a key.

Assigning digit keys

Prerequisite: You have not yet assigned a number to the digit key.

- ▶ Press and **hold** the digit key **or** Press the digit key **briefly** and press the display key **QuickDial**.

The directory opens.

- ▶ Select an entry and press **OK**.

The entry is saved to the corresponding digit key.

Please note

If you delete or edit the entry in the directory at a later date, this will not affect the assignment to the number key.

Selecting numbers/changing an assignment

Prerequisite: The digit key already has a number assigned to it.

When the handset is in idle status

- ▶ Press and **hold** the digit key:
The number is dialled immediately.

or

- ▶ **Briefly** press the digit key.
Press the display key with the number/name (abbreviated if necessary) to select the number **or** press the display key **Change** to change the assignment or to delete the assignment.

Changing display key assignments

- ▶ Press and **hold** the left or right side of the display key.

The list of possible key assignments is opened. The following can be selected:

Room Monitor

Assign menu for setting and activating the room monitor to a key (→ page 60).

Alarm Clock

Assign menu for setting and activating the alarm clock to a key (→ page 56).

Calendar

Display graphical calendar (→ page 54).

Redial

Display the redial list.

More Functions...

More features are available:

Call Lists

Display call lists (→ page 36).

INT

Internal calls (→ page 58).

SMS

Assign menu for SMS functions to a key (→ page 39).

Withhold Number

Withhold Calling Line Identification for the next call (→ page 30).

- ▶ Select an entry and press **OK**.

Changing the display language

You can view the display texts in different languages.

 →  → **Language**

The current language is indicated by a .

 Select language and press **Select**.

If you accidentally choose a language you do not understand:

 →  →  →  → 

Press keys in sequence and confirm by selecting **OK**.

 Select the correct language and press the **right display key**.

Setting the display

Setting the screensaver

You can set a picture from the **Resource Directory** (→ page 65) or the time to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the calendar, date, time and name.

The screensaver is not displayed in certain situations, e.g., during a call or if the handset is de-registered.

If a screensaver is activated, the **Screensaver** menu option is marked with .

 →  → **Display** → **Screensaver**

The current setting is displayed.

- ▶ You can enter data in the following fields:

Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).

Selection :

Select screensaver **or**

 Press the display key. The active screensaver is displayed.



Select screensaver and press **OK**.

Save

Press the display key.

If the screensaver conceals the display, briefly press  to show the idle display.

Setting large font

You can increase the font size of print and symbols in call lists and in the directory to improve readability. Only one entry is shown at a time on the display instead of several entries and names are abbreviated if necessary.

 →  → Display → Large Font

Change Press display key ( = on).

Setting the colour scheme

You can set the display to be shown in various colour combinations.

 →  → Display → Colour Schemes

Select **Colour Scheme** (1 to 5) and press **OK**.

Setting the display Backlight

Depending on whether or not the handset is in the base/charger, you can activate or deactivate the backlight. If it is activated, the display is permanently dimmed. If the backlight is deactivated it is switched on by pressing any key. In this case the pressed key has no other function.

 →  → Display → Backlight

The current setting is displayed.

- ▶ You can enter data in the following fields:

In Charger

Select **On** or **Off**.

Out of Charger

Select **On** or **Off**.

Please note

With the **On** setting, the standby time of the handset can be significantly reduced.

Save

Press the display key.

Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the base/charger without having to press the talk key .

 →  → Telephony → Auto Answer

Change Press display key ( = on).

Changing the speaker/earpiece volume

You can set the loudspeaker volume for speaker mode and the earpiece volume to five different levels.

During a conversation via the earpiece or in speaker mode:

 /  Press the side key to call up the **Handset Volume** menu. Change the volume by pressing  (louder) or  (quieter).

or



Press the control key to call up the **Handset Volume** menu. Set the earpiece or speaker volume by pressing .

The setting will automatically be saved after approximately 3 seconds, if not then press the display key **Save**.

If  is assigned to another function, e.g., call swap (→ page 31):

Options Open menu.

Volume Select and press **OK**.

Configure setting (see above).

Please note

- ◆ The settings for the earpiece also apply to a connected headset.
- ◆ You can also set the call volume using the menu (→ page 27).

Changing ringtones

- ◆ **Volume:**
You can choose between five volumes (1–5; e.g., volume 3 =) and the "crescendo" ringtone (6; volume increases with each ring =).
- ◆ **Ringtones:**
You can select a ringtone from a list of pre-loaded melodies.
You can select various ringtones, melodies or any sound from the Resource Directory (→ page 65).

You can set different ringtones for the following functions:

- ◆ Int. Calls
- ◆ Extern. Calls

Setting volume/melodies

In idle status:

→ → **Audio Settings**
→ **Ringtones(Handset)** → **Volume/Melodies**

Setting volume/melodies for internal calls and anniversaries.

Scroll to the next line.

Setting volumes/melodies for external calls.

Save Press the display key to save the setting.

While the phone is ringing, you can permanently change the volume by pressing the side keys **+** (louder) or **-** (quieter).

Additionally for external calls:

You can specify a time period when you do not want the telephone to ring, e.g., during the night.

→ → **Audio Settings**
→ **Ringtones(Handset)** → **Time Control**

Time Control:
Select **On** or **Off**.

If the time control is activated:

Suspend ring. from:

Enter the start of the period in 4-digit format.

Suspend ring. until:

Enter the end of the period in 4-digit format.

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody in the directory (VIP).

Activating/deactivating the ringtone for unknown calls.

You can set your phone not to ring for calls where Calling Line Identification has been withheld. The call will only be signalled on the display.

In idle status:

→ → **Audio Settings**
→ **Ringtones(Handset)** → **Anon. Calls Silent**

Press **Change** to activate or deactivate the function (= on).

Activating/deactivating the ringtone

You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

Deactivating the ringtone permanently

Press and **hold** the star key.
The icon appears in the display.

Reactivating the ringtone

Press and **hold** the star key.

Deactivating the ringtone for the current call

Silence Press the display key.

Activating/deactivating the alert tone

In place of the ringtone, you can activate an alert tone. When you receive a call, you will hear a **short tone** ("Beep") instead of the ringtone.



Press and **hold** the star key and **within 3 seconds**:



Press the display key. A call will now be signalled by **one** short alert tone.

appears in the display.

Resource Directory

The resource directory on the handset manages sounds, which you can use as ringtones, and pictures, which you can use as caller pictures or as screensavers. Prerequisite: Calling Line Identification (CLIP). The resource directory can manage the following media types:

Type	Format
Sound	
Ringtones	Internal
Monophonic	Internal
Polyphonic	Internal
Imported sounds	WMA, MP3, WAV
Picture	BMP, JPG, GIF
– Caller picture	128 x 86 pixels
– Screensaver	128 x 160 pixels

Various mono and polyphonic sounds and pictures are preconfigured on your handset.

You can listen to the available sounds and view the pictures.

You can download pictures and sounds from a PC (→ page 77). If there is not enough memory available, you must first delete one or more pictures or sounds.

Playing back sounds/viewing caller pictures

→ → Screensavers / Caller Pictures / Sounds (select entry)

Pictures:



Press the display key. The selected picture is displayed. Switch between pictures using the key.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.

Sounds:

The selected sound is played back immediately. Switch between the sounds using the key.

You can set the volume during playback.



Open menu.



Select and press **OK**.



Set volume.



Press the display key.

Deleting/renaming a picture/sound

You have selected an entry.



Open menu.

If a picture/sound cannot be deleted (), these options are not available. You can select the following functions:

Delete Entry

The selected entry is deleted.

Rename

Change the name (max. 16 characters) and press **Save**. The entry is stored with the new name.

Checking the memory

You can check how much memory is available for screensavers and caller pictures.



→ → Capacity

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key tone:** every key press is confirmed.
- ◆ **Acknowledge tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in the answering machine list or call list
 - **Error tone** (descending tone sequence): when you make an incorrect entry
 - **Menu end tone:** when scrolling to the end of a menu
- ◆ **Battery low beep:** the battery needs charging.

In idle status:

 →  → **Audio Settings**
→ **Advisory Tones**

▶ You can enter data in the following fields:

Key Tones:
Select **On** or **Off**.

Confirmation:
Select **On** or **Off**.

Battery:
Select **On** or **Off**.

 Press the display key.

Setting your own area code

To transfer phone numbers (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already pre-set.


 →  → **Telephony** → **Area Codes**

Check that the (pre)set area code is correct.

▶ You can enter data in the following fields:

-  Select/change input field.
-  Navigate in the input field.
-  If necessary, delete number: press the display key.
-  Enter number.
-  Press the display key.

Example:

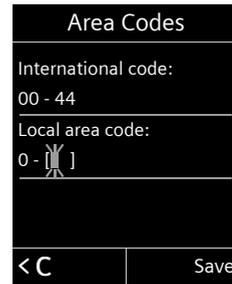

Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset:

- ◆ Registration to the base
- ◆ Date and time
- ◆ Entries in the calendar
- ◆ Entries in the directory, the call lists, the SMS lists and the content of the resource directory

 →  → **System** → **Handset Reset**
 Press the display key.

Setting the base

The base settings are carried out using a registered Gigaset S79H handset.

Changing the base Gigaset S795 ringtones

◆ Volume:

You can choose between five volumes (1–5; e.g., volume 3 =) and the "crescendo" ringtone (6; volume increases with each ring =).

◆ Ringtones:

You can select a ringtone from a list of pre-loaded melodies.

In idle status:

→ → **Audio Settings**
→ **Ringtones (Base)**

▶ You can enter data in the following fields:

Set volume.

Scroll to the next line.

Set melody.

Save Press the display key to save the setting.

Activating/deactivating music on hold

→ → **Audio Settings**
→ **Music on hold**

Press **Change** to activate or deactivate the music on hold (= on).

Repeater support

With a repeater, you can increase the range and signal strength of your base. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Prerequisite: A repeater is registered.

→ → **System** → **Repeater Mode**

Press **Change** to activate or deactivate repeater mode (= on).

Please note

- ◆ Eco Mode / Eco Mode+ (→ page 53) and repeater support cancel each other out, i.e., if you use a repeater, you cannot use Eco Mode or Eco Mode+.
- ◆ Encrypted transmission activated at the factory is deactivated when a repeater is registered.

Protecting against unauthorised access

Protect the system settings of the base with a PIN known only to yourself. The system PIN must be entered when, for example, registering/de-registering a handset to/from the base or when restoring the default settings.

Changing the system PIN

You can change the 4-digit system PIN set on the base (default setting: **0000**) to a 4-digit PIN known only by you.

Gigaset S795: Setting a system PIN facilitates remote operation of the answering machine (→ page 50).

 →  → **System** → **System PIN**

  Enter the current system PIN and press **OK**.

  Enter your new system PIN and press **OK**.

Resetting the system PIN

If you have forgotten your system PIN, you can reset the base to the original code **0000**:

Disconnect the power cable from the base. Hold down the registration/paging key on the base while reconnecting the power cable to the base. Hold down the key for at least 5 seconds.

The base has now been reset and the system PIN set to **0000**.

Please note

All handsets are de-registered and must be re-registered. All settings are reset to the factory settings.

Resetting the base to the factory settings

When the settings are restored:

- ◆ Date and time are retained
- ◆ Handsets are still registered
- ◆ **Eco Mode** is activated and **Eco Mode+** is deactivated,
- ◆ The system PIN is not reset.

 →  → **System** → **Base Reset**

  Enter the system PIN and press **OK**.

Yes Press the display key.

Connecting the base to the PABX

The following settings are only necessary if your PABX requires them; see the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Dialling modes and recall

The current setting is indicated by .

Changing the dialling mode

The following dialling modes can be selected:

- ◆ Tone dialling (DTMF)
- ◆ Pulse dialling (PD)

 →  → **Telephony** → **Dialling Mode**

 Select dialling mode and press **Select** ( = selected).

Setting recall

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.

 →  → **Telephony** → **Recall**

 Select recall and press **Select** ( = set value).

Possible values are:
80 ms, 100 ms, 120 ms,
180 ms, 250 ms, 300 ms,
400 ms, 600 ms, 800 ms.

Saving an access code (outside line code)

Prerequisite: You may have to enter an access code in front of the number for external calls in your PABX, e.g., "0".

 →  → **Telephony** → **Access Code**

 Enter or change access code, max. 3 digits.

Save Press the display key.

If an access code has been saved:

- ◆ The access code is prefixed automatically when you dial a number from the following lists: SMS centre numbers, call lists or answering machine list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers or SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using **<C**.

Setting pauses

Changing the pause after line seizure

You can change the length of the pause that is inserted between pressing the talk key  and sending the number.

 Open the main menu.

Press keys.

 Enter number for the length of the pause (1 = 1 sec.; 2 = 3 secs.; 3 = 7 secs.) and press **OK**.

Change pause after recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).

 Open the main menu.

Press keys.

 Enter a number for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

Changing a dialling pause (pause after access code)

Prerequisite: You have saved an access code (→ page 69).

 Open the main menu.

Press keys.

 Enter number for the length of the pause (1 = 1 sec.; 2 = 2 secs.; 3 = 3 secs.; 4 = 6 secs.) and press **OK**.

To insert a dialling pause: press and hold  for 2 seconds. A P appears in the display.

Switching temporarily to tone dialling (DTMF)

If your PABX still operates with pulse dialling (PD), but you need tone dialling for a connection (e.g., to listen to the network mailbox), you must switch to tone dialling for the call.

Prerequisite: You are conducting a call or have already dialled an external number.

 Press the star key.

After the call ends, pulse dialling is automatically activated again.

Service (Customer Care)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet can be reached any time from anywhere.

www.gigaset.com/customercare

It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.

For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on:

UK helpdesk: 0 84 53 67 08 12.

Please have your proof of purchase ready when calling with regard to guarantee/warranty claims.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Questions and answers

If you have any questions about the use of your phone, you can contact us 24/7 at www.gigaset.com/customercare.

The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
 - ▶ Press and **hold** the end call key .
2. The battery is empty.
 - ▶ Charge the battery or replace it (→ page 12).

Not all menu items are displayed.

The menu display is restricted (**standard mode**).

- ▶ Activate extended menu display (**expert mode** ) (→ page 25).

No Base flashes on the display.

1. The handset is outside the range of the base.
 - ▶ Move the handset closer to the base.
2. The base's range is reduced because Eco Mode is activated.
 - ▶ Deactivate Eco Mode (→ page 53) or reduce the distance between the handset and the base.
3. The base is not switched on.
 - ▶ Check the base power adapter (→ page 10).

Please register handset flashes on the display.

Handset has not been registered with the base or has been deregistered.

- ▶ Register the handset (→ page 57).

Handset does not ring.

1. The ringtone is deactivated.
 - ▶ Activate the ringtone (→ page 64).
2. Call divert set for "All Calls".
 - ▶ Deactivate call divert (→ page 31).
3. The phone only rings if the phone number has been transferred.
 - ▶ Switch on the ringtone for unknown calls (→ page 64).

Service (Customer Care)

You cannot hear a ringtone/dialling tone from the fixed line network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.

- ▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 10).

Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (→ page 68).

Forgotten the system PIN.

- ▶ Reset the system PIN to 0000 (→ page 68).

The other party cannot hear you.

You have pressed the mute button . The handset is "muted".

- ▶ Reactivate the microphone (→ page 29).

The number of the caller is not displayed despite CLIP.

Calling Line Identification is not enabled.

- ▶ **The caller** should ask the network provider to enable Calling Line Identification (CLI).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation.
Watch the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set for pulse dialling.

- ▶ Set your PABX to tone dialling.

The answering machine is not recording any messages/has switched over to answer only.

Its memory is full.

- ▶ Delete old messages.
- ▶ Play back new messages and delete.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colours may vary.

This is completely normal and does not indicate an error.

Authorisation

This device is intended for analogue phone lines in the UK.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

www.gigaset.com/docs

 **0682**

Gigaset S795 only:

No time is specified for a message in the call list.

Date and time have not been set.

- ▶ Set the date and time (→ page 15).

The answering machine announces "PIN is incorrect" during remote operation.

1. You have entered the wrong system PIN.
 - ▶ Enter the system PIN again.
2. The system PIN is still set to 0000.
 - ▶ Set the system PIN to something other than 0000 (→ page 68).

Guarantee Certificate

United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United King-

dom the Guarantee is issued by: Gigaset Communications UK Limited, Faraday House, Sir William Siemens Square, Frimley, Camberley, Surrey, GU16 8QD.

- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Protecting our environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

ISO 14001 (Environment): certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 53) saves energy and makes an active contribution towards protecting the environment.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Appendix

Care

- ▶ Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.
- ▶ Impairments in the high-gloss finish can be carefully removed using display polishes for mobile phones.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Specifications

Batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1,2 V

Capacity: 550 - 1000 mAh

The device is supplied with two approved batteries.

Handset operating times/charging times

This Gigaset can charge batteries up to a capacity of 1000 mAh. The use of special high-performance batteries or batteries with high capacities is not recommended for cordless phones.

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours)*	140/50	165/58	185/67	230/83
Talktime (hours)	11	12	14	17
Operating time for 1.5 hrs of calls per day (hours)**	85	95	110	135
Charging time in base (hours)	7,5	8,5	10	12
Charging time in charger (hours)	6,5	7,5	8,5	10,5

* without/with display backlight

** without display backlight

(Setting the display Backlight → page 63)

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated: www.gigaset.com/customercare

Base power consumption

In standby mode:

Gigaset S790: approx. 1,1 watt

Gigaset S795: approx. 1,2 watt

During the conversation:


Gigaset S790: approx. 1,0 watt

Gigaset S795: approx. 1,1 watt

General specifications

DECT standard	Is supported
GAP standard	Is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	Up to 300 m outdoors, up to 50 m indoors
Base power supply	230 V ~/50 Hz
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/ PD (pulse dialling)

Pin connections on the telephone jack

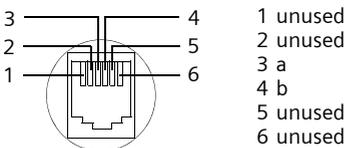

Writing and editing text

The following rules apply when writing text:

- ◆ Each key between **0 +** and **9 wxyz** is assigned several letters and characters.
- ◆ Control the cursor with . Press and **hold** or to move the cursor **word by word**.
- ◆ Characters are inserted at the cursor position.
- ◆ Press the star key *** Δ** to display the table of special characters. Select the required character and press the display key **Insert** to insert the character at the cursor position.
- ◆ Press and **hold** **0 +** to **9 wxyz** to enter digits.
- ◆ Press display key **<C** to delete the **character** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key **# ↔** to change the text input mode.

123	Writing digits
Abc	Upper case *
abc	Lower case

* First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

Writing an SMS/names

- ▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

- ▶ **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 [00]	[] ¹⁾	[] ²⁾	1							
2 [ABC]	a	b	c	2	ä	á	à	â	ã	ç
3 [DEF]	d	e	f	3	ë	é	è	ê		
4 [GHI]	g	h	i	4	ï	í	ì	î		
5 [JKL]	j	k	l	5						
6 [MNÖ]	m	n	o	6	ö	ñ	ó	ò	ô	õ
7 [PQRS]	p	q	r	s	7	ß				
8 [TUV]	t	u	v	8	ü	ú	ù	û		
9 [WXYZ]	w	x	y	z	9	ÿ	ý	æ	ø	å
0 [+]	.	,	?	!	0					

1) Space

2) Line break

Additional functions via the PC interface

To enable your handset to communicate with the PC, the "**Gigaset QuickSync**" program must be installed on your PC (free to download at www.qigaset.com/qigaset790).

After installing "**Gigaset QuickSync**", connect the handset to your computer using a USB data cable (→ page 17).

Transferring data

Start the "**Gigaset QuickSync**" program.

You can now:

- ◆ Synchronise your handset directory with Outlook
- ◆ Download caller pictures (.bmp) from the computer to the handset,
- ◆ Download pictures (.bmp) as a screen-saver from the computer to the handset.
- ◆ Download sounds (ringtones) from the computer to the handset.

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time the keypad is disabled, and incoming calls will be ignored.

Completing a firmware update

- ▶ Connect your phone to your PC using a **USB data cable** (→ page 17).
- ▶ Start the "**Gigaset QuickSync**" program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select **[Settings]** → **[Device properties]** to open the **[Device]** tab.
- ▶ Click on **[Firmware update]**.

This launches the firmware update.

The update process can take up to 10 minutes (not including the download time).

Do not interrupt the process or remove the USB data cable.

The data is initially loaded from the update server on the Internet. The amount of time this takes is dependent on the speed of your Internet connection.

The display on your phone is switched off and the message key  and the talk key  start flashing.

Once the update is complete, your phone will automatically restart.

Procedure in case of an error

If the update procedure fails or your phone does not work properly following the update, repeat the update procedure as follows:

- ▶ Close the "**Gigaset QuickSync**" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 12).
- ▶ Replace the battery.
- ▶ Complete the firmware update as described.

If the update procedure fails several times or you can no longer connect to the PC, proceed as follows:

- ▶ Close the "**Gigaset QuickSync**" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 12).

- ▶ Press and hold keys  and  with the index and middle finger.



- ▶ Replace the battery.
- ▶ Release keys  and . The message key  and the talk key  will flash alternately.
- ▶ Complete the firmware update as described.

Accessories

Gigaset handsets

Upgrade your Gigaset to a cordless PABX:

Gigaset S79H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for approx. 500 entries
- ◆ Caller picture
- ◆ SMS (prerequisite: CLIP must be enabled)
- ◆ PC interface, e.g., for managing directory entries, ringtones and screensavers
- ◆ Headset socket
- ◆ Room monitor

www.gigaset.com/gigasets79h



Gigaset C59H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for approx. 150 entries
- ◆ SMS (prerequisite: CLIP must be enabled)
- ◆ Headset socket
- ◆ Room monitor

www.gigaset.com/gigasetc59h



Accessories

Gigaset SL78H handset

- ◆ Illuminated graphic colour display (256k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for approx. 500 entries
- ◆ Caller picture
- ◆ SMS (prerequisite: CLIP must be enabled)
- ◆ PC interface, e.g., for managing directory entries, ringtones and screensavers
- ◆ Room monitor

www.gigaset.com/gigasetSL78h



Gigaset S67H/S68H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for approx. 250 entries
- ◆ Caller picture
- ◆ SMS (prerequisite: CLIP must be enabled)
- ◆ Headset socket
- ◆ Bluetooth (Gigaset S68H only)
- ◆ Room monitor

www.gigaset.com/gigasetS67h



Gigaset SL37H handset

- ◆ Illuminated graphic colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Speaker mode
- ◆ Polyphonic ringtones
- ◆ Directory for approx. 250 entries
- ◆ Caller picture
- ◆ SMS (prerequisite: CLIP must be enabled)
- ◆ PC interface, e.g., for managing directory entries, ringtones and screensavers
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walky-talky function

www.gigaset.com/gigasetSL37h



Accessories

Gigaset repeater

The Gigaset repeater can be used to increase the reception range between your Gigaset handset and the base.

www.gigaset.com/gigasetrepeater



Gigaset HC450 – door intercom for cordless phones

- ◆ Use the intercom from your cordless phone – no need for a fixed home phone
- ◆ Intuitive user functions using the display keys (open door, switch on entry light)
- ◆ Simple to configure using the handset menu
- ◆ Forward to external phone numbers (intercom feature)
- ◆ Simple to install and register with the Gigaset system
- ◆ Replaces existing call key – no further cable is needed
- ◆ Supports the existing doorbell and standard door opener
- ◆ Configuration options for the second doorbell key (separate intercom call, activating entrance lighting, or function like first doorbell key)

www.gigaset.com/gigasethc450




All accessories and batteries are available from your phone retailer.




Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.


Mounting the base on the wall (Gigaset S790 only)

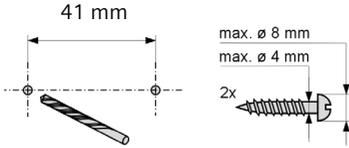

Approx.
5.5 mm

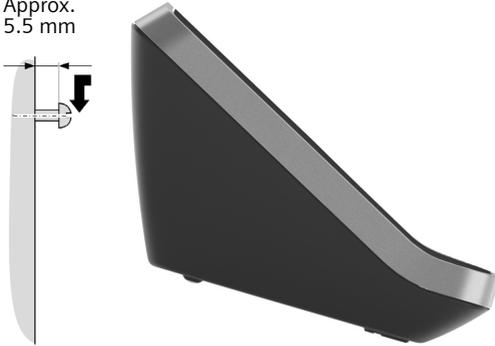

Mounting the charger on the wall

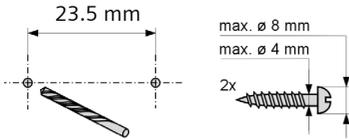

Approx.
4 mm



Index

A

Access code	69
for a PABX	69
Access protection	68
Accessories	79
Acknowledge tones	66
Activating	
advisory tones	66
answering machine	46
answering machine (remote operation)	51
appointment	54
handset	22
keypad lock	22
listening in	59
muting ringtone	40
ring delay	63
room monitor	60
two-way record	49
Advisory tones	66
Alarm clock	56
Alert tone	65
Anniversary	34
deactivating	35
missed	37, 55
saving in the directory	34
Announcement (answering machine) .	47
Anonymous calling	30
Answer only mode (answering machine)	46
Answering machine	46
activating/deactivating	46
deleting messages	48
list	36, 37
playing back messages	47
recording a personal announcement/advisory message	46
remote operation	50
scrolling back	48
scrolling forward	48
Answering machine, see also Network mailbox	54
Appointment	54

Appointment/anniversary display missed	55
Appointments	
activating/deactivating	55
deleting	55
managing	55
Area code	
setting own area code	66
Assigning a number key	61
Authorisation	72
Automatic	
network provider preselection	38
redial	35
ring delay	28, 63

B

Base	
changing	58
connecting	10
connecting to PABX	69
restoring to factory settings	68
setting ringtone	67
setting up	10
settings	67
system PIN	68
Battery	
charging	2, 3, 14
display	2, 3
icon	2, 3
inserting	12
tone	66
Best base	58
Birthday, see Anniversary	

C

Calendar	54
Call	
accepting	28
connect participant	59
ending	28
external	28
internal	58
make anonymous call	30
picking up from answering machine	48
transferring (connecting)	58, 59
two-way record	49

Index

Call divert	31
Call duration	28
Call lists	36
Call screening during recording	49
Call swap	31
Call waiting	
accepting/rejecting	30
activating/deactivating	30
external call	30
internal call	59
Call-by-call	38
Caller Picture	32, 65
Calling	
anonymously	30
external	28
internal	58
Calling Line Identification	28
cancel once	30
Cancelling	
preselection	38
Care of the telephone	75
CD, see Call divert	
Changing	
destination number	
(room monitor)	61
dialling mode	69
display language	62
earpiece volume	63
internal number of a handset	60
name of a handset	59
pauses	70
ringtone	64, 67
speaker volume	63
system PIN	68
Character set	40, 41, 77
Charge status display	2, 3
CLI, CLIP	28
CLIR	30
Colour scheme	63
Conference	
internal	58
Confirmation tone	66
Connecting	
base to PABX	69
headset	17
Consultation call	31
internal	58
Control key	2, 19
Correcting incorrect entries	20
Customer Care	71

D

Deactivating	
advisory tones	66
answering machine	46
appointment	54
handset	22
keypad lock	22
listening in	59
muting ringtone	40
ring delay	63
room monitor	61
two-way record	49
Delete key	20
Deleting	
announcement for answering	
machine	47
characters	20
message	48
De-registering (handset)	57
Destination number (room monitor)	60
Dialling	
using quick dial	34, 61
using the directory	33
Dialling mode	69
Dialling pause	70
Directory	32
copying number from text	34
managing entries	33
opening	19
order of entries	33
saving anniversary	34
saving entry	32
saving sender's (SMS) number	41
sending entry/list to handset	34
using to enter numbers	34
Display	
backlight	63
changing display language	62
colour scheme	63
directory memory	34
in idle status	16, 22
memory (resource directory)	65
missed anniversaries	37
missed appointments/	
anniversaries	55
network mailbox message	52
number (CLI/CLIP)	28
screensaver	62
setting	62

- Display keys 2, 20
 assigning 61
 Disposal 74
 Draft message list (SMS) 40
- E**
- Earpiece volume 63
 ECO DECT 53
 Eco mode 53
 Eco mode+ 53
 E-mail address
 copying from the directory 34
 End call key 2, 28
 Ending, call 28
 Entry
 saving, changing (preselection) 38
 selecting from directory 33
 Environment 74
 Error tone 66
 Expert mode 25, 71
 External call
 call waiting 30
 forwarding to ans. mach. 49
- F**
- Fast access
 answering machine 50
 network mailbox 52
 Firmware update 78
- G**
- General troubleshooting 71
 Group call 58
 Guarantee Certificate 73
- H**
- Handset
 activating/deactivating 22
 advisory tones 66
 changing internal number 60
 changing name 59
 changing the number 60
 changing to a different base 58
 changing to best reception 58
 colour scheme 63
 contact with liquid 75
 de-registering 57
 display backlight 63
 display language 62
 earpiece volume 63
 idle status 22
 large font 63
 list 19
 locating 57
 muting 29
 paging 57
 registering 57
 registering to a different base 58
 restoring to factory settings 66
 screensaver 62
 set up for use 12
 setting 61
 speaker volume 63
 transferring a call 58
 using multiple 57
 using room monitor 60
 Handset mode 29
 Handset operating time
 in room monitor mode 60
 Hash key 2, 22
 Headset socket 17
 Hearing aids 8
 Help 71
- I**
- Icon
 alarm clock 56
 answering machine 46, 49
 for new messages 37
 keypad lock 22
 new message 47
 new SMS 40
 ringtone 64
 Idle status (display) 16, 22
 Idle status, returning to 22
 Incoming message list (SMS) 40
 Incorrect entries (correction) 20
 Installing, base 10
 Internal
 conference 58
 consulting 58
 listening in 59
 making calls 58
 Internal call 58
 call waiting 59

Index

K

- Key
 - assigning to a function or number 61
- Key 1 (fast access) 2, 50
- Keypad lock 22
- Keys
 - control key 2, 19
 - delete key 20
 - display keys 2, 20
 - end call key 2, 28
 - fast access 2, 50
 - hash key 2, 22
 - message key 2
 - mute key 2
 - on/off key 2
 - quick dial 34
 - recall key 2
 - side keys 2
 - speaker key 2
 - star key 2
 - talk key 2, 28

L

- Language, display 62
- Large font 63
- Linking, see SMS
- Liquid 75
- List
 - answering machine 36, 37
 - call lists 36
 - handsets 19
 - missed calls 36
 - network mailbox 37
 - SMS draft message list 40
 - SMS incoming message list 40
 - SMS list 37
- Listening in to a call 59
- Locating, handset 57
- Lock
 - activating/deactivating keypad lock . 22

M

- Mailbox ID, see SMS
- Mailboxes, see SMS
- Making calls
 - accepting a call 28
 - cost-effective calls 38
 - external 28
 - internal 58

- Manual redial 35
- Medical equipment 8
- Memory
 - directory 34
 - resource directory 65
- Menu
 - end tone 66
 - opening 19
 - overview 25
 - using 21
- Menu display
 - expert mode 25, 71
 - standard mode 25, 71
- Message key
 - open list 40
 - opening lists 37
- Messages 46
 - copying the number to the directory 48
 - deleting 48
 - key 2
 - marking as "new" 48
 - new message icon 47
 - playing back 47
- Microphone 2
- Missed
 - anniversary 55
 - appointment 55
- Missed calls 36
- Music on hold 67
- Mute key 2
- Muting
 - first ringtone 40
 - handset 29

N

- Name
 - of a handset 59
- Network mailbox 52
- Network provider preselection,
 - automatic 38
- Network services 30
- Notification via SMS 42
- Number
 - as destination for room monitor . . . 60
 - copying from an SMS text 42
 - copying from directory 34
 - copying to the directory 34
 - displaying caller's number (CLIP) . . 28
 - entering with directory 34

- saving in directory 32
- O**
- On/Off key 2
- Operating remotely 50
- Order in directory 33
- P**
- PABX
 - connecting base 69
 - pauses 70
 - saving access code 69
 - setting dialling mode 69
 - setting recall 69
 - SMS 44
 - switching to tone dialling 70
- Package contents 9
- Paging 57
- Pause
 - after access code 70
 - after line seizure 70
 - after recall key 70
- PC interface 77
- PD (pulse dialling) 69
- Picture
 - Caller 32, 65
 - deleting 65
 - renaming 65
- PIN change
 - system PIN 68
- Pin connections 76
- Playing back
 - announcement (answering machine) 47
 - message (answering machine) 47
- Power adapter 8
- Power consumption 76
- Preselection 38
 - cancelling 38
- Protecting the phone against access . . 68
- Pulse dialling 69
- Q**
- Questions and answers 71
- Quick dial 32, 61
- R**
- Range 10
- Recall 69
- Recall key 2, 70
- Reception booster, see Repeater
- Recording
 - quality 49
 - time 49
 - two-way record 49
- Redial 35
- Redirect, see Call divert
- Registering (handset) 57
- Reminder call 35
- Repeater 67
- Resource directory 65
- Ring delay 49, 63
- Ringback 30
- Ringtone
 - changing 64, 67
 - muting 40
 - setting volume 64, 67
- Ringtone deactivated for unknown call 64
- Room monitor 60
- S**
- Saving (access code) 69
- Screensaver 62
- Search directory 33
- Sending
 - directory entry to handset 34
- Sensitivity (room monitor) 61
- Service 71
- Setting the date 15, 27
- Setting the time 15, 27

Index

Setting up
 handset 12
Side keys 2
Signal tone, see Advisory tones
SMS 39
 active send service centre 43
 changing mailbox 43
 deleting 40, 41
 draft message list 40
 forwarding 41
 incoming message list 40
 linked 39
 list 37
 mailbox ID 42
 mailboxes 42
 notification by SMS 42
 PIN protection 43
 reading 40, 41
 receiving 40
 replying to or forwarding 41
 saving number 41
 self help with error messages 45
 sending to a personal mailbox 43
 to PABXs 44
 troubleshooting 45
 vCard 42
 writing 39, 76
SMS centre
 changing number 44
 setting 43
Snooze mode 56
Sound, see Ringtone
Speaker
 key 2
 mode 29
Special functions 69
Specifications 75
Standard mode 25, 71
Star key 2
System settings 68

T

Talk key 2, 28
Telephone jack, pin connections 76
Text message, see SMS
Tone dialling 69, 70
Troubleshooting (SMS) 45

U

Unknown 29
Unknown caller 29
Update 78
USB connection 17

V

vCard (SMS) 42
Viewing the network mailbox
 message 52
Volume
 earpiece 63
 handset speaker volume 63
 loudspeaker 63
 ringtone 64, 67

W

Warning tone, see Advisory tones
Writing (SMS) 39
Writing and editing text 76